Installing or Replacing Thermal 3 Head Air Filters on a Magnus VLF

graphics.kodak.com

Kodak

719-00776A Rev B

Copyright © 2006 Kodak. All rights reserved.

October 2006

When should you do this procedure?

- Every 6 months as part of preventative maintenance
- Whenever you replace a head

Parts Required


- TH3 Filter kit (order PN332-00027)




1 Turn off the air supply to the device. Open the air filter assembly manifold door, on the away side of the device. The two filter assemblies are on the side of the manifold door.



2 Loosen the two screws that attach the top filter assembly to the manifold. Remove the filter assembly. This is the odour removal filter assembly.

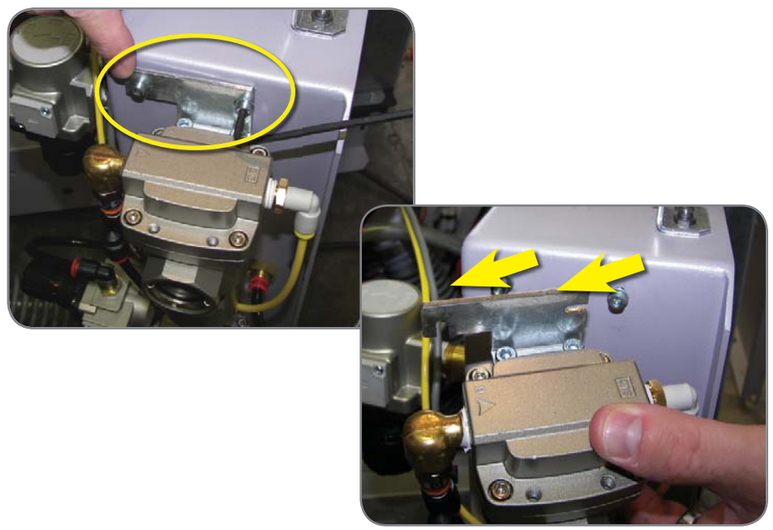


3 Unscrew the top four screws on the top of the assembly.

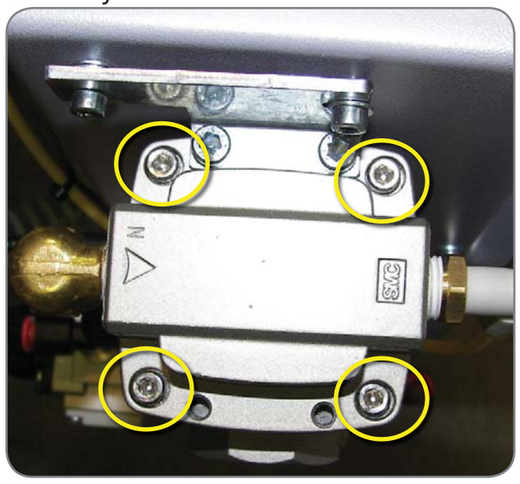

4 Remove and dispose of the filter, O-ring, and gasket.



Remove the O-ring

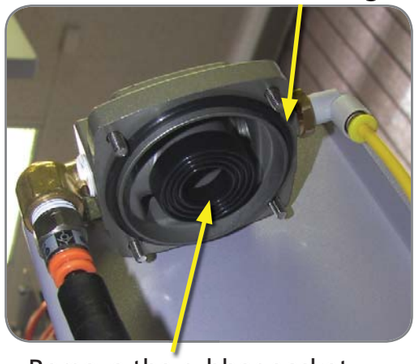

Remove the rubber gasket


5 Install the new filter, O-ring and gasket.

Re-attach the top of the assembly and tighten the four screws snugly.

Note: Do not reattach the odour removal filter assembly to the manifold yet. You still need to access to the second filter assembly (micromist filter).


Replace the micromist filter, gasket, and O-ring

1. Unscrew the top four screws on the micromist filter.

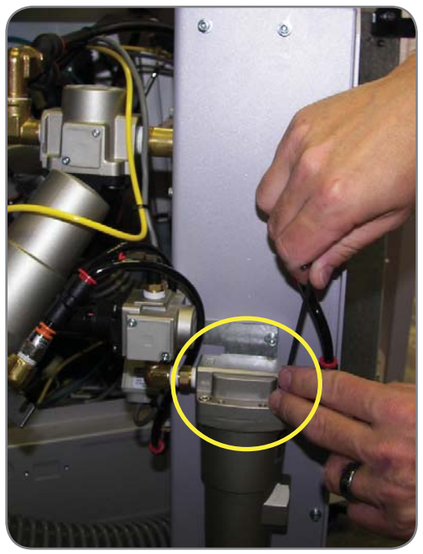

2. Remove and dispose of the filter, O-ring, and rubber gasket.




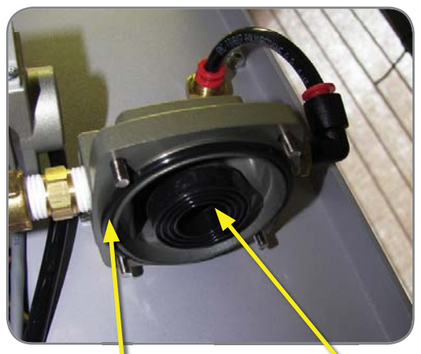

3. Install the new filter, O-ring and gasket.

   Re-attach the top of the assembly and tighten the four screws snugly.

4. Re-install the odour removal filter assembly and tighten the two top screws.

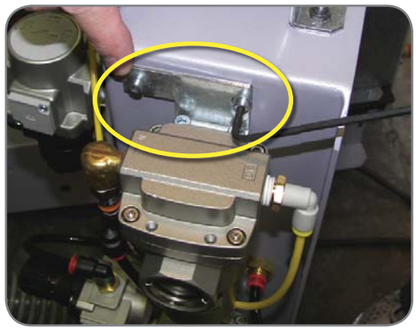

5. Close the air filter assembly manifold door and turn on the air supply to the device.

6. Ensure that there are no air leaks.