

Flexcel NX Laminator

Unpacking Instructions
English

653-01559A-EN Rev A
Internal 719-01050A-EN Rev A

Copyright

© Kodak, 2008. All rights reserved.

Kodak, Creo, and Flexcel are trademarks of Kodak.

Acrobat, Adobe, Distiller, Illustrator, PageMaker, Photoshop, and PostScript are trademarks of Adobe Systems Incorporated.

Apple, AppleShare, AppleTalk, iMac, ImageWriter, LaserWriter, Mac OS, Power Macintosh, and TrueType are registered trademarks of Apple Computer, Inc. Macintosh is a trademark of Apple Computer, Inc., registered in the U.S.A. and other countries.

Hexachrome, PANTONE, PANTONE Goe, PANTONE Hexachrome, and PANTONE MATCHING SYSTEM are the property of Pantone, Inc.

PEARL, PEARLdry, PEARLgold, PEARLhdp, and PEARLsetter are registered trademarks of Presstek, Inc.

XEROX is a trademark of XEROX CORPORATION.

http://graphics.kodak.com/

Internal 719-01050A-EN Rev A

Revised June 2008

Unpacking the Laminator

1. Remove the laminator's outer and inner packaging.



Figure 1: Laminator outer and inner packaging

2. Four screws secure the laminator to the pallet (Figure 2).
Underneath the pallet, open the nut on each of the screws (Figure 3), and remove the screw and the metal plate washer.



Figure 2: Screw securing the laminator to the pallet



Figure 3: Nut and metal plate washer underneath the pallet



Figure 4: Underside of the laminator mainframe after screw is removed

3. Remove the ramp rails from the packaging.



Figure 5: Packaged ramp rails

4. Raise the laminator slightly, using a ramp rail as a jack, and remove the wooden blocks underneath.



Figure 6: Wooden blocks underneath the laminator on the pallet

5. On the short edge of the pallet, attach the ramp rails 90 cm (35 in.) apart.



Figure 7: Ramp rail attached to pallet

6. Unlock the laminator wheels.

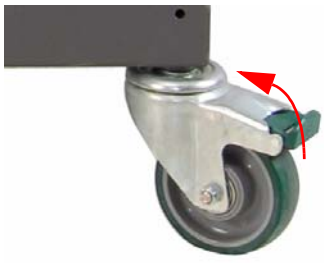


Figure 8: Wheel in locked position

7. Roll the laminator down the ramp to the floor.

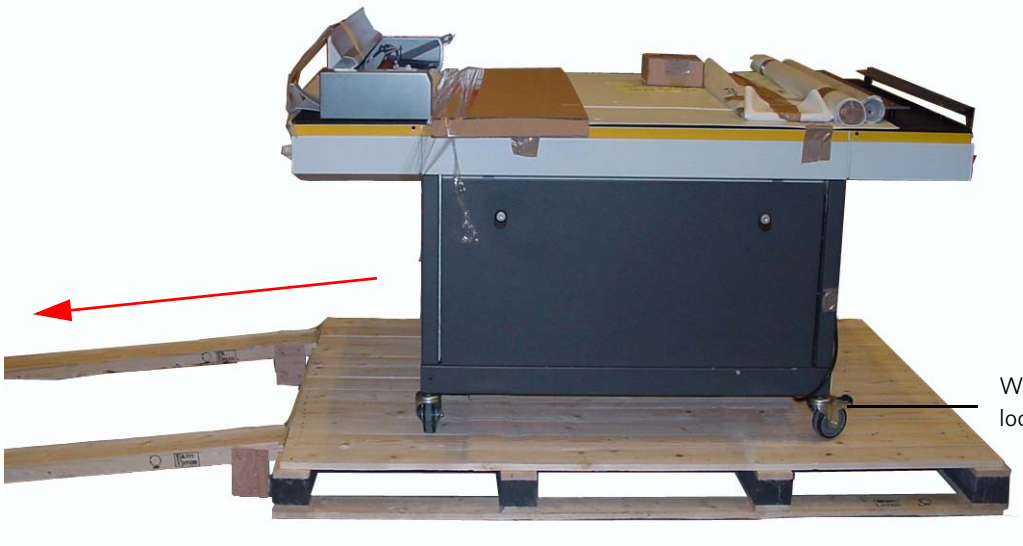


Figure 9: Ramp installed

8. Relock the laminator wheels.