

PrintConsole

Print Console 1.1 Installation

Document Number
73-3305B-A-PR01

March 21, 2000

Creo Products Inc.
3700 Gilmore Way
Burnaby, BC
Canada V5G 4M1

(604) 451-2700

Copyright 2000 Creo Products Inc. All rights reserved.

Revision History

Revision	Date	Author	Comments
Vers. A, Rev A	19-Aug-1999	T. Bolander	Released for the EP version of Print Console 1.0 (1.0.0.53)
Vers. A, Rev B	08-Oct-1999	T. Bolander	Updated for Print Console 1.0.1 (version 1.0.1.1)
Vers. A, Rev C	29-Nov-1999	T. Bolander	Updated for Print Console 1.0.2 (version 1.0.2.2)
Vers. B, Rev. A	21-Mar-2000	T. Bolander	Updated for Print Console 1.1 (version 1.1.0.15)

Creo Products Inc.

Print Console 1.1 Installation

CONTENTS

Revision History i

1. Introduction 1

2. Scope 1

3. Related Documentation 1

4. Requirements 2

5. Installation 2
   - 5.1 Clean Install 3
     - 5.1.1 Installing Print Console 4
     - 5.1.2 Installing Test Files 8
   - 5.2 Installing Print Console on a System Where a Version of Workstation Software Already Exists 9
   - 5.3 Updating an Existing Installation of Print Console 9
   - 5.4 Uninstalling Print Console 9

6. Configuration 10
   - 6.1 Configuring Device Media 10
   - 6.2 Configuring Output Media 12
   - 6.3 Configuring Print Setups 13
   - 6.4 Configuring CRI 14
   - 6.5 Configuring TIFF Downloader 15
     - 6.5.1 Licensing 16
     - 6.5.2 Compression 16
     - 6.5.3 ThermoFlex Tinting Mode 16
     - 6.5.4 Image Mirroring 17
     - 6.5.5 Image Transformation 17
     - 6.5.6 Image Clipping/Margins 17
   - 6.6 Delta Configuration 18
   - 6.7 Configuring Animation Settings 19
   - 6.8 Other Configuration 19

7. Installation Test Procedure (ITP) 19
7.1.1 Pre-Test Requirements 20
7.1.2 Test Procedure 20

1. INTRODUCTION

If you are familiar with the installation of Print Console 1.0, there couple of differences that you should be aware of:

- Print Console 1.1 (version 1.1.0.15) is specifically for supporting the Trendsetter 74 output device (previously referred to as the Trendsetter 2630), and does not *officially* support (i.e. should not be installed for use with) any other output device.
- Upgrading to Print Console 1.1 is not supported: you should only ever need to perform a clean installation of Print Console 1.1.0.15 for the Trendsetter 74 output device.
- Print Console version 1.1 is intended for the Intel platform only: the Alpha platform is no longer supported.

2. SCOPE

This document explains the various installation options for Print Console 1.1 output device control software. This document does not cover the *use* of Print Console (for that you should refer to the Print Console 1.1 user documentation listed in the "Related Documentation" section below). This document covers the following topics:

- Related Documentation
- Requirements
- Installation, including:
  - Clean installation
  - Installing Print Console on a system where a version of Workstation Software already exists (not supported for Print Console version 1.1)
  - Updating an existing installation of Print Console (not supported for Print Console version 1.1)
  - Uninstalling Print Console
- Configuration
- ITP (Installation Test Procedure)

3. RELATED DOCUMENTATION

- Print Console 1.1 Reference Guide (03-4199B)
- Print Console 1.1 Release Notes (06-3287B)
- Print Console 1.1 User Guide (03-4127B)
- For Prinergy installations, Prinergy Hardware Configuration and Windows NT Installation (72-3294A), and Prinergy Installation Guide (03-4121A)

4. REQUIREMENTS

Print Console requires a workstation/server running Windows NT Server version 4, with Service Pack 4 installed (Print Console 1.1 *will* run on a workstation with only SP3, but new servers currently ship with SP4 installed). NetBEUI and TCP/IP network protocols must be installed and configured. If Unix network connectivity is required, Hummingbird NFS must also be installed and configured.

Print Console is installed on different workstations depending on the output device and workflow. For a ThermoFlex workflow, Print Console is installed on the TIFF Front End server; for Prinergy, Print Console is installed on the Prinergy Render Station (secondary server); for integration with a third-party RIP, Print Console is installed on a CRI Workstation.

Workstations/servers that Print Console is to be installed on should include high-resolution, 24-bit video cards, optimized for the Windows Graphics Device Interface (GDI), with a minimum of 4MB of video RAM. The workstation's video display must be set to a minimum of 800 by 600 pixels and a minimum of 65536 colors in order to install and run the Print Console software, however 1024 by 768 resolution and true color (24-bit) display are recommended.

Because Print Console resides on a workstation that is connected to an output device, Print Console shares, by default, the same system environment requirements as similar workstations (an Allegro Workstation, for example) and the various output devices that it can control. For more site requirements-related information, refer to the Allegro Workstation Installation Procedure (73-2085A) and to the site requirements documentation for the Trendsetter 74 (previously known as the Trendsetter 2630).

Disk space requirements for a Print Console installation are as follows:

Print Console directory	~53.1MB (includes full set of animation images for one output device only)
CreoSupt directory	~17.4MB
PDF directory	~7.2MB
TestFiles directory	~186MB
Service directory	~1.5MB
Spool directory	~0MB (data dependent)
Total	approximately 265MB

5. INSTALLATION

In order to install Print Console you must be logged on to the workstation/server as a user with administrative rights to that computer.

The Print Console 1.1 install CD includes a single install program for the Intel platform (the Alpha platform is no longer supported). The installation program's main screen, which features a number of options down the right side of the dialog box, should automatically display shortly after you insert the install CD into the workstation's CD drive. If the install screen doesn't automatically appear, manually start the program by running **autorun.exe**.



The installation program offers the following options:

- **Print Console**–installs Print Console control software for the selected device model, with the Sample RIP (RIP simulator software)
- **Test Files**–installs a number of test files (note that additional device-specific test files will be provided on separate CDs)
- **Configure Software**–allows you install/configure Print Console options that you may have skipped during the initial installation
- **Print Console Utility**–used to backup and/or restore Print Console settings (from a previous installation)
- **Select Device**–used to add/remove animation images for additional output devices, and to configure Print Console to interface with a different device

The installation program makes a number of checks to determine what type of installation it will do. For each different type of installation, the location of directories, files, and registry entries are different. The screens and prompts displayed also vary depending on the type of installation being performed. The first time you run the Print Console installation program, the clean install option is automatically selected (refer to the following "Clean Install" section). If you have previously installed Print Console, the installation program instead offers several upgrade options (see "Updating an Existing Installation of Print Console" on page 9).

5.1 Clean Install

The first time you run the Print Console installation program, the clean install option is automatically selected.

5.1.1 Installing Print Console

Selecting the installation program's **Print Console** option installs Print Console control software for the selected device model, PDF documentation, and a number of other folders and files. After the installation, Print Console will be configured in the registry to run in production mode with the chosen output device.

Note that Print Console is installed on different workstations depending on the output device and workflow:

- For a Delta system, refer to the Delta installation documentation, as the Delta installation includes Print Console. (For information about *configuring* Print Console for Delta, refer to "Delta Configuration" on page 18.)
- For integration with other third-party RIPs, Print Console is installed on a CRI Workstation.
- For a Prinergy system, Print Console is installed on the Prinergy Render Station (secondary server):
    1. Install and configure the Prinergy Render Station according to the "Prinergy Hardware Configuration and Windows NT Installation" document (72-3294A).
    2. Install Print Console according to the instructions that follow, and ensure that the TIFF Downloader option is enabled during the install. (Note that a Prinergy installation of Print Console requires different install locations: the Print Console drive should be D:, and the Spool drive should be E:.)
    3. Follow the "Setting Up Output Devices" instructions in the "Prinergy Installation Guide" document (03-4121A).

To perform a standard installation of Print Console with the TIFF Downloader enabled:

1. Close any running applications.
2. The installation program's main screen, which features several options down the right side of the dialog box, should automatically display shortly after you insert the install CD into the workstation's CD drive. If the install screen doesn't automatically appear, manually start the program by running **autorun.exe**.
3. Click the **Print Console** option button.

4. The Welcome dialog box appears (see Figure 5.1). Click **Next >** to proceed (or click **Cancel** to exit the setup program).

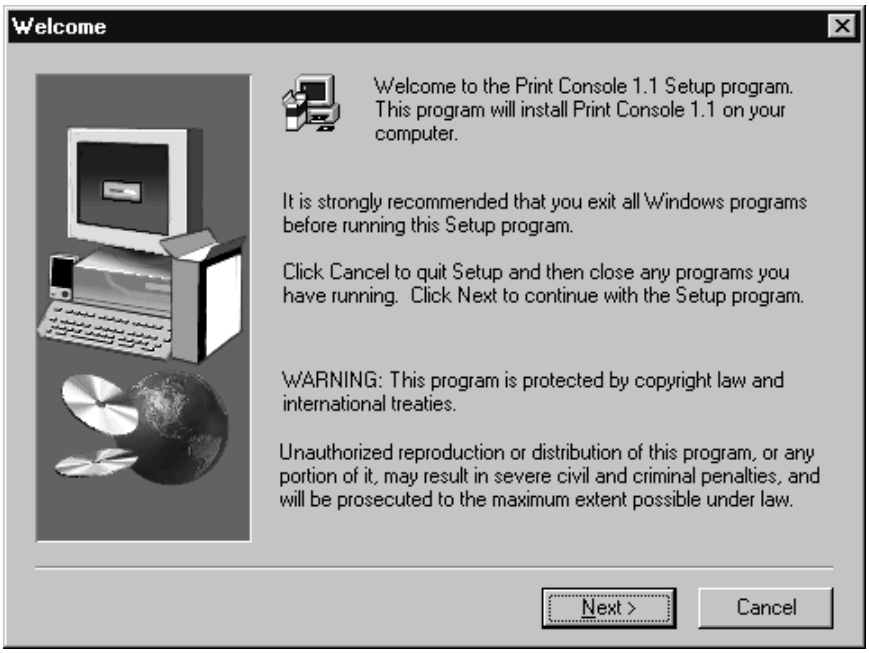


Figure 5.1

5. The Select Output Device dialog box appears (see Figure 5.2). Select the appropriate device and serial communications port (the default is COM1), and click **Next >** to proceed.

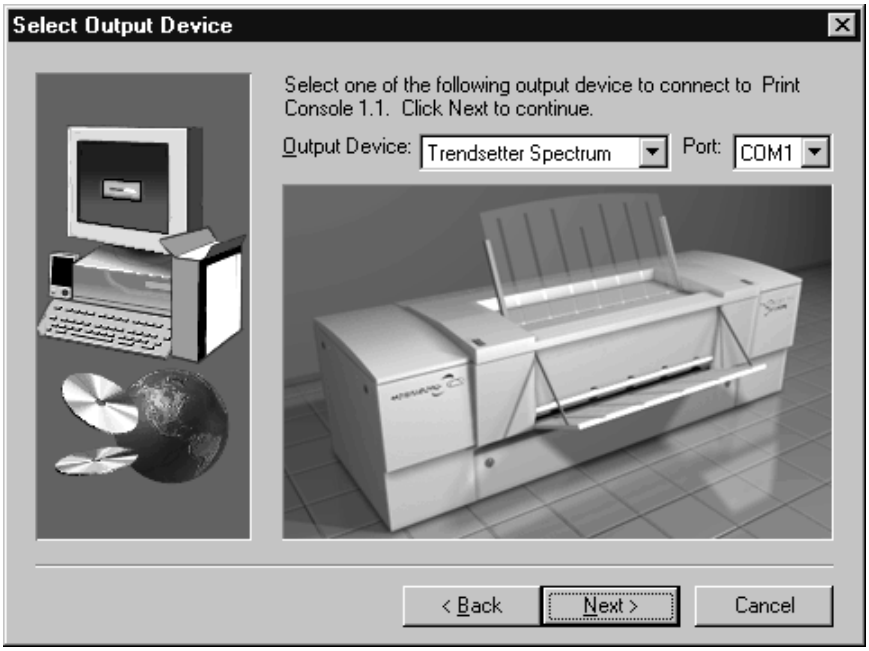


Figure 5.2

6. The Destination location dialog box appears (see Figure 5.3). Select a location for the Print Console software (the default is E: drive) and a location for the spool folders (the default is D: drive), and click **Next >** to proceed.

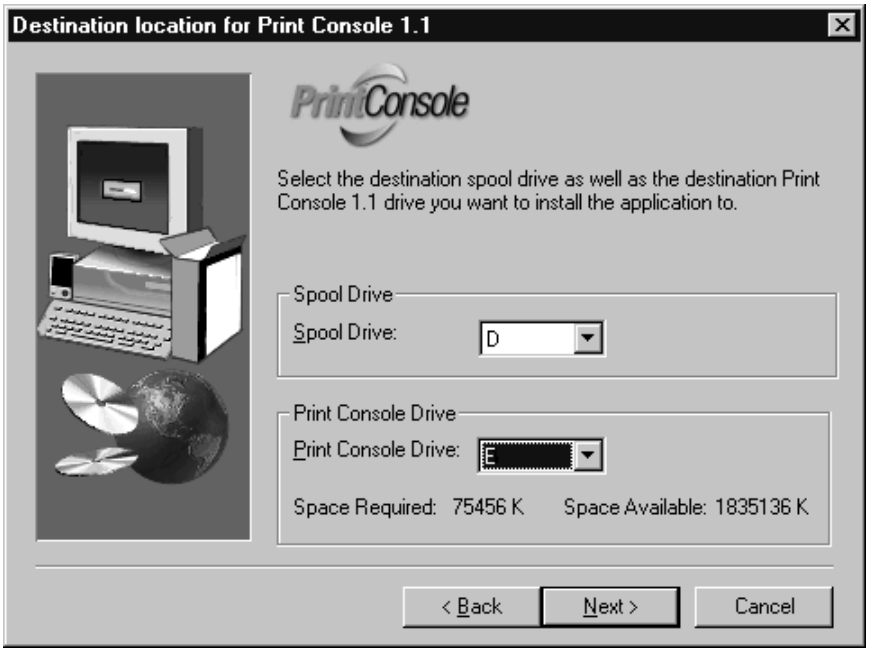


Figure 5.3

7. The Configure Print Console dialog box appears (see Figure 5.4). For a production installation, both the Auto Logon option and the TIFF Downloader option should be selected.

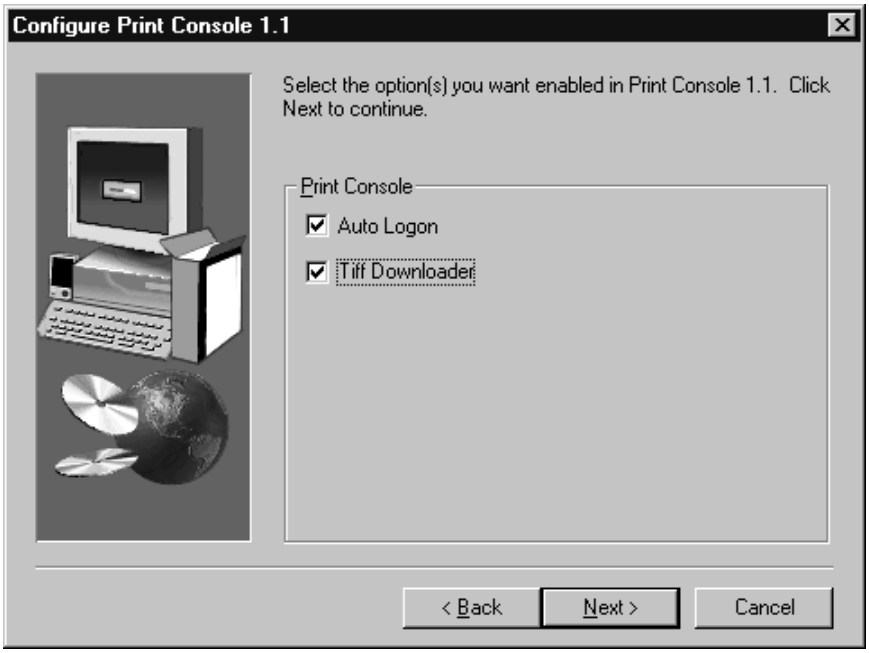


Figure 5.4

8. The Select Program Folder dialog box appears (see Figure 5.5). The dialog box shows the suggested program folder, Print Console 1.1, and a list of the existing program folders. Click **Next >** to proceed.



Figure 5.5

9. The Confirm Installation dialog box appears (see Figure 5.6). Review the choices you have made, then click **Next >** to proceed (or click **< Back** to return to previous screens in order to change installation options and settings).


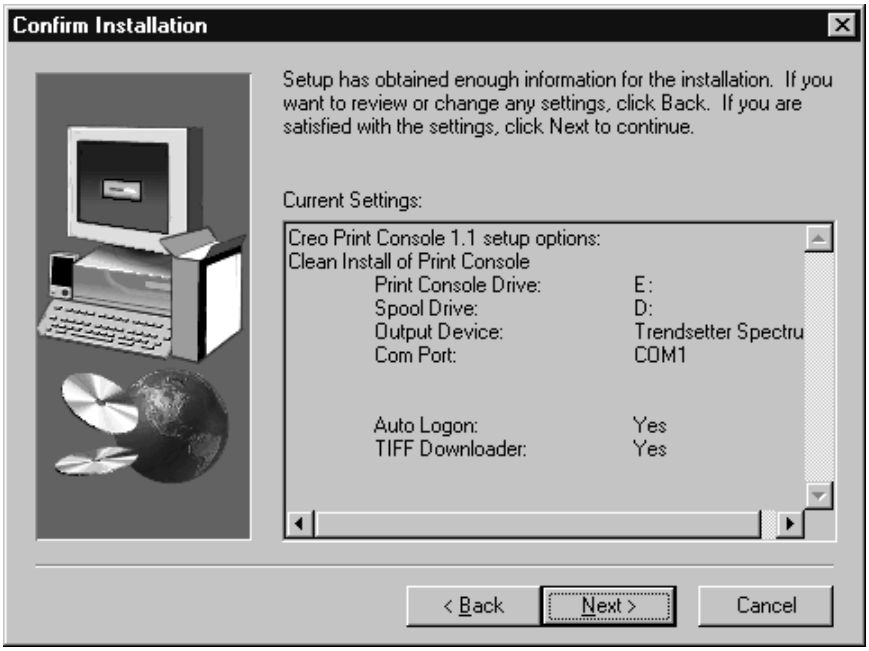


Figure 5.6

10. The Print Console installation begins, and the various executables and DLLs are copied to the **\PrintConsole\bin** directory. When the installation is complete, a message box appears: click the **OK** button. Print Console will now be configured in the registry to run in production mode with an actual output device.

5.1.2 Installing Test Files

The Test Files option installs a number of test files:

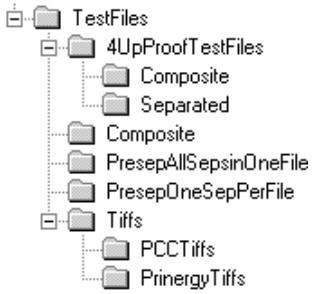

Note that CDs with additional, output-device-specific test files are also available.

To install the Print Console Test Files:

1. Close any running applications.
2. Click the install program's **Test Files** option button.
3. The Test Files Installation dialog box appears (see Figure 5.7). Select a location for the files (the default folder is **TestFiles**) and click **Next >** to proceed (or click **Cancel** to exit the setup program).

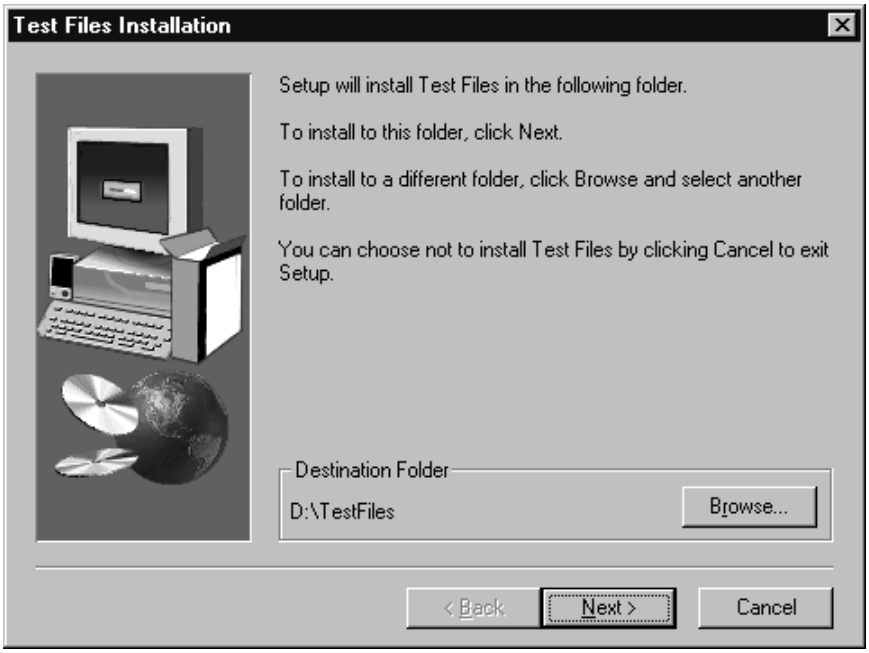


Figure 5.7

4. The Confirm Installation dialog box appears (see Figure 5.8). Click **Next >** to proceed.

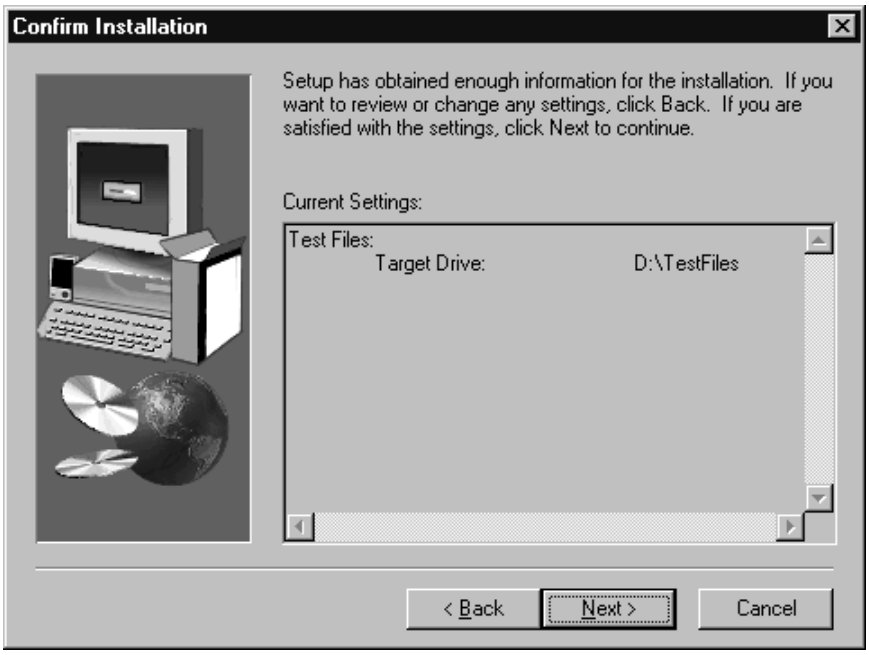


Figure 5.8

5. The Test Files installation begins. When the installation is complete, a message box appears, indicating that the files installed successfully: click the **OK** button.

5.2 Installing Print Console on a System Where a Version of Workstation Software Already Exists

Installing Print Console version 1.1 on a workstation that already has a version of Workstation Software installed *is not supported*: you should only ever need to perform a clean installation of Print Console 1.1.0.15 for the Trendsetter 74 output device.

5.3 Updating an Existing Installation of Print Console

Upgrading a previous installation of Print Console to version 1.1 *is not supported*: you should only ever need to perform a clean installation of Print Console 1.1.0.15 for the Trendsetter 74 output device.

5.4 Uninstalling Print Console

An uninstall script is included as part of the Print Console installation.

To uninstall Print Console, go to Start > Settings > Control Panel and double-click on Add/Remove Programs. Select Print Console 1.1 from the list of installed components, click the **Add/Remove** button, and follow the on-screen instructions.

Notes:

- *Do not* delete the **uninst.isu** file found in the **PrintConsole\bin** folder, as it is required by the uninstall script (and not only by the uninstall script).
- Depending on what build of the Print Console software you uninstalled, you *may* have to manually delete the (empty) **TestFiles** folder.

6. CONFIGURATION

The Print Console installation program will configure most of what is needed for you to start using the software, however there are some minimum settings that must be made via the UI so that Print Console is able to process files via the **Job** menu's **Submit File** option.

To configure Print Console so that you can process a test file using the **Job** menu's **Submit File** option, refer to the following sections.


Note: Choosing the installation program's Configure Software option merely allows you install/configure the features from section 5.1.1, step 7 (see page 6).

6.1 Configuring Device Media

Verify that Print Console recognizes the device media settings from the output device.

1. If it is not already running, start the Print Console software.
2. Open the Configure Device Media dialog box (**Configuration** menu, **Device Media** option) and verify that the expected device media characteristics are displayed. (These values are read from the output device firmware and stored in the Print Console workstation's Registry.)

Device media characteristics for Imation halftone proof media appear as follows (note that the screen shot below shows the list of device media from the Trendsetter Spectrum *simulator software*; the list you would see for an actual output device is different–for example, you should see 2 different Imation MatchPrint media, one for North America, and one for Europe):

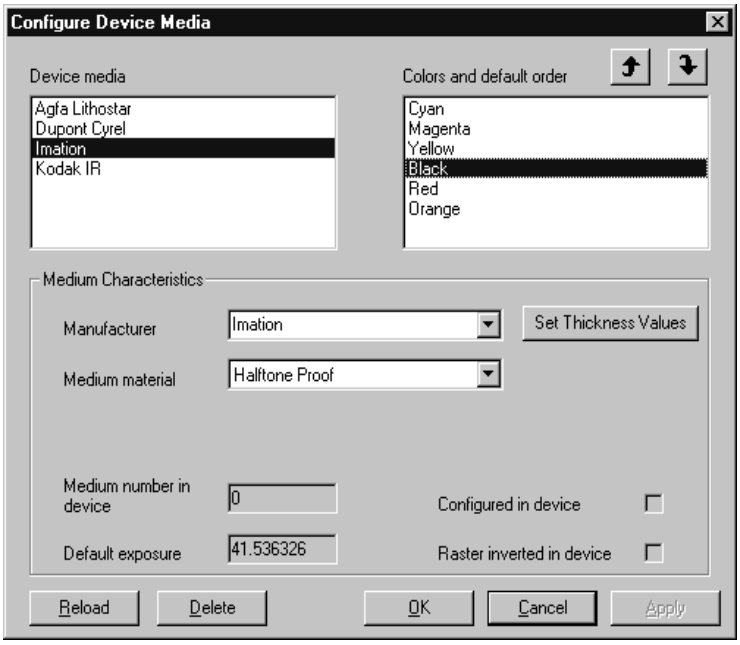


Note: The Imation-recommended order for color separations is now K, C, M, Y.


This change can be made in 2 different places. If the change is made here, via Print Console's Configure Device Media dialog box, this separation order becomes the default order that appears in the second place that this change can be made: Print Console's Configure Print Setups dialog box.

6.2 Configuring Output Media

1. Open the Configure Output Media dialog box (**Configuration** menu, **Output Media** option). Note that there are no default output media installed with Print Console: *device media* values are read from the output device firmware (and stored in the Print Console workstation's Registry); these device media are used when creating Print Console output media.

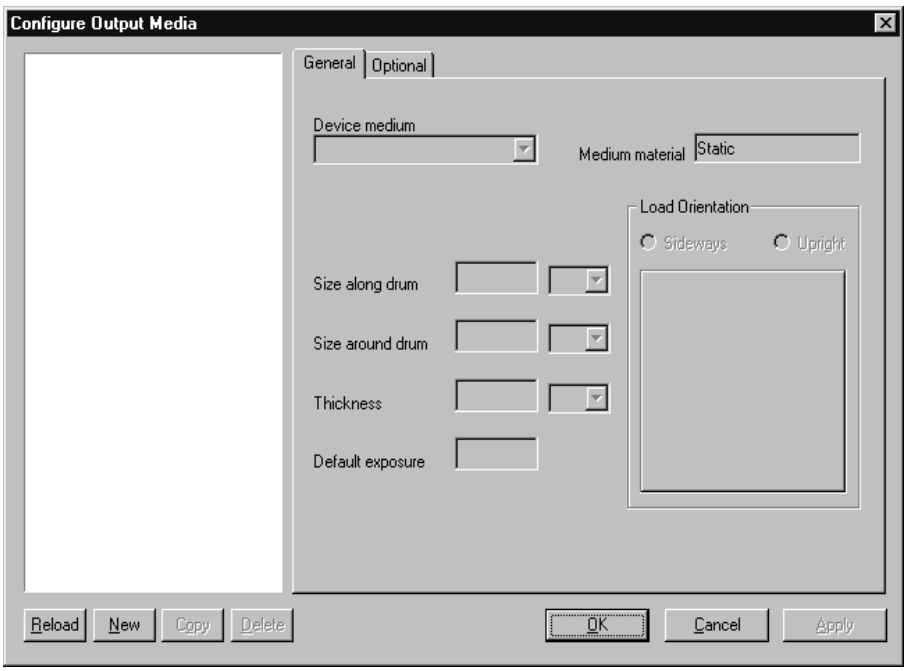

2. Click the **New** button to create a new output media; the Enter Output Medium Name dialog box appears:

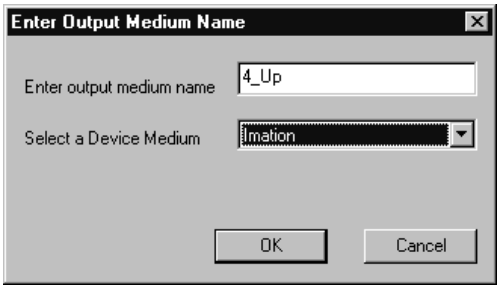

   Enter an output medium name (use "4_Up"), select a device medium from the drop-down list (choose one of the Imation media), and click the **OK** button. Note that the name of the output media cannot be the same as the name of any print setup.

3. Select the appropriate device proof format from the Device Proof Format drop-down list ("4Up_Proof" in this case).

   CAUTION! If the output media is a plate, be sure to enter the correct thickness value.

4. Click the Configure Output Media dialog box's **OK** button.


Note: Previous versions of output device control software (i.e. Allegro and Platesetter Workstation software) used a factor of 25.402 to convert inches to millimeters. The correct

value, though, is 25.4, which Print Console uses for the conversion. Due to rounding effects, Print Console PPD files may reflect a 1 point difference in media sizes. If you use Print Console's equivalent of the plate matching feature in Workstation Software, the matching tolerance should be adjusted to take this difference into account.

6.3 Configuring Print Setups

Note that there are no print setups created when Print Console is installed: you will have to create you own.

1. Open the Configure Print Setups dialog box (**Configuration** menu, **Print Setups** option).

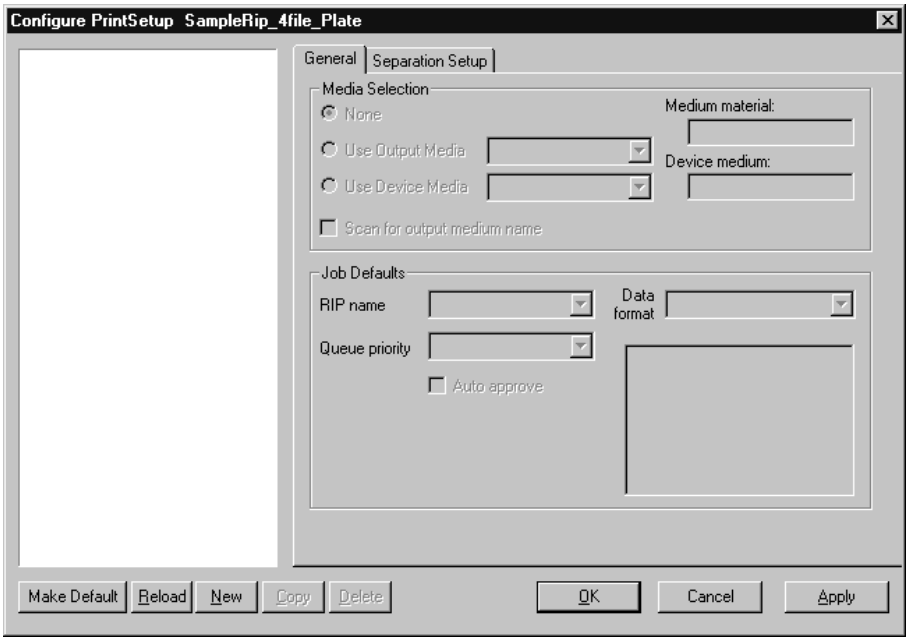

2. With the General tab selected:

   a). Create a new print setup by clicking the **New** button.

   b). In the **Enter print setup name** dialog box, type a name for the print setup (PrintSetupForTIFFs, for example), and click the **OK** button. Note that the name of the print setup cannot be the same as the name of any output media.

   c). Select either the appropriate output medium name *or* the appropriate default device medium.

   d). Enable or disable the Scan for Output Medium Name option. (Note that this check box is unavailable when TIFF Downloader is the selected RIP.).

   e). Select a RIP (TIFF Downloader in this case).

   f). Select a Queue Priority.

   g). Select a Data Format (TIFF in this case).

3. (The need for this step depends on the workflow: you do not have to worry about this for a TIFF-based workflow.) Change the imaging order of the color separations. With the Separation Setup tab selected:

   a). Press the **Add Process** button.

   b). Reorder the separations so that Black is first (i.e. at the top) by selecting the Black separation row and pressing the **up arrow** button three times.

   Note: This may be required due to a recent change to the Imation-recommended imaging order of color separations. The required order is now K, C, M, Y.

4. Select the any appropriate options available via the Configure Print Setups dialog box's RIP-specific tab (TIFF Downloader in this case, which allows you to select either the Mirror print option or the Transform option: for information about these TIFF Downloader options, refer to the "Configuring TIFF Downloader" section, which starts on page 15).

5. Set the new print setup to be the default by right-clicking on the print setup name and left-clicking on the **Default Print Setup** popup button:




   ...or by clicking the **Make Default** button in the lower-right corner of the Configure Print Setup dialog box.

6. Click the Configure Print Setups dialog box's **OK** button to save the new, default print setup.

6.4 Configuring CRI

Enter the CRI license key via the Licenses tab of the Configure Workstation dialog box (**Configuration** menu, **Workstation** option):

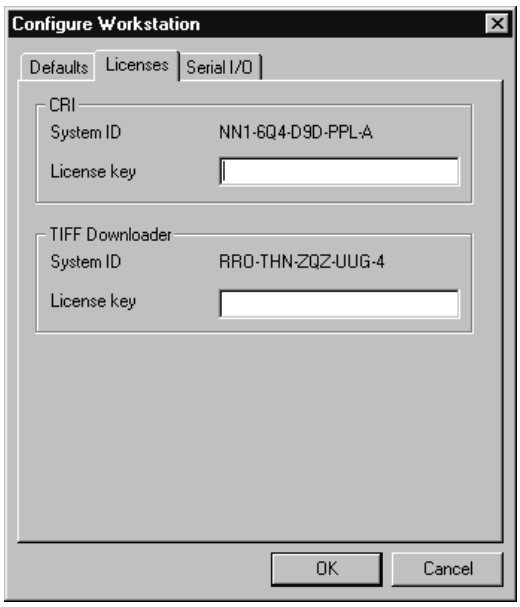

6.5 Configuring TIFF Downloader

There is a new version of the TIFF Downloader executable (**tiffdownloader.exe**), version 2.0, that is specifically for Print Console (the old TIFF Downloader executable is **tiffrip.exe**). In general, users of TIFF Downloader 2.0 will not notice any difference in operation from version 1.1 unless they need to take advantage of the new features (the only exception is the improved G4 decompression). The program is still used the same way, so existing TIFF Downloader documentation still applies. (For more information, refer to the *TIFF Downloader 2.0 Reference Guide*.)

New features in TIFF Downloader version 2.0 are:

- Supports ThermoFlex “tinting” mode
- Improved G4 decompression
- Supports mirroring of the image about the drum axis
- Supports clipping of all four sides of the plate
- The absolute TIFF file size maximum (not the image size) has been increased to 4GB

For more information about these new features, refer to sections 6.5.1 to 6.5.6.

If you selected the TIFF Downloader option when you installed Print Console, TIFF Downloader will already be enabled, as the necessary command line will appear in the Print Console **begin.inf** file:

```
"tiffdownloader" /newconsole /unique /min /exit 0
```

However, you may want to add the G4 decompression parameter, in which case you would change the line (note the placement of the quotation marks) to:

```
"tiffdownloader /dhg4" /newconsole /unique /min /exit 0
```

Parameters are as follows:

- /le<float> – no longer valid in the command line; now specified in the Configure System dialog box’s Margin tab (accessed via Print Console’s Service menu)
- /te<float> – no longer valid in the command line; now specified in the Configure System dialog box’s Margin tab (accessed via Print Console’s Service menu)
- /transform – no longer valid in the command line; now enabled via the Configure Print Setups dialog box’s TIFF Downloader tab
- /ib<int> – force input buffer size in MB
- /tib<int> – force transform input buffer size in MB
- /ob<int> – no longer valid
- /noxymatch – X & Y resolutions do not have to match or be defined
- /dhg4 – new and improved G4 decoder; note that this switch does not have to be entered on the command line, as this is the default decoder that will be used if no other decompression scheme is selected

- /originalg4 – use original libtiff G4 decoder (fixed version)
- /bitmap – write output to a bitmap file instead of SCSI port (for testing)
- /tiff – write output to tiff file instead of SCSI port (for testing)
- /simscsi – do not output to SCSI port, delay approx. transfer time (for testing)

These command line switches are not normally used, however they may be useful for testing or for special cases. For more information, refer to the *TIFF Downloader 2.0 Reference Guide*.

6.5.1 Licensing

The TIFF Downloader requires a license key, which is generated by submitting the TIFF Downloader System ID and the customer's sales order number to the TIFF Downloader Licensing web page. Enter the license key via the Licenses tab of the Configure Workstation dialog box (**Configuration** menu, **Workstation** option).

Note that if the license key is not entered, a one inch by 5 inch "Creo Diagnostic Tool" label will be superimposed (up to 3 times, depending on the media size) across the top of the imaged output media. Once entered, the license key will take effect on the next image.

6.5.2 Compression

TIFF Downloader 2.0 includes improved (optimized) G4 decompression, and imaging times for files compressed with G4 now match those compressed with LZW. (Although LZW compression is often optimal, because of a licensing issue with LZW we no longer recommend using it with the TIFF Downloader.) The switch for including the optimized G4 decompression feature is **/dhg4**.

It is recommended that all image files be compressed, and at this time G4 compression is recommended whenever possible. Unfortunately, some types of files, like those with stochastic screening, may not compress properly with the current G4 compression scheme, in which case an alternative compression method will have to be used. An alternate G4 decoder can be enabled from the **begin.inf** file command line with the "/originalg4" switch (do not include the extra quotes in command line):

```
"tiffdownloader /originalg4" /newconsole /unique /min /exit 0
```

If the new G4 decoder cannot process a particular file, this alternate decoder may be able to.

Note that the TIFF Downloader cannot process any file that is larger than 2GB. However, the uncompressed image size *can* be larger than 2GB, therefore, large images (like larger VLF images) *must* be compressed.

6.5.3 ThermoFlex Tinting Mode

TIFF Downloader 2.0 supports ThermoFlex "tinting" mode—now referred to as "digital masking"—for certain media via the Print Console software, although this option is not available to regular users/operators. Tinting is selected for a device media by first selecting the media via the Tinting tab in the **Service** menu's **Configure System** option, and then selecting the Tinting Scheme in the Configure Device Media dialog box. Tinting schemes must be entered directly in **TintingSchemes** under the **PrintConsole\Vx.x** registry key.

Note that digital masking will significantly increase the amount of processor time required by the TIFF Downloader. A single processor can tint a typical file at a rate that is barely fast enough to keep up with the output device. A dual-processor machine will perform much better because the tinting algorithm is executed in a thread separate from the main TIFF Downloader threads.

If the TIFF Downloader detects an error with the any of the tint parameters, the image will fail and a message that begins with "Tinting Library Error…" will be displayed in the PrintConsole History window. This message *should* contain enough information to fix the problem.

6.5.4 Image Mirroring

TIFF Downloader 2.0 supports mirroring of images about the drum axis. Mirroring is necessary to support the Spectrum digital halftone proofing devices. This feature is selected via the TIFF Downloader tab in the Configure Print Setups dialog box. Note that an image cannot be mirrored and transformed at the same time.

TIFF Downloader can mirror the image data around the drum axis with little degradation in performance. Note that the image is mirrored around the center of the plate, not the center of the image. The leading and trailing edge clips are applied after the image is mirrored. In other words, the leading edge clip still applies to the leading edge of the plate.

6.5.5 Image Transformation

TIFF Downloader 2.0 supports rotation of images. "Transforming" is useful if the image file has not been pre-rotated by the RIP. This feature is selected via the TIFF Downloader tab in the Configure Print Setups dialog box. Note that an image cannot be mirrored and transformed at the same time.

Since transforming can slow down TIFF Downloader's output significantly, it is best to use this feature only if absolutely necessary, i.e. if it is impractical to RIP a file again with the correct rotation and settings. The best transformation performance will be achieved with tiled files, which will take approximately 2 or 3 times longer to output transformed vs. un-transformed. Stripped files will take much longer to transform: a stripped file can take over 10 times longer to output transformed vs. un-transformed.

6.5.6 Image Clipping/Margins

TIFF Downloader 2.0 supports clipping of all four sides of output media via the Print Console software, although this option is not available to regular users/operators. These clippings can be entered for each device media via the Margins tab in the **Service** menu's **Configure System** option. Note that these margins replace the TIFF Downloader version 1.x command line parameters "/le" and "/te".

The margins define areas of the media that cannot be imaged. The output device will not allow imaging in these areas, and therefore the TIFF Downloader removes these areas from the image file before it is output. The exact handling of the margins depends on the sizes of the image and the media. The TIFF Downloader always removes the leading and home edge margins from the image. The trailing and away edge margins are removed from the image only if it extends into these regions on the plate.

For example, assume the following margins are set:

Leading edge: 300 mils
Trailing edge: 200 mils
Home edge: 100mils
Away edge: 100 mils

If the 32" by 44" version of a file is to be imaged on a 32" by 44" plate, all margins would be applied and the TIFF Downloader would output an image that is 31.5" by 43.8". If this same file was to be imaged on a 22" by 33" plate, the TIFF Downloader would produce a 21.5" by 32.8" image. Imaging this file on a 40" by 50" plate would produce a 31.7" by 43.9" image.

Note that there is a minor limitation in the way the TIFF Downloader handles the leading edge clip (for the normal case where there is no transformation). The leading edge clip is converted to pixels and rounded down to the nearest multiple of 8. For example, if a leading edge clip of 115mils is specified for a 2400 DPI image, the actual leading edge clip will be 113.3 mils (corresponding to 272 pixels instead of 276). The image position on the plate will be shifted by the rounded off amount, but the overall image size will not be adjusted (i.e. the trailing edge clip is increased by the rounded off amount). The same type of rounding will occur with the home edge clip for transformed files.

6.6 Delta Configuration

In the Delta configuration, the system's default print setup will enable the **Auto Approve** and **Scan for Output Medium Name** options. The default device medium is set to the proofing media type, the RIP name is set to Delta Tech, and the Data Format is set to Delta Job Ticket.

There will be only one hot folder. The Delta installation script configures this hot folder in the registry. Furthermore, the Delta system will use the old **splfold.exe** hot folder program, *not* the new **spoolers.exe** program. The Input Queues configuration dialog is *not accessible* in Delta mode. Jobs dropped into that hot folder by the Delta system are initialized using Print Console's default print setup. As described above, the default print setup enables Auto Approve and file scanning.

An Output Medium is created for each plate size and for each proof size. Additionally, a print setup is created for each proof size – the print setup for each proof size specifies the corresponding Output Medium. Additionally, these proofing print setups specify a separation list on the separation setup tab. Therefore, a print setup must be created for each proof size & separation list combination.

Print Console scans the Delta job tickets which enter the single hot folder for an Output Medium name or a print setup and initializes the jobs according to the rules in figure 1. A plate job will enter the hot folder with a plate Output Medium name. The job will be initialized as a single separation plate job (Delta plate jobs are always a single separation). A proof job, on the other hand, should enter the hot folder with a *proof print setup name*. The job will be initialized as a multiple separation proof job (Delta proof jobs always contain multiple separations; therefore, a print setup must be used to initialize the separation list).

The key point here is that Delta plate jobs are not initialized with a separation list, while Delta proof jobs *are* initialized with a separation list. This is because Delta plate job tickets

contain only one separation, while Delta proof job tickets contain all the separations required for the proof.

All print setups that specify an Output Medium (as opposed to a Default Device Medium) are written to the PPD file. Therefore, in the Delta configuration, all plate Output Media, proof Output Media, and proofing print setups are written to the PPD file. The separation lists for the proofing print setups are also documented in the PPD file for the Delta system (see the end of a PPD file that includes such print setups). The Delta system parses the separation list information in order to generate the correct separations in the required order for the proofing device. In the Delta System, the operator chooses job media as follows:

- For plate jobs, the operator chooses a plate output media name.
- For proof jobs, the operator chooses a proof print setup name (*not* a proof output medium name).

Note: These choices are essential for proper initialization of Delta jobs, because only one hot folder is used, and because the separation list for plate jobs should not be initialized from a print setup, while the separation list for proofs jobs *should be* initialized from a print setup.

6.7 Configuring Animation Settings

You have the option of changing the output device animation setting to Full without affecting the performance of the workstation. To do so, select Print Console's **Configuration** menu, choose the **Preferences** option, and change the setting via the Preferences dialog box's **Animations** drop-down list.

6.8 Other Configuration

For more detailed information about configuring Print Console, refer to the available user documentation:

- Print Console 1.1 Reference Guide (03-4199B)
- Print Console 1.1 Release Notes (06-3287B)
- Print Console 1.1 User Guide (03-4127B)

7. INSTALLATION TEST PROCEDURE (ITP)

A Print Console 1.1 Installation Test Procedure may be created for the benefit of Field Applications Specialists and CSEs to confirm the successful installation of the Print Console device control software. It is unlikely that the results would offered to the customer as a demonstration that Print Console is complete and operational; as that would probably fall to the device-specific ITP.

7.1.1 Pre-Test Requirements

Prior to performing this test procedure the following conditions must be met:

1. The Print Console Site Requirements have been satisfied.
2. The Print Console software and Test Files have been installed.
3. The necessary additional configuration of the Print Console has been done.

7.1.2 Test Procedure

The Print Console 1.1 Installation Test Procedure document is not yet available. The team *may* release an ITP that includes a number of scenarios, which will cover the combination of Print Console 1.1 and the Trendsetter 74 output device.