



# Print Console 3.1 Installation

**Document Number**
**72-3649B-A**

August 30, 2002

Creo Inc.
3700 Gilmore Way
Burnaby, BC
Canada V5G 4M1

(604) 451-2700

Copyright 2002 Creo Inc. All rights reserved.

# Revision History

| Revision | Date | Author | Comments |
|---|---|---|---|
| A-A | April 2002 | A.Blignaut | Created for Print Console 3.0 installation |
| B-A | Aug 2002 | A.Blignaut | Updated for Print Console 3.1 installation |
| | | | |
| | | | |

creo

# Print Console 3.1 Installation

## CONTENTS


Revision History ..... i

1. Introduction ..... 1

2. Scope ..... 1

3. Related Documentation ..... 2

4. Requirements ..... 2

5. Installation ..... 3
   - 5.1 Installing Service Shell ..... 3
     - 5.1.1 Installing Service Shell Host ..... 4
     - 5.1.2 Installing Service Shell Client ..... 4
   - 5.2 Installing Print Console ..... 5
     - 5.2.1 Clean Install ..... 5
     - 5.2.2 Migrating from Other Creo Device Control Software ..... 11
   - 5.3 Installing Test Files ..... 12
   - 5.4 Installing Print Console on a System Where a Version of Workstation Software Already Exists ..... 14

6. Upgrading Print Console ..... 15
   - 6.1.1 Backing-Up Print Console Settings ..... 15
   - 6.1.2 Upgrading Print Console ..... 16
   - 6.1.3 Restoring Print Console Settings ..... 18

7. Uninstalling Print Console ..... 18

8. Configuration ..... 19
   - 8.1 Configuring Service Shell ..... 19
   - 8.2 Configuring Print Console ..... 19
     - 8.2.1 Configuring Device Media ..... 19
     - 8.2.2 Configuring Media Sizes ..... 21
     - 8.2.3 Configuring Print Setups ..... 22
   - 8.3 Configuring Direct Connections ..... 24

8.3.1 Installing the Brisque Agent ..... 24
8.3.2 Licensing Direct Connections ..... 25
8.4 Configuring TIFF Downloader ..... 26
8.4.1 TIFF Downloader Overview ..... 26
8.4.2 Licensing ..... 27
8.4.3 Compression ..... 28
8.4.4 ThermoFlex Digital Masking ..... 29
8.4.5 Image Mirroring and Rotation ..... 29
8.4.6 Image Clipping/Margins ..... 30
8.5 Configuring Animation Settings ..... 31
8.6 Other Configurations ..... 31
8.6.1 Configuring New Users for Print Console ..... 31
8.6.2 Configuring the Workstation to Support Dual Workflows (Prinergy & Brisque) Without a SCSI Switch ..... 31
8.6.3 Specific Configurations ..... 31

Appendix 1: COM Port Assignments (for standard hardware Configurations) ..... 32

# 1. INTRODUCTION

Print Console is part of a controlled release package of output device, software, and firmware. The controlled release for any particular output device will contain only those components that have been tested and approved for that output device. While Print Console is designed to support all output devices, please check with your Product Service Representative if you are unsure about the qualification of this version of Print Console with your output device.

To install Print Console, you must to first install the Service Shell Host software because the two applications share a common DLL. If you attempt to install Print Console without first installing the Service Shell Host, the installation program exits. The Service Shell application—which is a host/client program that, among other things, allows you to view logs remotely to diagnose problems in the device—comes with the CD that Print Console is on. To install Service Shell, see the Installing Service Shell section on page 3.

After you have installed Service Shell Host, install Print Console:

- If you are installing on a workstation that does not have an existing version of device control software, follow the procedures on page 5.
- If you are installing Print Console on a workstation that has an earlier version of Creo device control software (Print Console 1.0, Allegro Workstation 1.7 and 1.2, or PCS/TCS), follow the procedures on page 5 and then follow the Migrating from Other Creo Device Control Software section to migrate comparable settings from the existing device control software.
- If you are installing Print Console on a workstation that has an older version of Print Console installed (and you are not changing output devices), go to the Upgrading Print Console section on page 15.

After installing Print Console, make sure to install the relevant test files. Doing so can make device servicing much more efficient. For more information, see the Installing Test Files section on page 12.

# 2. SCOPE

This document explains the various installation options for Print Console. It does not cover the use of Print Console — refer to the Print Console user documentation listed in the "Related Documentation" section below.

## 3. RELATED DOCUMENTATION

Print Console has a context-sensitive online help system. It contains reference material and procedural information for all features and functions of Print Console.

Other documentation:

- *Print Console 3.1 Specification (72-3323F)*
- *TIFF Downloader 3.0 Specification (72-3322C-A)*
- *Print Console 3.1 Quick Start Guide (03-4321A)*
- *Print Console 3.1 Release Notes (06-3360B)*
- *Print Console 3.1 Migration (77-0128D)*
- For Brisque Screen2Go installations,
  - *Brisque to Trendsetter Connectivity via Screen2Go—Installation Guide (Cat. No. 399Z1P903A)*
  - *Brisque to Trendsetter Connectivity via Screen2Go—User Guide (Cat. No. 399Z1P904A)*
- For Brisque Direct installations,
  - *Brisque to Trendsetter: Spectrum Connectivity (Cat. No. 399Z1P760A)*
- For Prinergy 2.0 installations,
  - *Imaging Thermal Bluelines Using Prinergy and Print Console (78-0126A-A)*
  - *Windows 2000 Installation for Prinergy 2.x (72-3476B)*
  - *Dell Hardware Setup for Prinergy 2.x (72-3572A)*
  - *EMC/DG Server Hardware Setup for Prinergy 2.x (72-3573A)*
  - *Prinergy 2.0: Installation (72-3497A)*
- For ThermoFlex installations, *TIFF Front End Server Installation Procedure (73-3344A)*

## 4. REQUIREMENTS

Print Console requires a workstation/server running Windows 2000. Dell OptiPlex workstations require Windows 2000 Professional edition and pcAnywhere. Other servers require Windows 2000 Server edition. If you are installing on a server, NetBEUI and TCP/IP network protocols must be installed and configured. If UNIX network connectivity is required, Hummingbird NFS must also be installed and configured.

Note that Print Console is installed on different workstations depending on the output device and workflow. For a ThermoFlex workflow, Print Console is installed on the TIFF Front End server; for Prinergy, Print Console is installed on the Prinergy Render Station (secondary server); for integration with Brisque or a third-party RIP, Print Console is installed on a CRI Workstation.

Workstations/servers that Print Console is to be installed on should include high-resolution, 24-bit video cards, optimized for the Windows Graphics Device Interface (GDI), with a minimum of 4MB of video RAM. The workstation's video display must be set to a minimum of 800 by 600 pixels and a minimum of 65536 colors in order to install and run Print Console; however 1024 by 768 resolution and true color (24-bit) display are recommended.

For more information, refer to the *Site Preparation and Requirements* document for the output device that Print Console is being installed on.

Hard drive space requirement for a Print Console installation is as follows:

| | |
|---|---|
| Print Console directory | ~96 MB (includes full set of animation images for one output device and online help files) |
| CreoSupt directory | ~21.0 MB |
| PDF directory | ~10.8 MB |
| TestFiles directory | ~259 MB |
| Spool directory | Data dependent |
| Service Shell directory | ~15.8 MB |
| Total | Approximately 400 MB* |

This figure represents the amount of hard drive space needed to install Print Console. Since the space required for the Spool directory fluctuates, you will need more hard drive space to actually operate Print Console once installed.

# 5. INSTALLATION

Print Console shares a Service Shell Host DLL file, which means that you can't run Print Console on a workstation that does not have Service Shell Host installed. In fact, the Print Console install program exits the installation if it does not find Service Shell Host on the workstation. The first step in a clean installation of Print Console, then, is to install the Service Shell Host (see the Installing Service Shell section on page 3).

If the workstation has Service Shell already installed, go to the section on page 5.

## 5.1 Installing Service Shell

Service Shell is a software tool used to perform maintenance, service, test, and calibration operations locally or through remote access. As the name suggests, it uses a client/host architecture: the host software is installed on the Print Console workstation; the client software can be installed on the same workstation or remotely. As mentioned, the host software needs to be installed before you can install Print Console. Although you do not have to install the client, we strongly recommend doing so if you need either Splot or local access to the device diagnostic port.

**CAUTION: When you install Service Shell Host, local use of Hyperterminal and Procomm are effectively disabled because the Host software monopolizes the serial port that is connected to the device on the workstation/server. Unless Service Shell Host is closed, that port is unavailable for any other use.**

The following sections describe how to install the Service Shell Host and Client.

### 5.1.1 Installing Service Shell Host

To install Service Shell, log on to the workstation/server as a user with administrative rights to that computer.

The Service Shell application is on the CD containing Print Console.

1. Manually start the installation program by running the **ServiceShell-Host-CTP.exe** file in the **\Host** directory. The Service Shell CTP Host Welcome dialog box appears.
2. Click **Next** to continue. The Choose Destination Location screen appears.
3. Choose the C: drive and click **Next** to continue. The Setup Type dialog box appears.
4. Choose **Typical** and click **Next** to continue. The Start Copying Files dialog box appears with information confirming the installation settings.
5. Click **Next** to start copying the Service Shell Host files. When the installation is complete, the Installation Complete screen appears.
6. Click **Finish**.

Service Shell Host and Client can be upgraded at any time after the initial install of Print Console.

### 5.1.2 Installing Service Shell Client

You do not have to install the Service Shell Client before installing Print Console. Be aware, however, that the Client software also includes the Splot diagnostic software. If you do install it, make sure to install it in the same drive as the Host (C:).

To install Service Shell Client, log on to the workstation/server as a user with administrative rights to that computer. The Service Shell application is on the CD containing Print Console.

1. Manually start the installation program by running the **ServiceShell-Client-CTP.exe** file in the **\Client** directory. The Service Shell CTP Client Welcome dialog box appears.
2. Click **Next**. The Choose Destination Location dialog box appears.
3. Choose the same drive as the Service Shell Host (C:) and click **Next** to continue. The Setup Type dialog box appears.
4. Select **Typical** and then click **Next**. The Start Copying Files dialog box appears.
5. Click **Next** to start copying the Service Shell Host files. When the installation is finished, the Installation Complete screen appears.
6. Click **Finish**.

Service Shell Host and Client can be upgraded at any time after the initial install of Print Console. For information on how to configure Service Shell to work with Print Console, see the Configuring Service Shell on page 19.

## 5.2 Installing Print Console

The CD containing Print Console includes a single install program. The installation program's main screen will automatically display after you insert the CD into the workstation's CD drive. If the install screen does not automatically appear, manually start the program by running **autorun.exe**.

The installation program makes a number of checks to determine what type of installation it will do. For each different type of installation, the location of directories, files, and registry entries are different. The screens and prompts displayed also vary depending on the type of installation being performed. The first time you run the Print Console installation program, the clean install option is automatically selected (refer to the following "Clean Install" section). If you have previously installed Print Console, the installation program offers several upgrade options (see "Upgrading Print Console" on page 15). For any type of installation other than a first-time clean install, the following options will be available in the Print Console Setup window:

- **Print Console**–installs Print Console control software for the selected device model, with the Sample RIP (RIP simulator software)
- **Test Files–**installs a number of test files (note that additional device-specific test files will be provided on separate CDs)
- **Configure Software–**installs/configures Print Console options that you may have skipped during the initial installation
- **Print Console Utility**–backs-up and/or restores Print Console settings (from a previous installation)
- **Select Device**–adds/removes animation images for additional output devices, and to configure Print Console to interface with a different device
- **Migrate Settings**—migrates certain settings from existing Creo device control applications.

### 5.2.1 Clean Install

The first time you run the Print Console installation program, the clean install option is automatically selected.

Selecting the installation program's Print Console option installs Print Console control software for the selected device model, PDF documentation, and a number of other folders and files. After the installation, Print Console is configured in the registry to run in production mode with the chosen output device.

Note that Print Console is installed on different workstations depending on the output device and workflow:

- For integration with third-party RIPs, Print Console is installed on a CRI Workstation.
- For a Brisque-to-TIFF system (Screen2Go), Print Console is installed on a CRI workstation with the TIFF Downloader option enabled and connects to the Brisque

via an NFS Hummingbird connection. To submit TIFF files, you must install the Screen2Go module on the Brisque according to the Screen2Go documentation.

**Note:** For Brisque Screen2Go installations, do not enable the Brisque-to-Trendsetter option during the installation of Print Console.

- For a Brisque Direct system, Print Console is installed on a CRI workstation with the Brisque to Trendsetter option enabled and connects to the Brisque via the GDAPI:

    1. Install and configure the Brisque 4.0 following the appropriate installation procedures.

    2. Install Print Console on the CRI workstation according to the instructions that follow, making sure to select the Brisque to Trendsetter option.

    3. From the Print Console CD, install the Brisque Agent according to the Installing the Brisque Agent procedure on page 24.

    4. Connect the two systems to each other and the output device according to the "Brisque to Trendsetter: Spectrum Connectivity (Cat. No. 399Z1P760A)" document.

- For a Prinergy system, Print Console is installed on the Prinergy Render Station (secondary server):

    1. Install and configure the Prinergy Render Station according to the Windows 2000 installation for Prinergy 2.x document (72-3476).

    2. Install Print Console according to the instructions that follow, and ensure that the TIFF Downloader option is enabled during the install. (Note that a Prinergy installation of Print Console requires different install locations: the Print Console drive should be D: and the Spool drive should be E:).

    3. Follow the "Setting Up Output Devices" instructions in the "Prinergy Installation Guide" document (03-4121A).

To perform a standard installation of Print Console with the TIFF Downloader or Brisque to Trendsetter options enabled:

1. Close any running applications.

2. The main screen, which features several installation options down the right side of the dialog box, should automatically pop up when you insert the install CD into the workstation's CD drive. If the install screen doesn't automatically appear, manually start the **autorun.exe**.

3. Click the **Print Console** option button.

    If you do not have the Service Shell Host installed, Print Console exits the installation at this point. If this happens, install the Service Shell Host according to the procedures in the Installing Service Shell section on page 3.

4. The Welcome dialog box appears. Click **Next** to continue (or click **Cancel** to exit the setup program).

5. The Select Output device dialog box appears (see Figure 1). In the **Output Device** box, select the appropriate device from the list of devices.
   **Note:** Some device names have changed to reflect the new naming convention used.

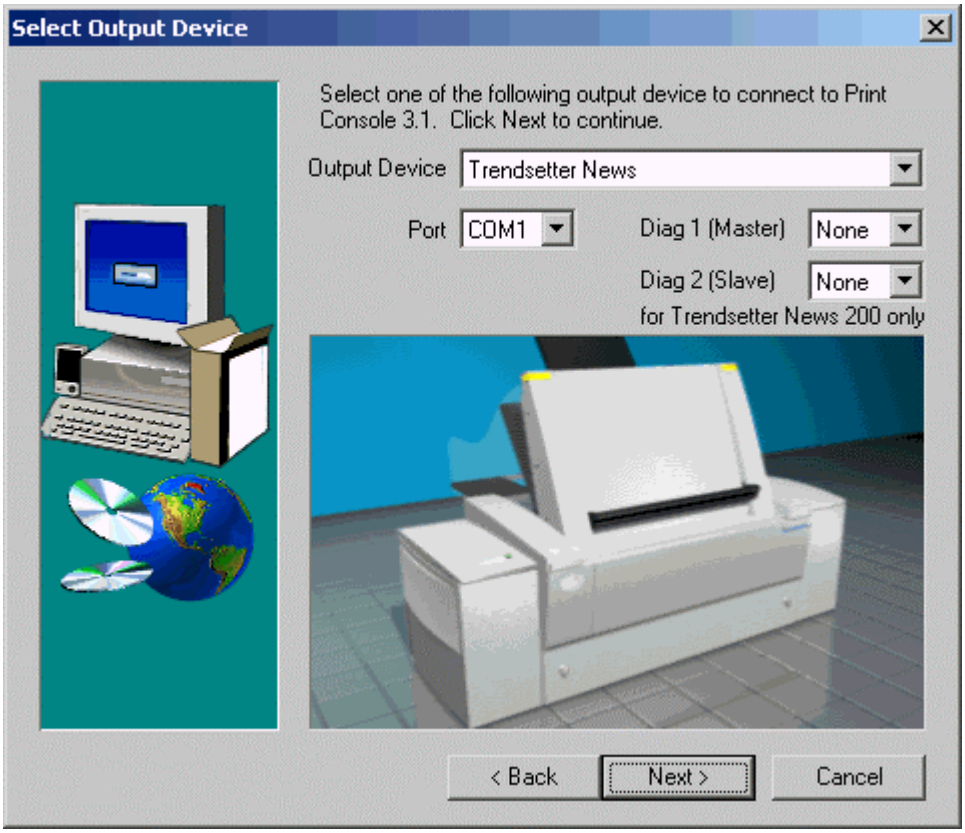



Figure 1

6. In the **Port** and **Diagnostic Port** boxes, select the appropriate COM ports depending on the workstation you are installing to.

   - For Data General servers, set the **Port** box (which is the workstation serial interface port) to COM1 and set the **Diagnostic port** to COM3.
   - For Dell servers, set the **Port** box to COM3, set the **Diagnostic Port 1** to COM4, and the **Diagnostic port 2** to COM5.

**Note:** Diagnostic Port 2 is only applicable to Trendsetter News 200 devices using Dell workstations that have more than four ports. For any other output devices, leave the default setting for Diagnostic Port 2 at None.

For more information on standard COM port settings, see Appendix 1: COM Port Assignments on page 32.

7. If the Device you selected is available with either MCE or MPE electronics, a setup window appears for you to select the type of electronics your device has.

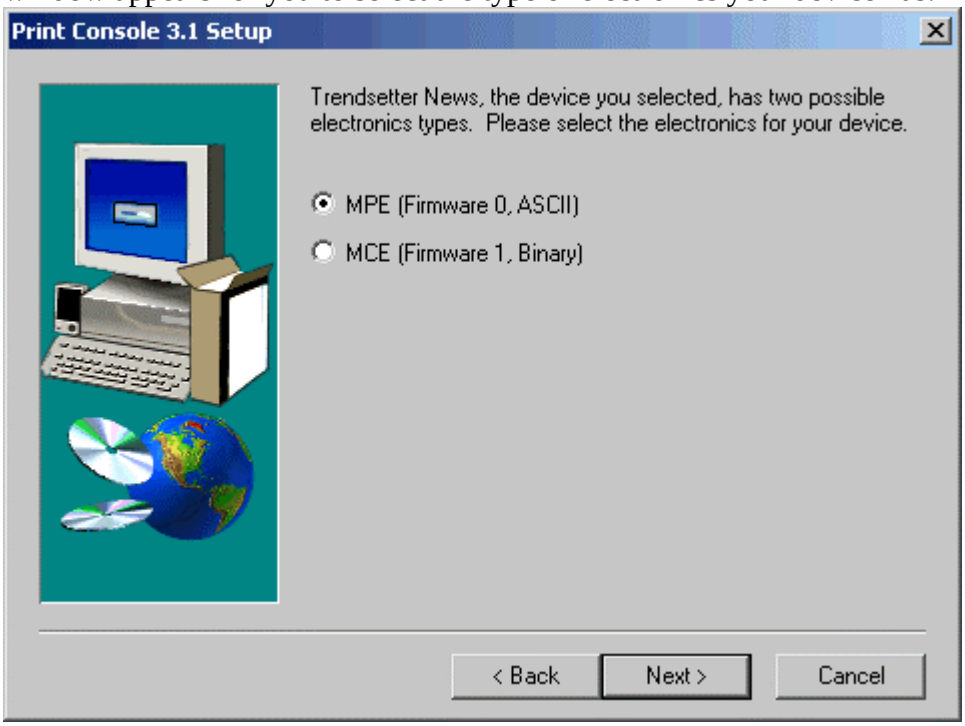



Figure 2

8. Select MPE or MCE electronics
9. Click **Next** to continue.
10. The Destination location dialog box appears. Select a location for the Print Console software (the default is D: drive), and click **Next** to continue).

    - Select the Auto Logon if you want the workstation to automatically log onto the network as “PCOperator”. Select this option if it is appropriate for your workflow configuration.

    **Note:** See Configuring New Users for Print Console on page 31 for information on how to add new users correctly.

    - Select Brisque to Trendsetter Connectivity if you are connecting directly to the Brisque via GDAPI (not via Screen2Go).

    **Note:** See Installing the Brisque Agent on page 24 for further procedures required to connect directly to a Brisque via GDAPI.

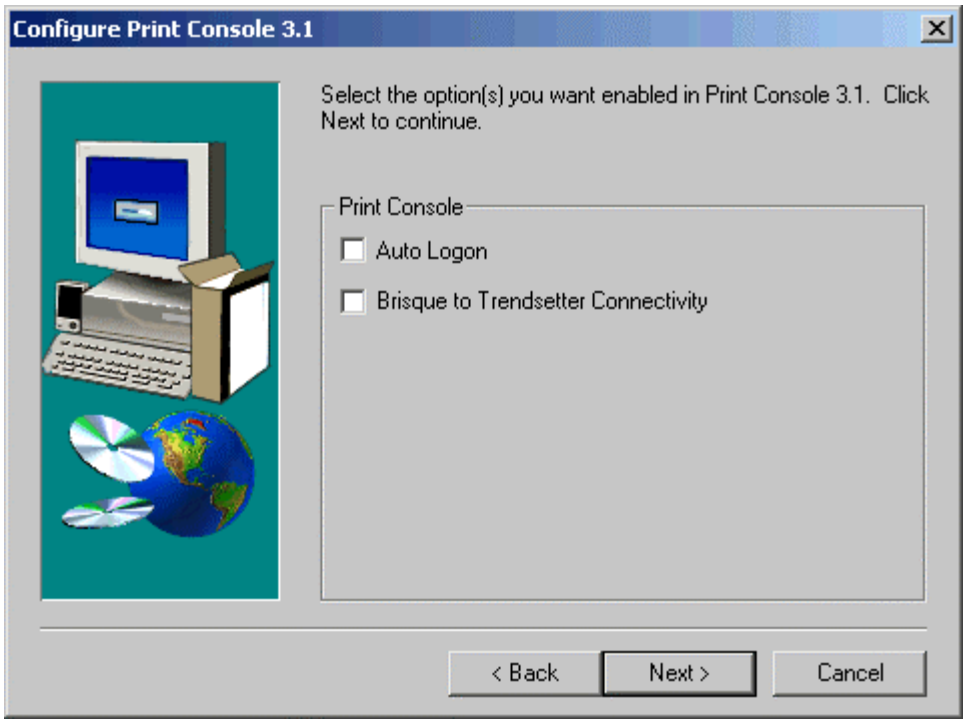



Figure 3

11. A Print Console setup box appears to select a color scheme.
    - Select Classic PC if you do not need to conform to the IEC60204-1 standard.
    - Select IEC60204-1 if you must conform to the IEC60204-1 standard.
12. Click **Next** to continue.
13. A Print Console setup box appears to select a language for the help files. Select German, French, Italian, Spanish, or English for the online help system.
    **Note:** If the language you selected is not yet available, a window appears telling you that it is not available and that English will be installed. When available, the translated versions of the online help can be downloaded from the TechPlanet and copied to the Print Console workstation to replace the English files.

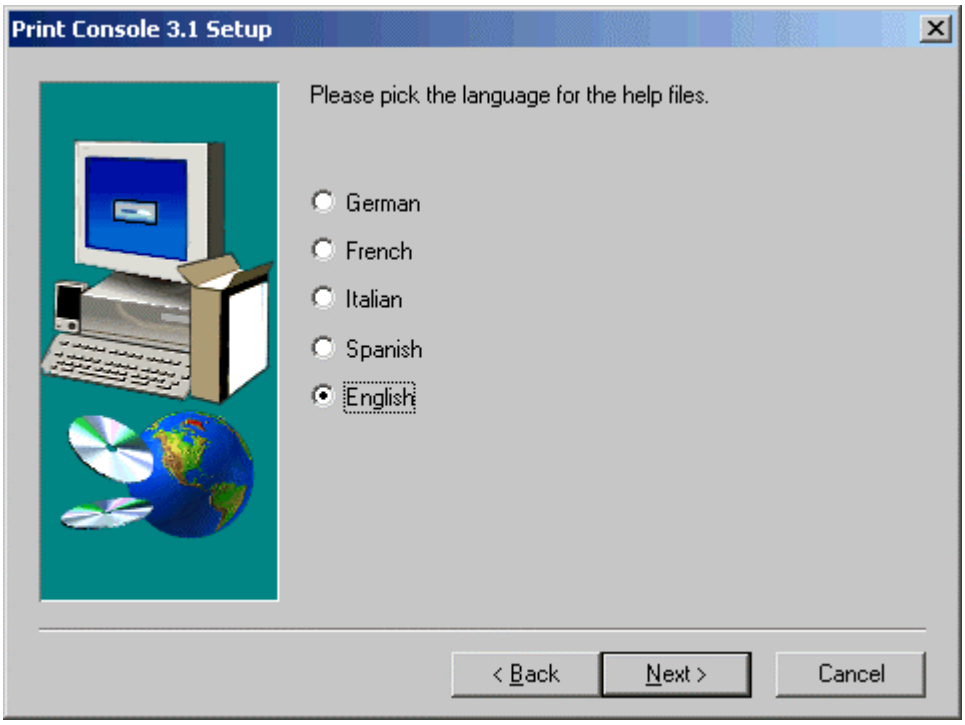



Figure 4

14. Click **Next** to continue.

15. The Confirm Installation dialog box appears. Review the choices you have made, then click **Finish** to continue (or click **< Back** to return to previous screens in order to change installation options and settings).

    The Print Console installation begins, and the various executables and DLLs are copied to the **\PrintConsole\bin** directory.


16. When the installation of a MPE device is complete, a readme.txt file appears warning you to make sure the gc mss value (geometric correction main scan shift) in the device firmware matches the value in the Clip for Leading Edge Clamp in the Device Margins tab in the Print Console Service pane. If these values do not match, you must **change the value in the firmware**; otherwise, image shifting may occur. Follow the directions in the Readme document to ensure this does not happen. When the Program Group window appears – close it.
    For MCE devices, the above warning is not relevant and the readme file will not be displayed after installation.

17. If the installation detects existing Creo device control software on the workstation, it displays a dialog box prompting you to migrate the settings to Print Console.


    - To run the Migration Utility, select **Yes**. Go to the Migrating from Other Creo Device Control Software section.
    - If you do not want to migrate settings, close the dialog box and restart the workstation when prompted.
      You can run the migration utility at any point in the future by choosing the Migrate Settings option from the Print Console installation program. Refer to the Print Console Migration document for details and instructions on migrating settings (see Related Documentation).

### 5.2.2 Migrating from Other Creo Device Control Software

1. Select **Next** when the migration utility Welcome screen appears:
2. Select one of the source applications that were detected and click on the **Next** button to continue.

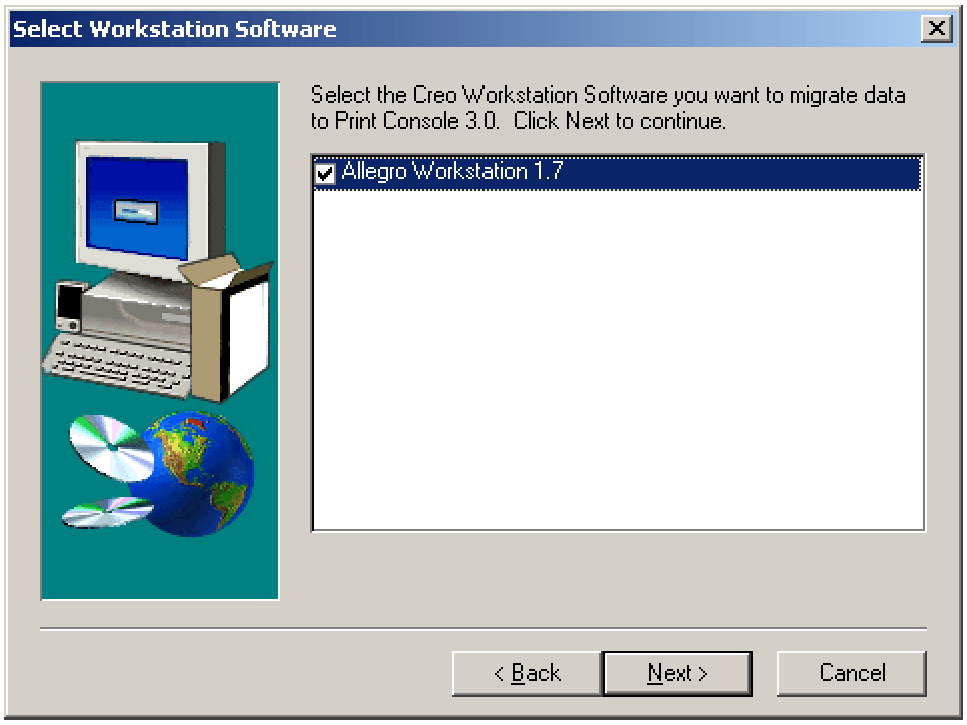

3. After selecting the desired source software, the Select Components dialog appears. There are three different versions of this dialog box, depending on the source Creo Workstation Software you selected (only one is shown below). By default, all selections on this dialog are selected. Select the settings to migrate and click **Next** to continue.

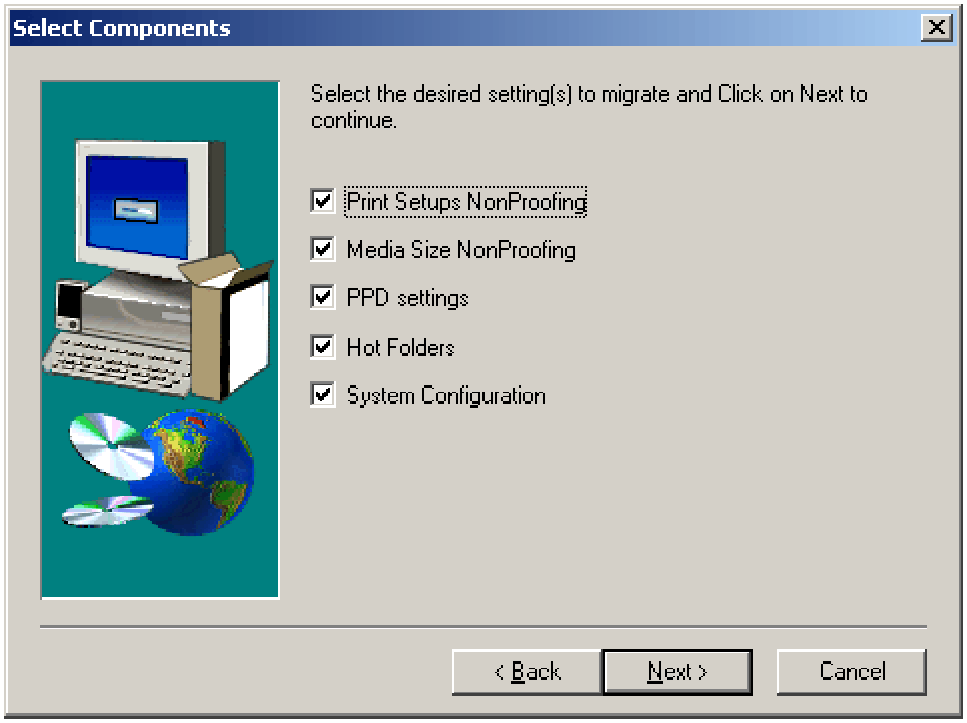


4. The final dialog box is the Confirm Installation dialog. Make sure the information presented is correct and click **Next** to begin the migration.

The Migration Utility creates two log files. One will be in your WinNT directory (Print Console Migration_<Date><Time>.log) and the other will be in the Print Console bin directory (migration.log).

## 5.3 Installing Test Files

The Test files are automatically installed during the Print Console installation procedure. To re-install them, select the Test Files option in the Print Console Setup window as outlined below.

The Test Files option installs a number of test files onto the workstation (note that additional device-specific test files will be provided on separate CDs). These are a series of simple TIFF files that you can output, using TIFF Downloader as the RIP, to ensure that the workstation and the device are communicating properly, which can significantly reduce the amount of time it takes to diagnose problems with the device. CDs with additional, output-device-specific test files are also available.

To install the Print Console Test Files:

1. Close any running applications and open the Print Console Setup program.
2. Click the install program's **Test Files** option button.




Figure 5

3. The Select Components dialog box appears (see Figure 6).Enable the **TestFiles** checkbox and select a location for the files (the default folder is **TestFiles**).
   If you want the calibration files to be installed, enable the **CalibrationFiles** checkbox.
   **Note:** The calibration files will be installed to the drive and directory that Print Console is installed to.
4. Click **Next** to continue (or click **Cancel** to exit the setup program).

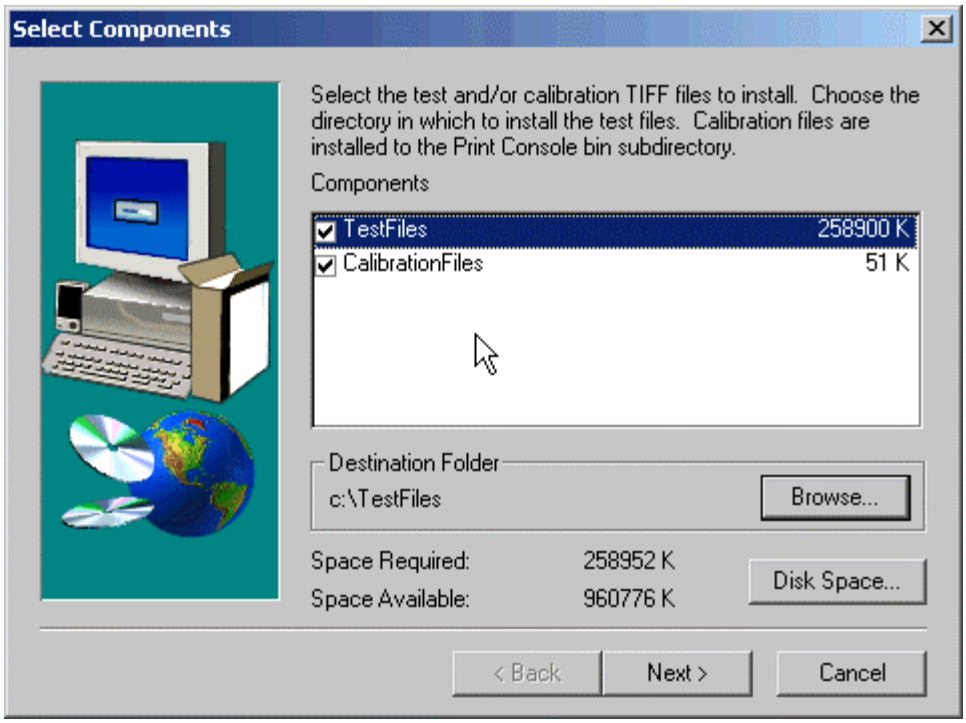



Figure 6

5. The Confirm Installation dialog box appears. Click **Next** to continue.
6. The Test Files installation begins. When the installation is complete, a message box appears, indicating that the files installed successfully: click the **OK** button.

## 5.4 Installing Print Console on a System Where a Version of Workstation Software Already Exists

You can install Print Console on a different logical drive on a system where a version of device control software already exists.

To create a virtual drive that you can install Print Console to:

1. Create a folder on the drive you wish to install to. For example, **E:\Vdrive**.
2. Create a batch file called **DriveSubst.bat**.
3. Include the following text:

```
subst V: /d
subst V: E:\Vdrive
```

...where /d deletes the drive mapping/substitution if already present.

- Save **DriveSubst.bat.** To make sure it runs each time the workstation is rebooted, move it to the Computer Management\System Tools\System Information\Software Environment\Startup Programs directory. You may have to navigate to this directory via the My Computer icon on the desktop.

Or…

- Save **DriveSubst.bat** to the desktop, then drag it to **Start -> Programs -> Start Up**.

You can now install Print Console to the new virtual drive (V drive in this case), as described in Installing Print Console on page 5.

Be aware that when Print Console is installed on a system where a version of device control software already exists, the Auto Logon feature works a bit differently. When you first log on to the workstation, the Auto Logon feature will automatically choose the new Print Console PCOperator user account (which triggers the new **Pcop.bat** file). To start the old device control software, log off and log back on using the old CTPOperator user account (which triggers the old **CTPop.bat** file).

**Note:** If you install Print Console to a virtual drive, you may notice a problem when rebooting the workstation. When the workstation reboots, may not be able to find any links to the software installed on the virtual drive, which means the icons on the desktop may not show the proper images. To fix this, re-select the icons for each shortcut.

# 6. UPGRADING PRINT CONSOLE

### 6.1.1 Backing-Up Print Console Settings

Before updating an installation of Print Console, you may use the install program's Print Console Utility option to backup the configuration settings of your present installation. If the upgrade does not work, you can restore the earlier Print Console version and settings. Settings that are backed up include print setups and input channels (the entire Print Console registry key is backed up). A copy of this utility is also installed along with the Print Console control software and accessible from the Windows Start menu in the Print Console program grouping.

**CAUTION!** Restoring from these backed-up registry settings is only guaranteed to work for the same release of the Print Console software, i.e. if you plan on backing-up, refreshing, and restoring *the same build version*. (Unfortunately there is no guarantee that the registry settings for an older build will be compatible with the registry settings of a newer build.) Therefore, if you encounter a problem upgrading to Print Console 3.1 from, for example, 2.0 (build 2.0.2.7), you would then have to reinstall build 2.0.2.7 before restoring from the backup.

To backup the Print Console registry settings:

1. Click on the install program's **Print Console Utility** button, or launch the utility by going to Start -> Programs -> Print Console 3.1 and choosing Print Console Utility.

2. Choose **Save Print Console settings** and click **Next** to continue.

3. Enter the path and registry filename you want to save to (the default is **backup\PCx.x_M_D_YYYY.reg**, where M is the month, D is the day, and YYYY is the year). Click **Next** to continue.

4. The backup process begins. When it is complete, a message box appears, indicating that the Print Console settings were saved successfully: click the **OK** button.

### 6.1.2 Upgrading Print Console

Print Console checks for the Service Shell Host software before upgrading. If it does not find it, Print Console exits the installation and prompts you to install the Service Shell Host. If it does find it, Print Console continues with the upgrade. Be aware, though, that Print Console does not check the version of the Service Shell Host. Ensure the installed version of Service Shell Host is the same or a later version as that on the Service Shell installation CD that comes with the Print Console CD. To install Service Shell Host, see the Installing Service Shell  section on page 3.

The Print Console installation program automatically detects an existing Print Console installation; it provides 2 of the 3 possible options, depending on the state of the workstation. The three possible options are Refresh, Clean Install, and Upgrade.

- **Refresh Print Console files** refreshes the Print Console executables and DLLs. This option is only available when installing the same build number/version of the software.
- **Clean install of Print Console in the same location** automatically prompts you to backup the existing installation of Print Console, the existing version is uninstalled, then a new, clean installation of the Print Console software is created in the same location as the original install.
  **Clean install of Print Console in a different location** automatically prompts you backup the existing installation of Print Console, the existing version is uninstalled, then a new, clean installation of the Print Console software is created in a new location.
- **Upgrade the existing install with a newer version** replaces the existing directories (CreoSupt, Print Console, TestFiles, Service, Spools, PDF), but does not change the device you selected. If you have changed a file in one of these directories, you can restore it from your backup after installing the newer build. This option is only available when installing a newer version than what already exists on the workstation. The program will *not* overwrite an installation of a newer build.

To upgrade/refresh a Print Console installation:

1. Close any running applications, and open the Print Console installation program (if not already open).

   **Note:** When installing Print Console or selecting a different device, make sure to shut down Launch Service Host and restart it after install is complete.

2. Click the **Print Console** option button.

3. Select one of the 2 install options provided and follow the onscreen prompts.

**Note:** If you choose “Clean install of Print Console on drive C:”, you will be prompted to backup the software configuration settings from the previous installation. This is optional, and is similar to the process described in “Backing-Up Print Console Settings” on page 15. However, there are a couple of differences: the Print Console registry key is automatically saved as **printconsole.reg** in the backup directory that you specify; the **creosupt**, **pdf**, **printconsole**, and **service** folders from the original Print Console installation are copied to the backup directory that you specify.

**CAUTION!** Restoring the registry settings is only guaranteed to work for *the same build* of the Print Console software.

4. Open **printconsole/bin/begin.inf** and **printconsole/bin/begin.dat** and ensure that the TIFF Downloader lines in each file are as follows:

```
# the following lines should be uncommented to start the tiff
downloader

#"tiffdownloader /testscsi /auxthreads4 /sws1048576 /tib70"
/unique /noconsole /min /exit 0 /restartdelay 10
```

...if you *do not* want the TIFF Downloader enabled.

If you *want* the TIFF Downloader to be enabled, uncomment the line:

```
# the following lines should be uncommented to start the tiff
downloader

"tiffdownloader /testscsi /auxthreads4 /sws1048576 /tib70"
/unique /noconsole /min /exit 0 /restartdelay 10
```

For more information about the TIFF Downloader, refer to Configuring TIFF Downloader on page 26.

**Note:** If you upgraded from Print Console 2.0, ensure all image shift settings migrated to the correct print setups. Since image shifting was previously configured on the Media Sizes pane, the value may not have migrated correctly to all associated print setups.

### 6.1.3 Restoring Print Console Settings

After updating *the same build* of Print Console software you can use the Print Console Utility to restore the previous configuration/settings (*if* you backed them up), which will save you from having to go back and completely reconfigure Print Console.

**CAUTION!** Restoring the registry settings is only guaranteed to work for *the same build* of the Print Console software.

To restore these settings:

1. Exit the Print Console software if it is running. (If you were to attempt to restore these settings while Print Console was running, everything would appear to work but no changes would be made to the registry.)
2. Start the Print Console install program and click the **Print Console Utility** button, or launch this utility by going to Start -> Programs -> Print Console 3.1 and choosing Print Console Utility.
3. Choose “Restore Print Console settings” and click **Next** to continue.
4. Enter the path and registry filename you want to restore from (the default backup file is **backup\PCxx_M_D_YYYY.reg**, where M is the month, D is the day, and YYYY is the year). Click **Next** to continue.
5. Confirm (or cancel) your choice.
6. If you choose to continue, the registry restoration process will begin. When it is complete, a message box appears, indicating that the Print Console settings were restored successfully: click the **OK** button.

## 7. UNINSTALLING PRINT CONSOLE

An uninstall script is included as part of the Print Console installation.

To uninstall Print Console,

1. Go to Start -> Settings -> Control Panel and double-click on Add/Remove Programs.
2. Select Print Console from the list of installed components, click the **Add/Remove** button, and follow the on-screen instructions.

**Note:** *Do not* delete the **uninst.isu** file found in the **PrintConsole\bin** folder, as it is required (not only) by the uninstall script.

# 8. CONFIGURATION

The Print Console installation program will configure most of what is needed for you to start using the software; however, there are some minimum settings you may have to manually configure depending on the workstation's configuration.

## 8.1 Configuring Service Shell

For Print Console logs to appear in the **Remote** list in the Service Shell Client, you have to edit the **LogFileSrv.ini** file in the **ServiceShell\Bin** directory. To do so:

1. In the **ServiceShell\Bin** directory, open the **LogFileSrv.ini** file using a text editor.
2. In the **Install0Log2Path** line, add the path to the Print Console log files. The file should look like the following, though the drive letters may be different depending on the configuration of your system:

```
[LogFileSrv]

[LogPathList]
Install0Log1Path=c:\ServiceShell\logs
Install0Log2Path=c:\PrintConsole\log
```

3. Save the file.

You can now view Print Console log files in **Remote** section of the Service Shell Client application.

## 8.2 Configuring Print Console

To configure Print Console so that you can process a 4-up proof test file using the **Job** menu's **Submit File** option, refer to the following sections. These sections, however, are provided as general examples only. For more detailed information on configuring Print Console, refer to the Print Console online help, or to the appropriate workflow-specific Technical Bulletin.

**Note:** Choosing the installation program's Configure Software option merely allows you install/configure the features from section Clean Install, step 10 (see page 8).

### 8.2.1 Configuring Device Media

Verify that Print Console recognizes the device media settings from the output device.

1. Start the Print Console software (if it is not already running).
2. Open the Device Media pane (press the **Configuration** button, and then select **Device Media** option) and verify that the expected device media characteristics are displayed. (These values are read from the output device firmware and stored in the Print Console workstation's registry.)

Device media characteristics for Imation halftone proof media appear as follows (note that the screen shot below shows the list of device media from the Trendsetter Spectrum simulator software; the list you would see for an actual output device may be different:

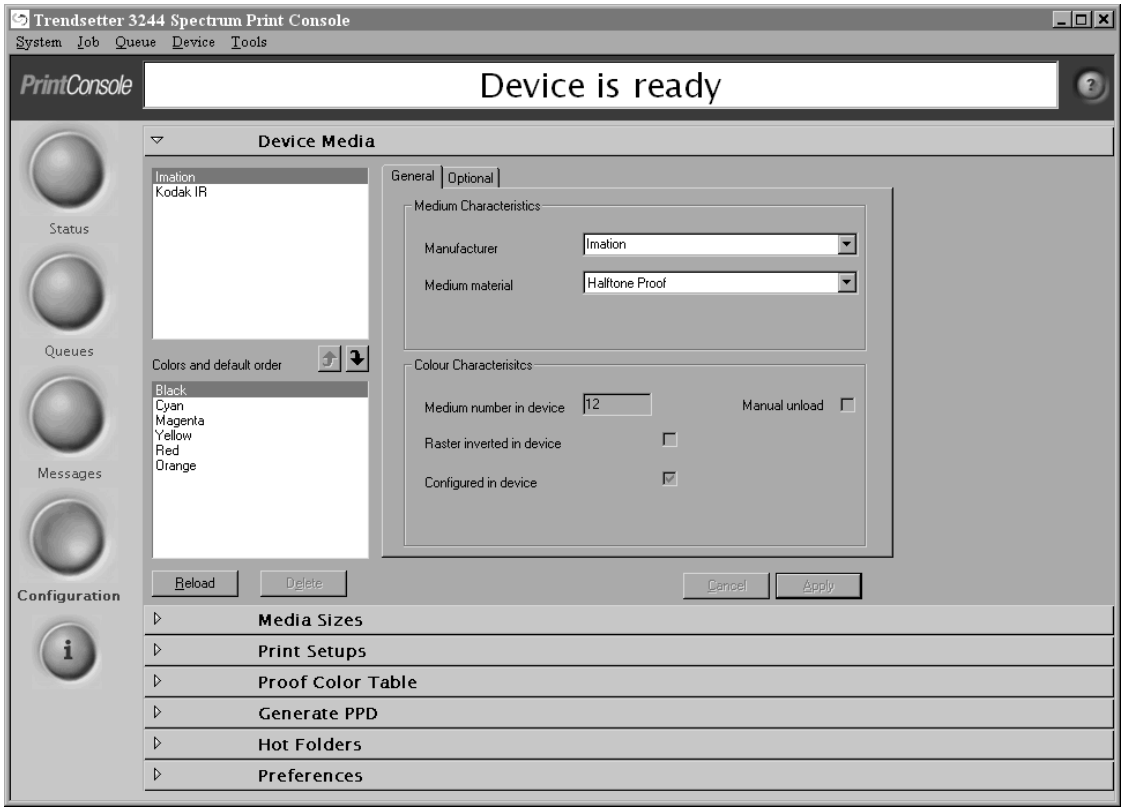



Figure 7

**Note:** The Imation-recommended order for color separations is now K, C, M, Y and the Kodak-recommended order for color separations is now Y, M, C, K.

This change can be made in 2 different places. If the change is made here, via Print Console's Device Media pane,this separation order becomes the default order that appears in the second place that this change can be made, Print Console's Print Setups pane.

### 8.2.2 Configuring Media Sizes

1. Open the Media Sizes pane (press **Configuration** button, and then choose **Media Sizes** pane). Note that there are no default media size names installed with Print Console: *Device media* values are read from the output device firmware (and stored in the Print Console workstation's registry); these device media are used when creating Print Console media size names.

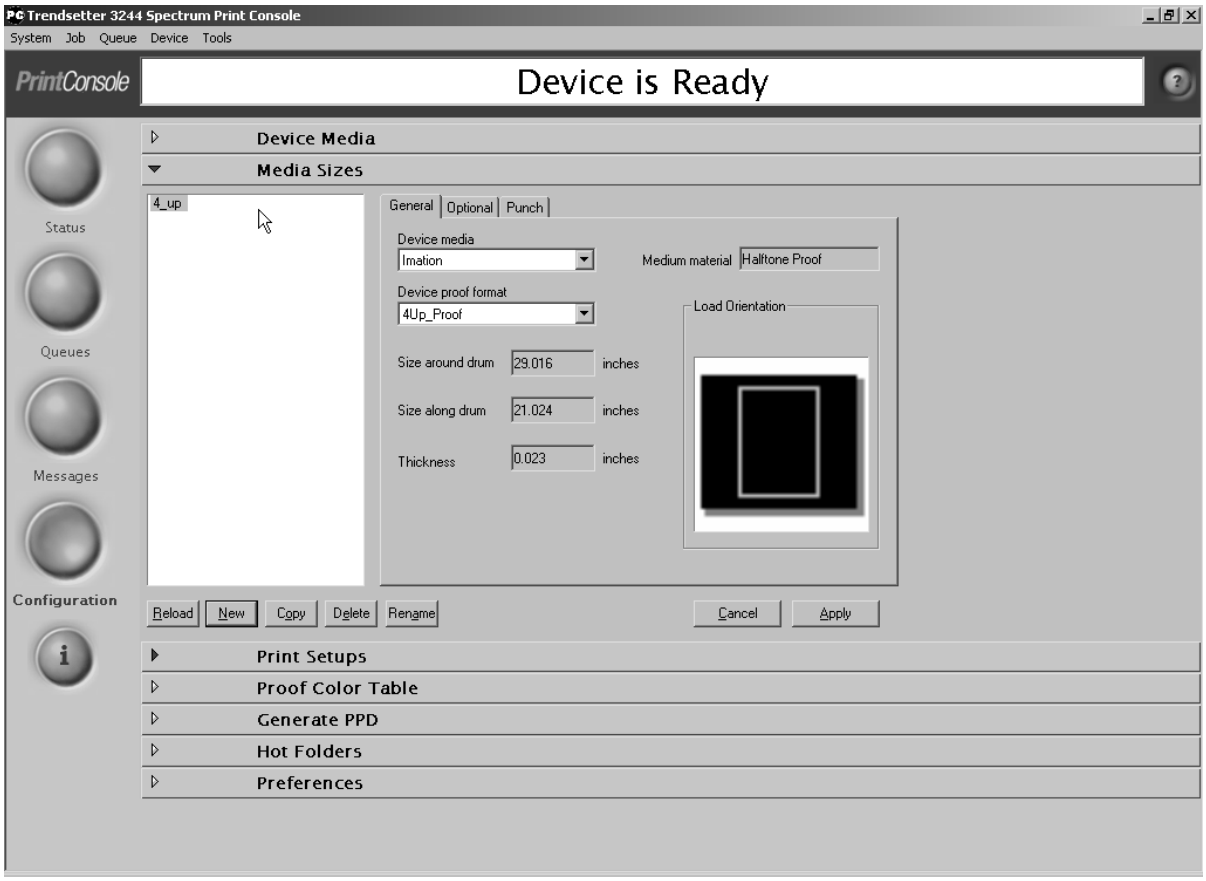



Figure 8

2. Click the **New** button to create a new media size name; the Enter Media Size name dialog box appears:

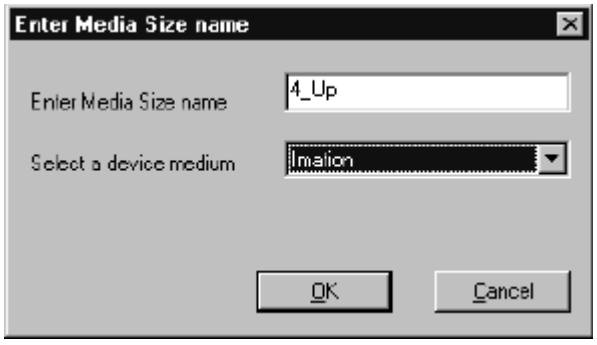



Figure 9

Enter a medium size name (use “4_Up”), select a device medium from the drop-down list (choose Imation media), and click the **OK** button. Note that the name of the medium size cannot be the same as the name of any print setup.

3. Select the appropriate device proof format from the Device Proof Format drop-down list (“4Up_Proof” in this case). The media dimensions are read-only.

4. Click the **Apply** button.

5. Repeat steps 1-4 for all other media sizes you would like to configure.

   If the device medium is a plate, be sure to enter the correct thickness value.

**Note:** Previous versions of output device control software (i.e. Allegro and Platesetter Workstation software) used a factor of 25.402 to convert inches to millimeters. The correct value, though, is 25.4, which Print Console uses for the conversion. Due to rounding effects, Print Console PPD files may reflect a 1-point difference in media sizes.

### 8.2.3 Configuring Print Setups

If you did not migrate print setups from existing workstation software, you will have to create your own.

1. Open the Print Setups dialog box (**Configuration** button, **Print Setups** pane).

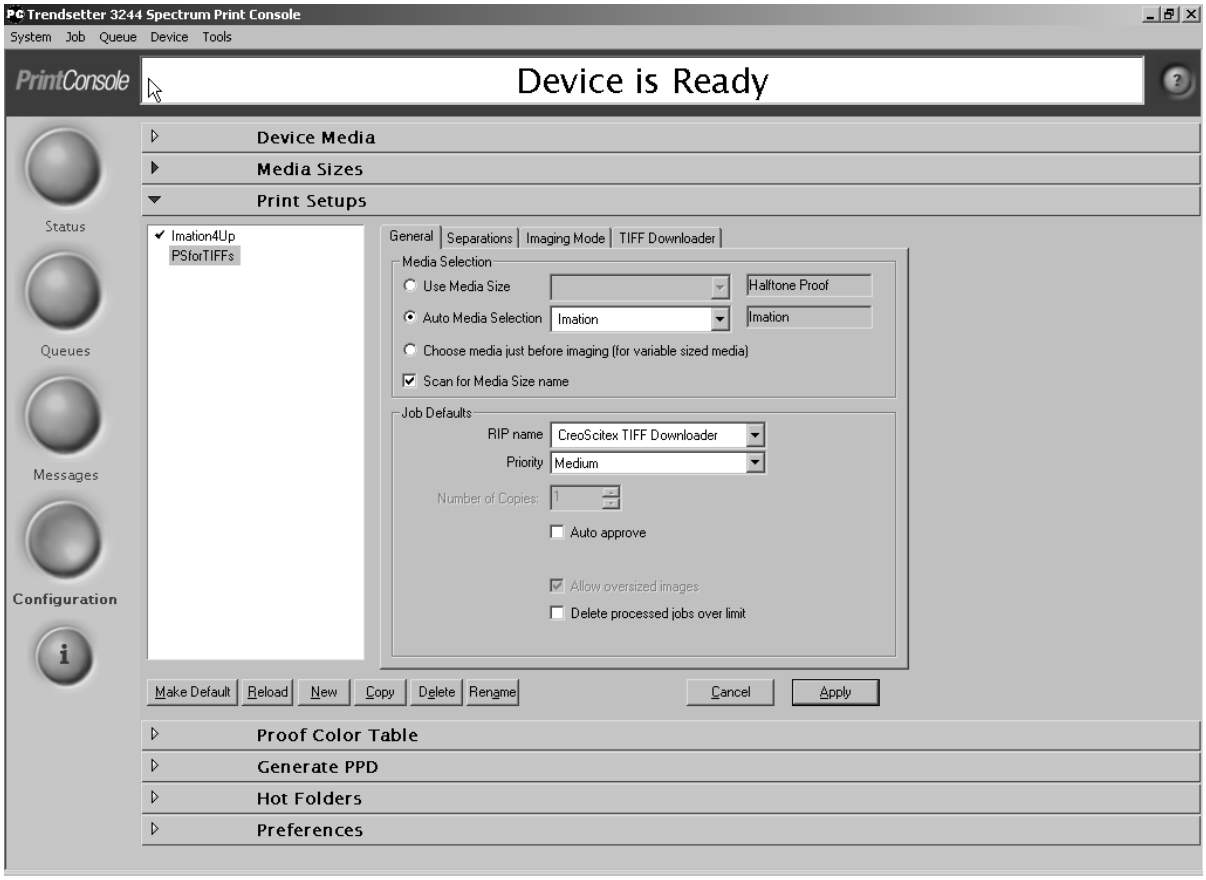



Figure 10

2. With the General tab selected:

   a). Create a new print setup by clicking the **New** button.

   b). In the **Enter Print Setup Name** dialog box, type a name for the print setup (PSforTIFFs, for example), and click the **OK** button. Note that the name of the print setup cannot be the same as any media size name *(due to the way that the Print Console PPD file is read).*

   c). *In the Media Selection box, s*elect either the appropriate media size name *or* the appropriate device media. If it's a ThermoFlex device and you want to use dynamically sized media, select the "Choose media just before imaging" option.

   d). *In the Media Selection box, e*nable or disable the Scan for Media Size name option.

   e). *In the Job Defaults box, s*elect a RIP (TIFF Downloader in this case).

   f). Select a Queue Priority.

3. (The need for this step is rare and depends on the workflow: you do not have to worry about this for a separation-based workflow, which includes a TIFF-based workflow, or for a GDAPI workflow. Consult the workflow-specific documentation to determine the necessity of this step)

   Change the imaging order of the color separations. With the Separation Setup tab selected:

   a). Press the **Add Process** button.

   b). Reorder the separations so that Black is first (i.e. at the top) by selecting the Black separation row and pressing the **up arrow** button three times.

   **Note:** This may be required due to a recent change to the Imation-recommended imaging order of color separations. The required order is now K, C, M, Y.

4. Select any appropriate options available via the Print Setups pane's RIP-specific tab (TIFF Downloader in this case, which allows a number of configuration options, such as mirroring, rotation, cropping, and so on. For information about these TIFF Downloader options, refer to the Configuring TFF Downloader section on page 26).

5. Set the new print setup to be the default by right-clicking on the print setup name and left-clicking on the **Default Print Setup** popup button:




   ...or by clicking the **Make Default** button in the lower-right corner of the Print Setups dialog box.

6. Click the Print Setups pane's **OK** button to save the new, default print setup.

**Note:** If you upgraded from Print Console 2.0 to 2.2, ensure all image shifts migrated correctly. Since image shifting was previously configured on the Media Sizes pane, the value

may not have migrated correctly to all print setups that are attached to a media size that had an image shift.

## 8.3 Configuring Direct Connections

### 8.3.1 Installing the Brisque Agent

In order to connect a Brisque (version 4.0) to Print Console, you must install the Brisque Agent, an application that enables the GDAPI (Generic Device Application Programming Interface) between the two applications.

You can download the latest version of Brisque Agent from the Technical Library: navigate to the Print Console 3.0 pages and choose **Downloads**.

When installing this program, remember to install the Brisque Agent…

- On the *same* workstation and drive as Print Console.
- *After* installing Print Console

If you are upgrading to a newer version of the Brisque Agent, either

- Remove the old version from the workstation
- Rename the old version of Brisque Agent to brisqueagent.bat.old. This creates a back up of the old file.

For more information on connecting the Brisque to a Trendsetter, refer to the Brisque to Trendsetter Spectrum Connectivity technical bulletin.

To install the Brisque Agent on the Print Console workstation:

1. Shut down all applications, including Print Console
2. From the Print Console CD, double-click on the **setup.exe** file in the BrisqueAgent directory (**\BrisqueAgent\setup.exe**).
3. The Welcome dialog box appears. Click **Next** to continue (or click **Cancel** to exit the setup program).
4. The BrisqueAgent Setup dialog box appears. Click **Next** to continue.
5. When the Brisque Agent files are installed, click **Finish** to exit the installation and restart the computer.
6. After the computer has re-booted, open the **brisqueagent.bat** file and ensure the com port is the same as the com port that the Trendsetter diagnostic cable is connected to. If not, change the com port number in the file to the correct one. Save and close the file.
7. To ensure the connection has initialized, start Print Console and click the RIP button on the Status screen. If Creo Expose appears in the list with a green light beside it, it is registered and ready to submit jobs.

**Note:** The Brisque Agent takes about 30 seconds to initialize.

Refer to the Brisque-to-Trendsetter Spectrum Connectivity document for complete information about connecting a Brisque to a Trendsetter.

### 8.3.2 Licensing Direct Connections

This step is only necessary if connecting a 3rd party RIP directly to Print Console via the GDAPI (Generic Device Application Programming Interface). It is not necessary for Prinergy, Brisque, or TIFF Downloader connectivity. For TIFF Downloader licensing information, see the TIFF Downloader Licensing section on page 27.

Enter the Direct Connection license key via the Licenses tab in the Preferences pane (**Configuration** button, **Preferences** pane, **Licenses** tab):

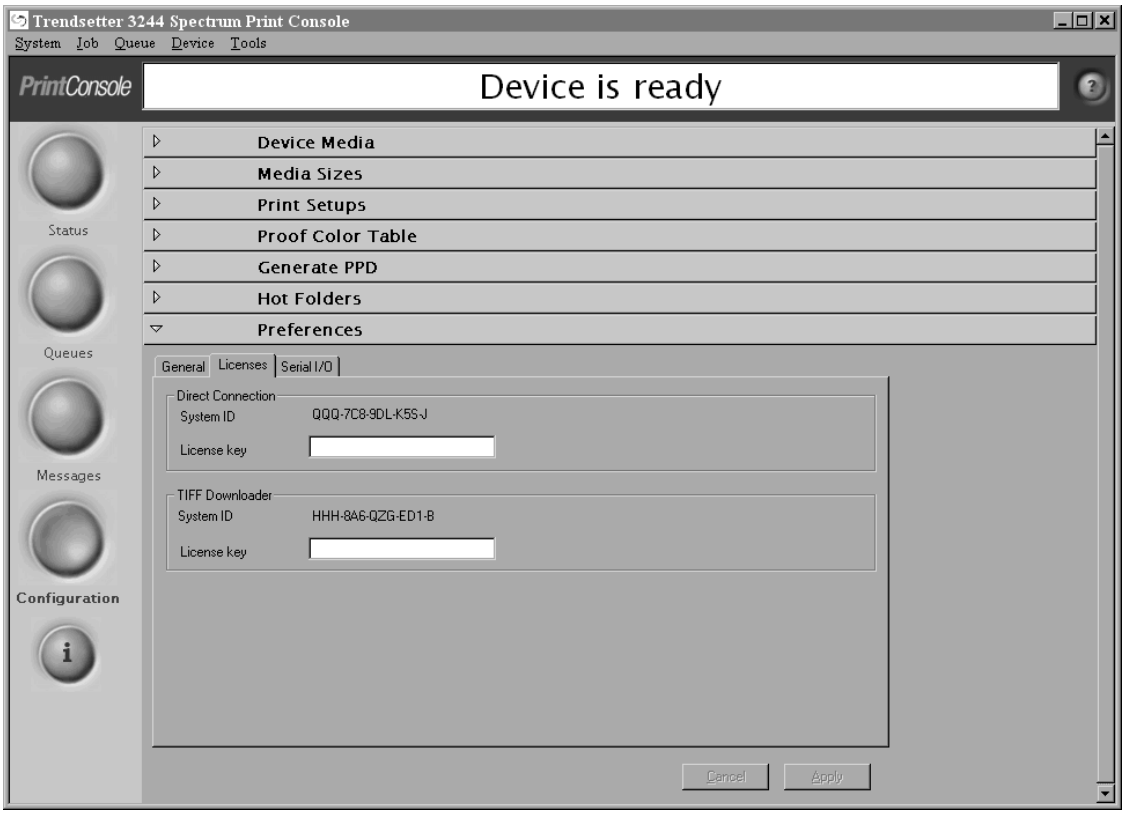



Figure 11

## 8.4 Configuring TIFF Downloader

Systems submitting one-bit TIFF files to the device via Print Console must enable, license, and correctly configure the TIFF Downloader. The TIFF Downloader is a tool that opens TIFF files and outputs the raster to the output device as commanded by Print Console. The following sections describe some of the basic TIFF Downloader configurations. For a comprehensive description, please refer to the TIFF Downloader sections of the online help. This version of Print Console 3.1 includes TIFF Downloader version 3.1.

### 8.4.1 TIFF Downloader Overview

If you selected the TIFF Downloader option when you installed Print Console, TIFF Downloader will already be enabled, as the necessary command line will appear in the Print Console **begin.inf** file:

```
"tiffdownloader /testscsi /auxthreads4 /sws1048576 /tib70" /unique
/noconsole /min /exit 0 /restartdelay 10
```

Parameters are as follows:

- **/le<float>**—no longer valid in the command line; now specified in the **Device Margins** dialog box in the **Service** pane.
- **/te<float>**—no longer valid in the command line; now specified in the **Device Margins** dialog box in the **Service** pane.
- **/transform**—no longer valid in the command line; see the **TIFF** tab in the **Print Setups** pane.
- **/ib<int>**—force input buffer size in MB
- **/tib<int>**—force input buffer size in MB when rotating by 0 or 180 degrees (For Print Console 2.0, force the input buffer size when transforming)
- **/ob<*int*>**—no longer valid
- **/inbuffers<*int*>**—specify number of input buffer per image, defaults to 2.
- **/scsibuffers<*int*>**—specify number of output buffers, defaults to 2.
- **/clipbuffers<*int*>**—specify number of intermediate buffers, defaults to 2.
- **/noxymatch**—obsolete: X & Y resolutions no longer have to match by default.
- **/originalg4**—use fixed version of original libtiff G4 decoder
- **/bitmap**—write output to a bitmap file instead of SCSI port (for testing)
- **/regver2.0**—enables the TIFF Downloader to work with Print Console 2.0.x
- **/regver1.0**—obsolete
- **/tiff**—write output to TIFF file instead of SCSI port (for testing). Default compression is G4. See also, **/outzip** and **/outnc**
- **/simscsi**—do not output to SCSI port, delay approx. transfer time (for testing)

- **/testscsi**— test SCSI connection between TIFF Downloader and device on start-up. The startup test is disabled by default.
- **/auxthreads<*n*>**—run more than one input thread per file, where ***n*** represents the number of auxiliary threads to spawn.
- **/sws<*size in bytes*>**— size of the output image data blocks sent to the SCSI port
- **/outzip**—if /tiff is enabled, specifies that the output TIFF file compression scheme should be Zip (i.e. Flate or Zlib).
- **/outnc**—if /tiff is enabled, specifies that the output TIFF file should not be compressed
- **/testlzw**—no longer needed, LZW is enabled by default
- **/file=*filename***—instructs the TIFF Downloader to operate in stand-alone mode. A single plate is imaged using the <filename> as the input TIFF, and then the TIFF Downloader exits. The TIFF Downloader uses parameters from a setup file if **/setup=***filename* is specified; otherwise, it uses default parameters.
- **/setup**—when no filename is specified, the TIFF Downloader creates (or overwrites) a default setup file, **TDLSetup.txt**, in the current directory and exits (see **/setup=*filename***).
- **/setup=*filename***—instructs the TIFF Downloader to operate in stand-alone mode using parameters from the specified setup file. The TIFF Downloader images a single plate and then exits. The setup file must have been created by the /setup command. Note that the filename specified by **/file=** overrides the filename in the setup file when not ganging.
- **/statsfile=*filename***—appends timing statistics from each image to the end of the specified file. If no path is specified, the file is assumed to be in **PrintConsole\bin**. If the file does not already exist, it is created. Check the size of this file periodically because the TIFF Downloader will never delete or rename it.

Many of these command line switches are not normally used; however, they may be useful for testing or for special cases. For example, if you are having problems with a file that is transformed, you may want to increment the /tib<n> command, or if you are having problems with retraces, you may want to do the same to the /sws<n> command.

### 8.4.2 Licensing

*Licensing for General Use*

The TIFF Downloader requires a license key for general use. To obtain the license key, send an email to LicenseKey@creo.com that includes the customer name, workstation number, and the TIFF system ID number (**Configuration** screen, **Preferences** pane). Enter the license key in the same dialog box where you found the TIFF system ID number.

**Note:** It may take as much as a day to obtain a license key this way. If urgent, contact Workflow Production directly.

If the license key is not entered, a one-inch by five-inch “Creo Diagnostic Tool” label will be superimposed (up to 3 times, depending on the media size) across the top of the imaged output media. Once entered, the license key will take effect on the next image.

*Enabling Web Growth, Plate Ganging, or LZW Compression*

If a customer has paid for plate ganging, web growth, or LZW compression support, you can enable these on the **Service** pane.

To enable these options,

1. Go to the **Configuration** screen and press CTRL+ALT+S.
2. Enter the **Service Pane** password.
3. Select the **Enabled Features** option and enable the required functions.
4. Re-start Print Console for the changes take effect.

For detailed information about configuring web growth compensation and plate ganging, see the Print Console online help.

### 8.4.3 Compression

All image files should be compressed. We recommend using either G4 or LZW (for LZW licensing information, see the Enabling Web Growth, Plate Ganging, or LZW Compression section on page28). Some types of files (like those with stochastic screening, for example) *may not* compress properly with the G4. The TIFF Downloader supports Flate (also known as Zip or Zlib) compression, and although not widely supported at the present time, it performs well with most file types.

If the new G4 decoder cannot process a particular G4 file, the original G4 decoder *may* be able to. Enable the original G4 decoder via the appropriate **begin.inf** file command line using the **/originalg4** switch as shown below (note the placement of the quotation marks):

**"tiffdownloader /auxthreads4 /sws1048576 /tib70 /originalg4" /unique /noconsole /min /exit 0 /restartdelay 10**

**Note:** TIFF files cannot be larger than 4Gb. However, the uncompressed image size *can* be larger than 4GB, therefore, large images (like larger VLF images) *must* be compressed.

The following are the standard TIFF compression schemes available in the TIFF Downloader:

- Uncompressed
- CCITT G3 fax encoding
- CCITT G4 fax encoding
- LZW (for licensing information, see the Enabling Web Growth, Plate Ganging, or LZW Compression section on page28).
- Packbits (a form of Run Length Encoding (RLE), good only for sparse images, i.e. images with lots of white space; poor for screened images)

- Modified Huffman (a form of Run Length Encoding (RLE), good only for sparse images, i.e. images with lots of white space; poor for screened images)
- Flate, also known as Zip or Zlib, not officially part of the TIFF specification, but gaining acceptance

### 8.4.4 ThermoFlex Digital Masking

TIFF Downloader supports ThermoFlex "digital masking" mode (previously called "tinting") for certain media via the Print Console software, although this option is not available to regular users/operators. Digital masking is selected for a device media by first selecting the media via the Digital masking tab in the **Service** pane's **Configure System** dialog box, and then selecting the Digital Masking Scheme in the Device Media pane (the Digital Masking Scheme box only appears once the media is correctly set up in the Digital Masking tab). Tinting (Digital Masking) schemes must be entered directly in **TintingSchemes** under the **PrintConsole\Vx.x** registry key.

Digital Masking will significantly increase the amount of processor time required by the TIFF Downloader. A single processor can tint a typical file at a rate that is barely fast enough to keep up with the output device. A dual-processor machine will perform much better because the tinting algorithm is executed in a thread separate from the main TIFF Downloader threads.

Note that if the TIFF Downloader detects an error with the any of the tint parameters, the image will fail and a message that begins with "Tinting Library Error…" will be displayed in the Print Console History window. This message *should* contain enough information to fix the problem.

### 8.4.5 Image Mirroring and Rotation

TIFF Downloader supports two forms of mirroring (around and along the drum axis), which are independent of rotation options. Mirroring and rotation is necessary to support the Spectrum digital halftone proofing devices, or for TIFF files that are incorrectly mirrored for the intended media. This feature is selected via the TIFF Downloader tab in the Print Setups pane.

TIFF Downloader can mirror the image with little degradation in performance. Note that the image is mirrored around the center of the plate, not the center of the image. The leading and trailing edge clips are applied after the image is mirrored. In other words, the leading edge clip still applies to the leading edge of the plate.

Tiled files can now be rotated and mirrored, which can be useful if the image has not been pre-rotated by the RIP, with little or no noticeable performance degradation. Stripped files, though, will take longer since they must first be re-written to a temporary tiled file. Stripped files will therefore be delayed at the start while the TIFF Downloader writes the temporary file. The delay will be approximately 2 to 5 minutes for a gigabyte image (i.e. 32"x44" at 2400 dpi). If possible, the temporary file is be placed in a temporary directory in the image file's path. If there is not enough free space, the temporary directory will be created in the TIFF Downloader's executable path. The image will fail if adequate free space is not found.

The following shows how to configure the TIFF Downloader to write the temporary file to a different drive for better performance:

1. Open the TIFF Downloader key in the registry: **HKEY_LOCAL_MACHINE\SOFTWARE\Creo\PrintConsole\v2.0\TiffDownloader**.
2. Add a new string value (right-click the **TIFFDownloader** key and select **New** > **String Value**).
3. Name the new key "**TransformTempFolder**".
4. Double-click **TransformTempFolder**. In the **Edit String** dialog box, enter the path to the temporary file, for example "**e:\TDLTemp**". Make sure this temporary directory is not on the same drive as the Spool drive.

### 8.4.6 Image Clipping/Margins

TIFF Downloader supports clipping of all four sides of output media via the Print Console software, although this option is not available to regular users/operators. These clippings can be entered for each device media via the Material Margins tab in the **Service pane's Configure System** option.

The margins define areas of the media that cannot be imaged. The output device will not allow imaging in these areas, and therefore the TIFF Downloader removes these areas from the image file before it is output. The exact handling of the margins depends on the sizes of the image and the media, and whether you have enabled the **Center Image** options (see the Print Console online help for more information on centering).

Without the **Center Image** options enabled, the TIFF Downloader removes the leading and home edge margins from the image. The trailing and away edge margins are removed from the image only if it extends into these regions on the plate.

For example, assume the following material margins are set:

Leading edge: 240 mils
Trailing edge: 300 mils
Home edge: 100mils
Away edge: 100 mils

If the 32" by 44" version of a file is to be imaged on a 32" by 44" plate, all margins would be applied and the TIFF Downloader would output an image that is 31.45" by 43.8". If this same file were to be imaged on a 22" by 33" plate, the TIFF Downloader would produce a 21.45" by 32.8" image.

There is a minor limitation, however, in the way the TIFF Downloader handles the leading edge clip (for the normal case where there is no mirroring or rotating). The leading edge clip is converted to pixels and rounded down to the nearest multiple of 8. For example, if a leading edge clip of 115mils is specified for a 2400 DPI image, the actual leading edge clip will be 113.3 mils (corresponding to 272 pixels instead of 276). The image position on the plate will be shifted by the rounded off amount, but the overall image size will not be adjusted (i.e. the trailing edge clip is increased by the rounded off amount). The same type of rounding will occur with the home edge clip for transformed files.

## 8.5 Configuring Animation Settings

You have the option of turning the animation on or off, or setting it to Single-Frame mode. Select Print Console's **Configuration** button and choose the **Preferences** pane. In the Preferences tab, select Single-Frame, Off, or Full in the **Animations** drop-down list.

## 8.6 Other Configurations

### 8.6.1 Configuring New Users for Print Console

When you install Print Console, the installation automatically creates a default user name called PCOperator with given set of permissions. If you enable the auto-logon option during the installation, the system automatically logs in as PCOperator and the application works correctly. If, however, you did not enable auto-logon, and if you do not log in as PCOperator when prompted, you may not have enough permissions to process jobs. Specifically, if a user does not have the "Increase Scheduling Priority" permission, the TIFF Downloader may issue the following error message on every image: **Insufficient memory available, performance may be affected**.

To fix this problem, add the "Increase Scheduling Priority" permission to any user names that log into Print Console:

1. From the **Control Panel**, select **Administrative Tools** and then **Local Security Policy**. The **Local Security Settings** dialog box appears.
2. Select **Local Policies** and then **User Rights Assignment**.
3. Scroll down to find the **Increase Scheduling Priority** entry. Right-click it.
4. Select **Security**, and then **Add**. Scroll down to find the account name that Print Console is started from (normally PCOperator). Select it.
5. Choose **Add**, and then select **OK**.

### 8.6.2 Configuring the Workstation to Support Dual Workflows (Prinergy & Brisque) Without a SCSI Switch

In a Prinergy workflow, all Render stations running Print Console have hyphenated host names, for instance YCS527-250. The Brisque, or any other workflow running on a Unix platform, does not recognize hyphenated hostnames. So, when you try to connect the Brisque to the Render station where Print Console is running, the Mount Pro won't connect because the "local Mount Point" name is illegal.

Therefore, to run submit jobs to Print Console from a Prinergy and Brisque workflow simultaneously, you have to add a host name alias in front of the actual host name on both the Render station and the Brisque.

### 8.6.3 Specific Configurations

For more detailed information about configuring Print Console, refer to the Print Console Online Help system.

# APPENDIX 1: COM PORT ASSIGNMENTS (FOR STANDARD HARDWARE CONFIGURATIONS)

| **Data General Servers: COM1 and 2 are located in the motherboard. COM3 and 4 are located on the DuoCom Board.** | |
|---|---|
| COM1 | Workstation Serial Interface |
| COM2 | UPS |
| COM3 | Recorder Diagnostics |
| COM4 | Modem |

| **Dell Servers:** COM1 and 2 are located in the motherboard. COM3, 4, 5, and 6 are located on the Digiboard Classic Board. | |
|---|---|
| COM1 | Modem |
| COM2 | UPS |
| COM3 (P1)* | Workstation Serial Interface |
| COM4 (P2)* | Recorder Diagnostic |
| COM5 (P3)* | Head Diagnostic |
| COM6 (P4)* | Harmony Densitometer Interface |

**The P1, P2, and so on, refer to the cable numbers.*

Follow the directions in the Readme document to ensure this does not happen.