Software Upgrade

Before Upgrading Software to Lotem Xpose 1.1


1. Verify that the Lotem Xpose is working – Expose a sample job.
2. Write down special settings used in Templates, Press Format, User Screen Sets dialog boxes.
3. Exit the Lotem Xpose and Shutdown PC Controller application.
4. Reboot the system to ensure smooth upgrade.

Upgrading Software Procedure for Lotem Xpose 1.1

Removing the Existing Version

Note: Do not use **Remove** option on the new version CD in the upgrade procedure.

1. Go to **Start** > **Settings** > **Control Panel**.
2. Click **Add/Remove Programs**.
3. Select **Lotem Expose**.
4. Click the **Change/Remove** button. The Install Shield Wizard appears.

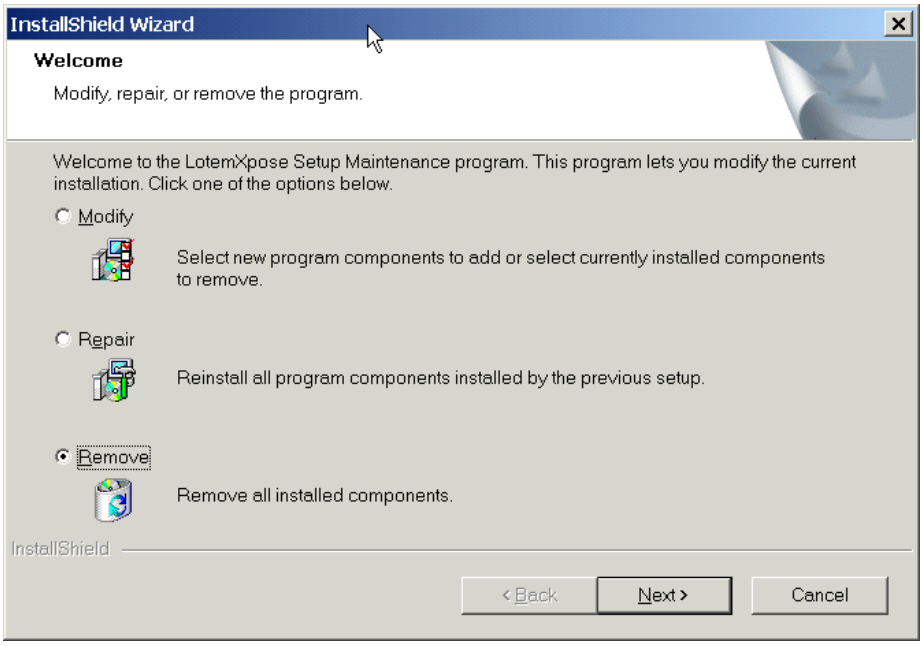

5. Select **Remove** and click **Next**.
6. Click **OK**. Wait for your configurations to be saved. This takes several minutes.

Note: The configuration settings are automatically saved when you remove the Lotem Xpose program. Therefore, manual saving is unnecessary.

7. In the next several dialog boxes, select **Don't display this message again** and then click **Yes**.
8. A message appears asking whether to delete the destination directory, click **Yes**.
9. A message appears stating that a '.dll' cannot be found. Click **OK** to continue installation.
10. Select **Yes** in the Complete dialog box and click **Finish**. The system will reboot.

Installing the New Version

1. Insert the CD into the CD drive.
2. Go to **My Computer** > **CD drive**.
3. Double-click the **Lotem Xpose 1.1** folder.
4. Double-click **Setup.exe**. The Install Wizard appears. Click Next and proceed according to the wizard instructions. When the license agreement appears, click **Yes** to continue.
5. Make sure to select the **Typical** installation. The Settings dialog box appears.
6. Select **Yes** in the Complete dialog box and click **Finish**. The system will reboot.

Note: Do not use the Restore Settings option. The settings from the old version of Lotem Xpose are not supported!

Note: If the upgrade procedure fails, or if you want to re-install the previous Lotem Xpose version, then you CAN use the Restore Settings (Restore Config) option.

Launch the Lotem PC Controller.


To Configure Lotem Xpose with Lotem 400

You must configure Lotem Xpose every time you install or upgrade the software.


1. Close all open applications.
2. On the desktop, click the **Lotem 400 PC Controller** icon and wait for the PC Controller application to open.
3. In the Lotem Xpose warning regarding no configuration, click **OK**.
4. In the SxExMainBarApp prompt, click **OK**.
5. Select **Start** > **Program** > **Lotem Xpose**, and then click **Config**.

6. In the Config wizard, answer each question as follows, and then click **Next** after each answer:
   - Logic Name? **Lotem 400**
   - Device Group? **Platesetter**
   - Device Family? **Lotem**
   - IP Address? **Local Host**

7. In the Results dialog box, click **Next**.

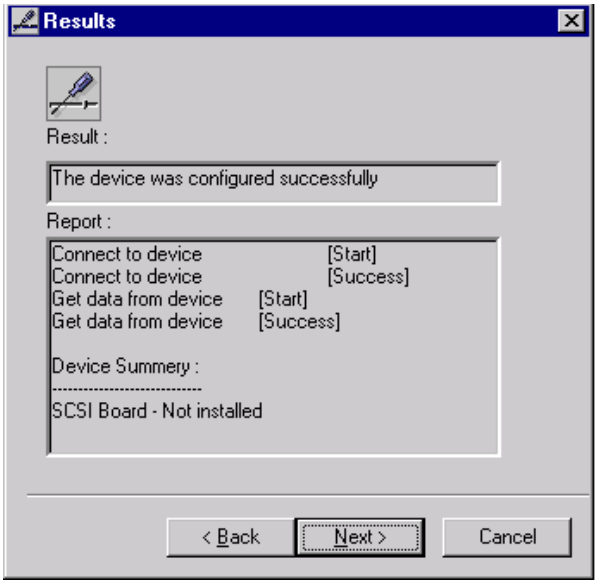

8. In the Screen Board dialog box, click **Finish**, and then click **OK** to confirm that the configuration is performed.

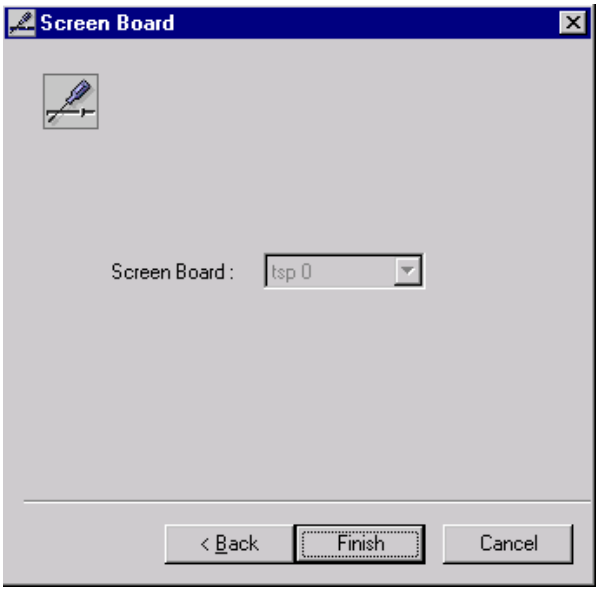

9. Launch Lotem Xpose. **Start** > **Program** > **Lotem Xpose** > **Launch Pad**.