Cold Start Installation Guide

English

Lotem 400 Xpose

653-00374B-EN Rev C

www.creo.com

Copyright

Copyright © 2005 Creo Inc. All rights reserved.

No copying, distribution, publication, modification, or incorporation of this document, in whole or part, is permitted without the express written permission of Creo. In the event of any permitted copying, distribution, publication, modification, or incorporation of this document, no changes in or deletion of author attribution, trademark legend, or copyright notice shall be made.

No part of this document may be reproduced, stored in a retrieval system, published, used for commercial exploitation, or transmitted, in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the express written permission of Creo Inc.

This document is also distributed in Adobe Systems Incorporated's PDF (Portable Document Format). You may reproduce the document from the PDF file for internal use. Copies produced from the PDF file must be reproduced in whole.

Trademarks

The Creo wordmark, Creo logo, and the names of the Creo products and services referred to in this document are trademarks of Creo Inc.

Adobe, Acrobat, Adobe Illustrator, Distiller, Photoshop, PostScript, and PageMaker are trademarks of Adobe Systems Incorporated.

Apple, iMac, Power Macintosh, AppleShare, AppleTalk, TrueType, ImageWriter, and ImageWriter are registered trademarks of Apple Computer, Inc. Macintosh is a trademark of Apple Computer, Inc., registered in the U.S.A. and other countries.

PANTONE, Hexachrome, PANTONE Hexachrome, and PANTONE MATCHING SYSTEM are the property of Pantone, Inc.

PEARL, PEARLsetter, PEARLhdp, PEARLdry, and PEARLgold are registered trademarks of Presstek, Inc.

XEROX®, The Document Company®, the digital X®, and DocuColor are trademarks of XEROX CORPORATION.

Other brand or product names are the trademarks or registered trademarks of their respective owners.

FCC Compliance

The Creo equipment referred to in this document complies with the requirements in Part 15 of FCC Rules for a Class A computing device. Operation of the Creo equipment in a residential area may cause unacceptable interference to radio and TV reception, requiring the operator to take whatever steps are necessary to correct the interference.

Limitation of Liability

The product, software or services are being provided on an “as is” and “as available” basis. Except as may be stated specifically in your contract, Creo Inc. expressly disclaims all warranties of any kind, whether express or implied, including, but not limited to, any implied warranties of merchantability, fitness for a particular purpose and non-infringement.

You understand and agree that Creo Inc. shall not be liable for any direct, indirect, incidental, special, consequential or exemplary damages, including but not limited to, damages for loss of profits, goodwill, use, data or other intangible losses (even if Creo has been advised of the possibility of such damages), resulting from: (i) the use or the inability to use the product or software; (ii) the cost of procurement of substitute goods and services resulting from any products, goods, data, software, information or services purchased; (iii) unauthorized access to or alteration of your products, software or data; (iv) statements or conduct of any third party; (v) any other matter relating to the product, software, or services.

The text and drawings herein are for illustration and reference only. The specifications on which they are based are subject to change. Creo Inc. may, at any time and without notice, make changes to this document. Creo Inc., for itself and on behalf of its subsidiaries, assumes no liability for technical or editorial errors or omissions made herein, and shall not be liable for incidental, consequential, indirect, or special damages, including, without limitation, loss of use, loss or alteration of data, delays, or lost profits or savings arising from the use of this document.

Patents

This product is covered by one or more of the following U.S. patents:

RE37,376	5,412,737	5,699,174	6,014,471	6,189,452	6,396,422	6,579,660
D478,608	5,420,702	5,699,740	6,016,752	6,191,882	6,407,849	6,587,211
4,558,302	5,420,722	5,708,736	6,043,865	6,204,874	6,409,331	6,589,710
4,743,091	5,459,505	5,713,287	6,060,208	6,205,364	6,414,755	6,590,635
4,992,864	5,473,733	5,742,743	6,063,528	6,208,369	6,422,801	6,593,064
5,049,901	5,481,379	5,764,374	6,063,546	6,214,276	6,425,565	6,601,888
5,113,249	5,488,906	5,771,794	6,072,518	6,217,965	6,430,136	6,605,407
5,132,723	5,508,828	5,785,309	6,090,529	6,252,241	6,435,091	6,609,459
5,155,782	5,509,561	5,802,034	6,093,447	6,252,522	6,441,914	6,611,363
5,157,516	5,517,359	5,813,346	6,096,461	6,255,033	6,443,571	6,618,187
5,177,724	5,519,852	5,818,498	6,098,544	6,260,482	6,450,092	6,628,435
5,208,818	5,576,754	5,854,883	6,107,011	6,266,080	6,456,396	6,632,584
5,208,888	5,579,115	5,861,904	6,112,663	6,266,134	6,471,335	6,637,329
5,247,174	5,583,551	5,861,992	6,115,056	6,267,054	6,476,342	6,637,860
5,249,067	5,592,309	5,875,288	6,116,160	6,268,948	6,476,931	6,640,713
5,283,140	5,594,556	5,894,342	6,121,996	6,270,204	6,477,955	6,641,772
5,291,273	5,600,448	5,900,981	6,130,702	6,283,589	6,493,064	6,641,978
5,305,091	5,608,822	5,934,196	6,134,393	6,295,076	6,494,965	6,646,669
5,323,248	5,615,282	5,946,426	6,136,509	6,299,572	6,503,691	6,648,468
5,325,217	5,625,397	5,947,028	6,137,580	6,318,266	6,509,903	6,652,088
5,339,176	5,625,766	5,958,647	6,147,789	6,328,408	6,511,163	6,654,147
5,343,059	5,636,330	5,966,504	6,158,345	6,336,708	6,520,084	6,660,997
5,355,446	5,649,220	5,969,872	6,159,659	6,340,817	6,530,317	6,661,561
5,359,451	5,650,076	5,973,801	6,164,637	6,352,816	6,541,181	6,665,048
5,359,458	5,652,804	5,986,819	6,165,658	6,353,216	6,544,336	6,665,121
5,367,360	5,680,129	5,995,475	6,180,325	6,366,339	6,545,772	6,670,986
5,384,648	5,691,823	5,996,499	6,181,362	6,371,026	6,550,388	6,684,783
5,384,899	5,691,828	5,998,067	6,181,439	6,377,739	6,564,018	6,704,123
5,412,491	5,696,393	6,003,442	6,186,068	6,387,597	6,567,713	

Creo Inc.
3700 Gilmore Way
Burnaby, B.C., Canada
V5G 4M1
Tel: +1.604.451.2700
Fax: +1.604.437.9891

http://www.creo.com
653-00374C

Revised January 2005

Lotem 400 Xpose Cold Start

Overview 2

Before You Start 2

Installing BIOS Settings 7

Installing Windows NT Operating System for Xpose (disk image) 8

Defining Disk E 11

Installing Lotem 400 Lotem Controller Application 13

Installing PC MACLAN 15

Installing Lotem Xpose 19

Changing AppleTalk Settings 24

Appendix 26



Overview

This guide describes how to obtain and save all necessary files and parameters, and to reload all the required Lotem® 400 Xpose software in the following circumstances:

- System disk crash
- Setting up the system after a factory cold start installation.



Note: You do not need to perform a cold start installation when a customer upgrades the software.

Before You Start

This section describes the software required for the Lotem 400 Xpose platesetter, and the parameters to save before performing the cold start installation. A flowchart is provided on page 3.

Software for Lotem 400 Xpose


Before performing the cold start installation, check that you have the following software and support kit:

- Lotem 400 Controller software CD
- Lotem Xpose CD
- Lotem 400 Xpose Support Kit (513K1R110)
  - ❒ MicroSoft® Windows NT® operating system CD (disk image)
  - ❒ BIOS setup disk for CPU
  - ❒ L800/400 startup A disk
  - ❒ Software installation procedure (printed on the CD cover)



Note: This kit comes with the Lotem 400 Xpose platesetter and can be ordered separately for service use.

Lotem 400 Xpose Cold Start Installation Flowchart

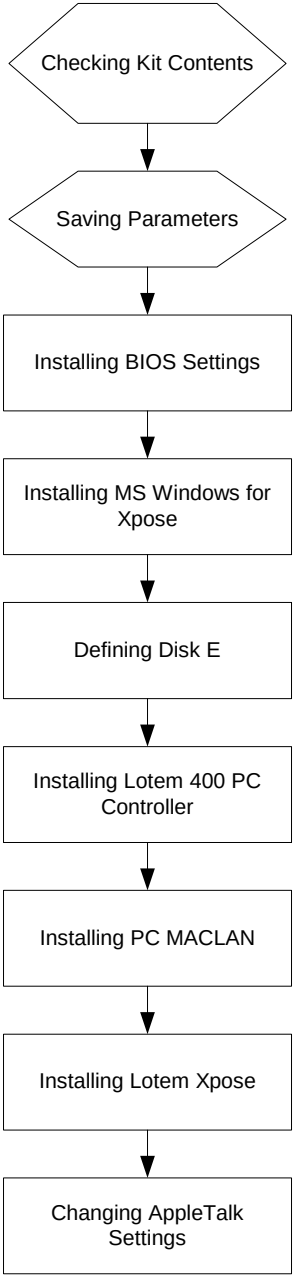

Saving Files and Parameters

The factory-set parameters of each new platesetter are saved on the machine parameters disk, which is attached to the E-box.



Note: Save the machine parameters and settings onto the disk frequently, so that they are available in case of a system crash

If the system disk crashes, or the software is corrupted, you cannot open the machine doors or back up the parameters. In such an event:

- Open the doors manually, as described in the *Lotem 400 Installation Guide*.
- Use the machine parameters saved on the disk to restore the machine parameters in the system.
- Obtain the IP address from the system administrator.

During a cold start installation, existing parameters are automatically deleted. Therefore, it is recommended that you save the following files and parameters in advance, so that you can reload them after the cold start.

- Registry file
- DataBase folder
- PC MacLan license number
- Lotem Xpose settings
- Lotem Controller TCP/IP address



Note: In case your system crashed and you cannot save these parameters, proceed to *Installing BIOS Settings* on page 7.

To save the Registry file:

1. Turn on the Lotem 400 Xpose platesetter.
2. Start the Lotem Controller application.
3. Manually open the right side door of the platesetter.
4. Insert a formatted write-enabled disk into the disk drive.



Note: You can save both the **Registry** file and the **DataBase** folder on the disk.

5. On your PC, access Regedit.

   Select **Start** > **Run**, type `regedit` in the **Run** box, and click **OK**.

6. Export the Lotem 400 registry file.

   Registry > **Export Registry file**.

7. Save the **Registry** file on the disk.
8. Exit the registry.
9. Leave the disk in the disk drive.

To save the DataBase folder

1. Confirm that the write-enabled disk is in the disk drive.
2. In Windows Explorer, copy the **DataBase** folder.

   C: > **Lotem** > **Lotem400** > **DataBase**

3. Save the **DataBase** folder to the disk.
4. Close Windows Explorer and remove the disk from the disk drive.

To save the PC MACLAN license number:



Note: If your operating system is version OSX (10) or later, you do not need to install PC MACLAN. Proceed to *To save the Lotem Xpose settings:* on page 6.

- Locate the PC MACLAN license number in one of the following locations, and write it down.
  - **Accessory kit**: On the Windows manual, the license number appears on a label near the WIN NT license label.
  - **Platesetter**: Inside the platesetter, near the WIN NT license label.
  - **Lotem 400 registry disk**: **Lotem400V\MachineHKEY_LOCAL_MACHINE\SOFTWARE\Scitex\Projects\Lotem400V\MACHINE\Lotem400 PSM MACLAN License**
  - Desktop: **Start** > **Programs** > **PC MACLAN** > **AppleTalk Settings**
  - **TechPlanet**: Lotem 400 Xpose (PS/M)/Downloads (http://techplanet.creo.com/output/computer_to_plate/lotem400/content/software/index_reg400PSM.htm).

To save the Lotem Xpose settings:

➢ Select **Start** > **Programs** > **Lotem Xpose** > **Save Settings**.
The file is automatically saved under E:\dataVolumes\Config_save.

To save the Lotem Controller TCP/IP address:

1. Select **Start** > **Settings** > **Control Panel**.
2. In the Control Panel window, select **Network.**
3. In the **Network** dialog box, click the **Protocols** tab and double-click **TCP/IP address.**
4. Write down the information in the following parameters:
   - ❒ **IP Address**
   - ❒ **Subnet Mask**
   - ❒ **Default Gateway**
5. Click **OK** twice and close the Control Panel.

Installing BIOS Settings

If you suspect that there are problems with the CPU BIOS, load the BIOS from the automatic BIOS diskette. The type of CPU that have determines which of the following automatic BIOS diskettes to use:

- CPU Type I—Use disk 501V1R874
- CPU Type II—Use disk 501V3R452
- CPU Type III—TBD



Note: Verify that the automatic BIOS disk is write-enabled.

1. To determine the CPU type installed in your system, check the label on the CPU heat sync located inside the e-box. One of the following appears:
   - ❒ Type I—AMD-K6-3 450 ACZ (part number 605B10488)
   - ❒ Type II—AMD-K6-3 500 ANZ (part number 605B10490)
   - ❒ Type III—SBC board (part number 609-00271)



Note: If you have Type III, you already have a new image CD.

2. If you are still not sure which type of CPU is installed, there are two ways to check:
   - ❒ During boot, check the screen display. If you have CPU type I or II, one of the following appears:
     - AMD-K6-III 450 2V0 (type I - 605B10488)
     - AMD-K6-III 500 1V7/1V8 (type II - 605B10490)
   - ❒ If you think you have type III, right-click **My Computer** and select **Properties**. In the **General** tab, under **Computer:** the type of CPU appears: IntelCR Celeron MMX/SSE 566 MHz cache memory 128K.



Note: For more information, see the Lotem 400 Xpose downloads page on TechPlanet.

3. Insert the automatic BIOS diskette in the disk drive and boot. The BIOS loads automatically.

4. After the BIOS has completed loading, remove the Automatic BIOS disk from the disk drive.
5. Turn off the power switch.
6. Turn on the power and wait for the following message to appear at the bottom of the AMIBIOS System Configuration screen:

   `The CMOS memory has been recovered with security copy`
7. Turn off the power and turn it on again.
8. Press DELETE to enter the BIOS Setup screen.
9. In the **Setup Screen**, select **Standard**.
10. In the Standard Setup dialog box, double-click **Date/Time**.
11. Set the correct date and time.
12. Close the dialog box and close the window.
13. In the Exit Setup dialog box, select **Save changes and exit**.

You are now ready to install the MicroSoft Windows NT operating system.

Installing Windows NT Operating System for Xpose (disk image)

1. Turn off the platesetter.
2. Insert the following software in the relevant drive:
   - ❒ L800/400 startup A disk
   - ❒ Operating system CD
3. Turn on the platesetter.
4. From the Drive Image dialog box, select **Option A**.
5. At the prompt `Are you sure you want to continue?` click **Yes**. (The estimated loading time is 5 minutes.)
6. Remove the startup disk from the disk drive, and remove the operating system CD from the CD-ROM drive.
7. Press CTRL+ALT+DEL to start Windows NT, and make sure that the Windows NT 4.0 software is running.

8. Type the **Lotem Controller IP address** and the **Subnet Mask** for the Lotem Controller and click **OK** twice. (See *To save the Lotem Controller TCP/IP address:* on page 6).



Note: If your system crashed and you did not save the TCP/IP address, you can get it from your system administrator, or see http://techplanet.creo.com/output/computer_to_plate/lotem400/content/installation/400/chap25.htm.

9. A message appears, asking if you want to restart. Click **Yes**.
10. If your CPU is type III and your configuration includes the Multi Cassette Unit (MCU), verify that the COM 2 cable is connected.


Changing Windows setup for 2 MB video memory



Note: This procedure is optional. If you have a CPU board with 4 MB of video memory, skip this section and proceed to *Defining Disk E* on page 11.


If you have a CPU board with 2 MB of video memory, you must change the Microsoft Windows 2000 setup.

When you replace the CPU or perform a cold start, the `Invalid Display Settings` error message may appear.

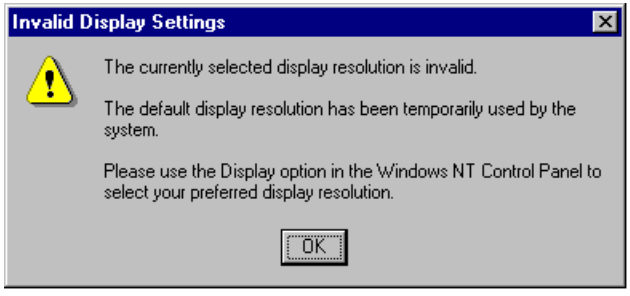


To change the Windows setup:

1. In the `Invalid Display Settings` error message, click **OK**.
2. In the Display Properties dialog box, select the **Settings** tab and click the **List All Modes...** button.

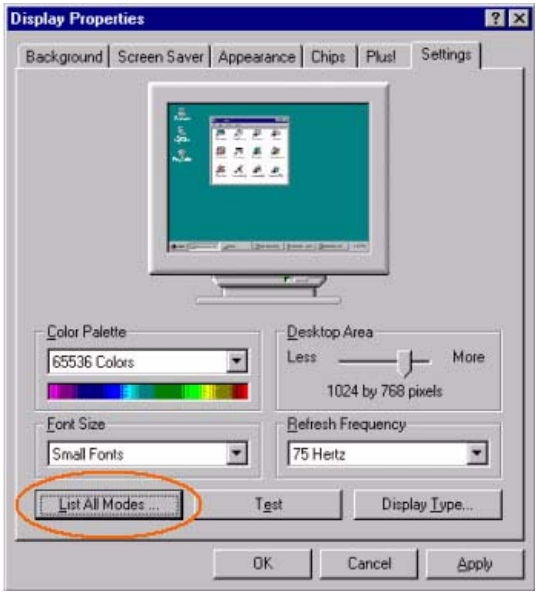

3. In the Detected Adapter dialog box, select **1024 by 768 pixels, 65536 Colors, 75 Hertz** and click **OK**.

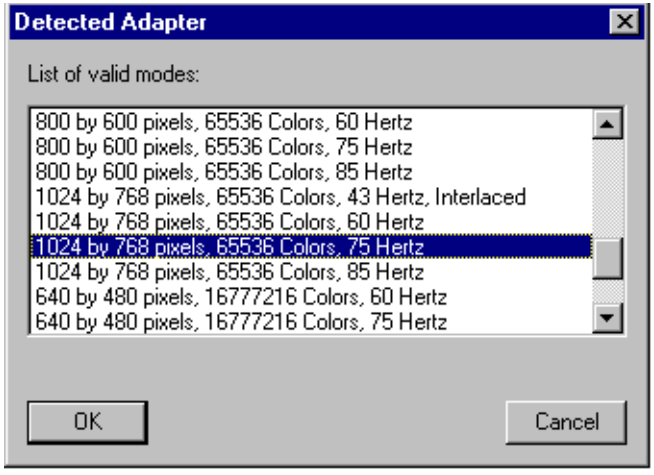

4. In the `Display Settings` error message, click **OK**, and then click **OK** again.



Proceed to *Defining Disk E*.

Defining Disk E

If you replace disk E, you must redefine it.

1. Set the following jumpers on the SCSI disks 18 GB or 36 GB for Lotem 400 Xpose, according to the drawing on the disk label:
   - TP (Termination Power)
   - DM (Delay Motor)
2. Open the Disk Administrator dialog box.

   Start > **Programs** > **Administrative tools** > **Disk Administrator**
3. In the Disk Administrator dialog box, select **Disk 1 Free Space**.
4. Select **Partition** > **Create** and click **OK**.
5. At the prompt `Do you want to create portion anyway`, click **Yes**.
   Disk 1 becomes an unformatted Disk E.

   Note: If disk F appears, right-click it and select drive letter E.
6. Select the drive labeled **E** and select **Partition** > **Commit Change Now**.
7. At the message: `Changes have been made to your disk configuration, do you want to save changes?`
   click **Yes**.
8. At the message: `Updated successfully`, click **OK**.
9. From the E drive, select **Tools > Format**.

10. In the Format E:\ dialog box, from the **File System** list, select **NTFS** and click **Start**.
11. At the warning message, click **OK**.
    Formatting begins and lasts for about 30 minutes.
12. Close the Format E:\ dialog box.

Changing the Disk Assignment



Note: During the following procedure, if the error message `The drive cannot be locked for exclusive use` appears, ignore it.

Before changing the disk assignment, verify that Disks D and E are defined correctly.

- Disk D should be FAT (2 GB)
- Disk E should be NTFS (18-36 GB)

If Disk D is NTSF and Disk E is Fat, change the disk assignment as follows:

1. Open the Disk Administrator dialog box.

   Start > **Programs** > **Administrative Tools** > **Disk Administrator**
2. Right-click **Partition E:** and select **Assign Drive Letter**.
3. In the **Assign drive letter** list, select **F** and click **OK**.
4. Select **File** > **Commit Changes Now**.
5. Select **Partition D**.
6. Right-click **Assign Drive Letter** and select **E:**.
7. Click **OK**.
   The computer restarts.
8. Open the Disk Administrator dialog box.
9. Right-click **Partition F:** and select **Assign Drive Letter**.
10. Select **D** and click **OK**.

You are now ready to install the Lotem 400 Lotem Controller application.

Installing Lotem 400 Lotem Controller Application

1. Insert the Lotem 400 Lotem Controller software CD into the CD-ROM drive and wait until the Lotem Setup dialog box appears.
2. In the Installation Warning dialog box, click **Next.**
3. In the **Welcome** dialog box, click **Next.**
4. In the Software License Agreement dialog box, click **Yes.**
5. In the Customer Information dialog box, enter the customer information as follows and click **Next.**
   - Name: **Lotem** (or customer's selection)
   - Company name: **Creo** (or customer's name)
   - Serial: (Lotem 400 machine serial number)
6. In the Choose Installation Folder dialog box, verify that the **destination** folder is **C:\Lotem** and click **Next.**
7. In the Setup Type Options dialog box, verify that the Setup type is **Typical** and click **Next.**
8. In the General Machine Configuration dialog box, define the hardware configuration according to the machine components. In the PSM Machine section, select **Yes** and click **Next.**
9. In the Lotem 400 Configuration dialog box, select the customer's configuration and click **Next.**
10. In the Configuration Options Selection dialog box, select the customer's configuration and click **Next.**
11. In the Start Copying Files dialog box, verify that all your selections in steps 8-10 appear in the **Current Settings** list and click **Next.**



Note: If any of the data is not correct, click **Back** and make the corrections. For more information, see the release notes at http://techplanet.creo.com/output/computer_to_plate/lotem400/nav/400/reference.htm.

12. In the Information dialog box, click **OK** for remote support.
13. In the Welcome - Lotem 400 Setup dialog box, click **Finish.**

    Installation begins, and takes about 2 minutes. When it is completed, the new Lotem Controller and Lotem 400 Diagnostics icons appear on the Windows NT desktop.

14. Remove the Lotem Controller software CD from the CD-ROM drive.
15. Install any mandatory Lotem Controller updates.
16. If your configuration includes UDRC LC (chemistry free), you must update the bios and ports parameters to open COM 6:
    a. Reboot the PC.
    b. Locate BIOS.
    c. In BIOS, select **PCI/PnP** and select **IRQ10.**
    d. In the Options dialog box, select **ISA/EISA.**
    e. Save your changes and exit BIOS.
    The PC automatically reboots.
    f. In Windows Explorer, select **Start** > **Settings** > **Control Panel** and double-click **Ports.**
    g. In the Ports dialog box, click **Add.**
    h. In the Advanced Settings for New Port dialog box, make the following changes:
        - **COM Port Number**—select **6**
        - **Base I/O Port Address**—type **168**
        - **Interrupt Request Line** (**IRQ**)—select **10**
    i. Click **OK.**
    j. Click the **Restart Now** button.
17. **Important:** If you are installing the same version of Lotem Controller, import the registry file from the disk.
18. Reload the DataBase folder.

Installing PC MACLAN


Note: If your operating system is version OSX (10) or later, you do not need to install PC MACLAN. Proceed to *Installing Lotem Xpose* on page 19.

Before proceding, confirm that all network hardware and software have been installed, configured, and tested.


To install PC MACLAN:

1. Insert the Lotem Xpose CD in the CD ROM drive.
2. Run **AtAutoCD.exe.**


   My Computer > **CD drive** > **PC MACLAN** > **AtAutoCD.exe.**
3. In the PC MACLAN dialog box, select **Install PC MACLAN.**
4. In the License Agreement dialog box, click **Agree** to indicate that you agree to the conditions set forth in the agreement.
5. In the serial number dialog box, type the PC MACLAN serial number that you wrote down earlier (see *To save the PC MACLAN license number:* on page 5) and click **OK.**

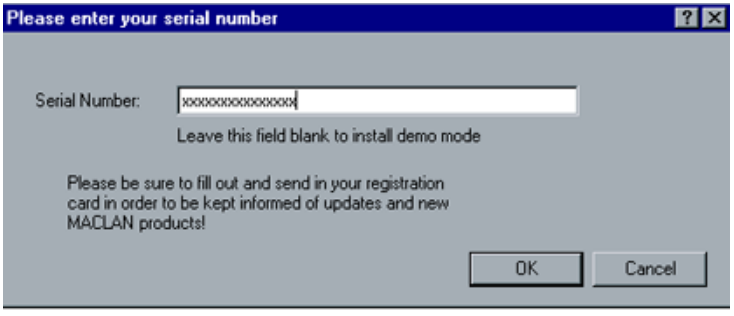

6. In the User Information dialog box, make sure that the user and company information is correct and click **OK**.

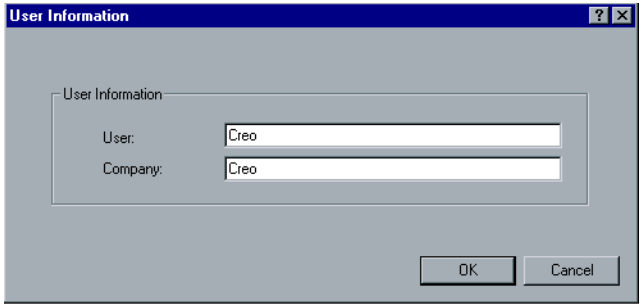


7. In the Destination folder dialog box, make sure that the folder into which PC MACLAN will be installed is correct (as shown below), and that you have enough system and program drive space. Then click **OK**.

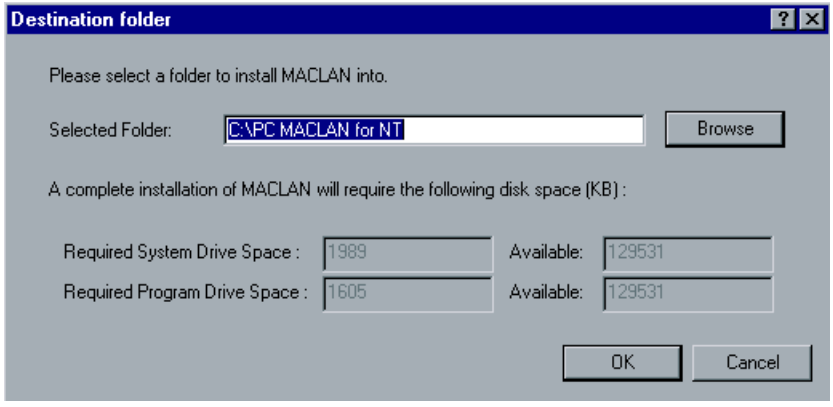

8. In the Network dialog box, select the **Protocols** tab and click **Add**.


9. Make sure that **Miramar AppleTalk Protocol** is selected and click **OK**.

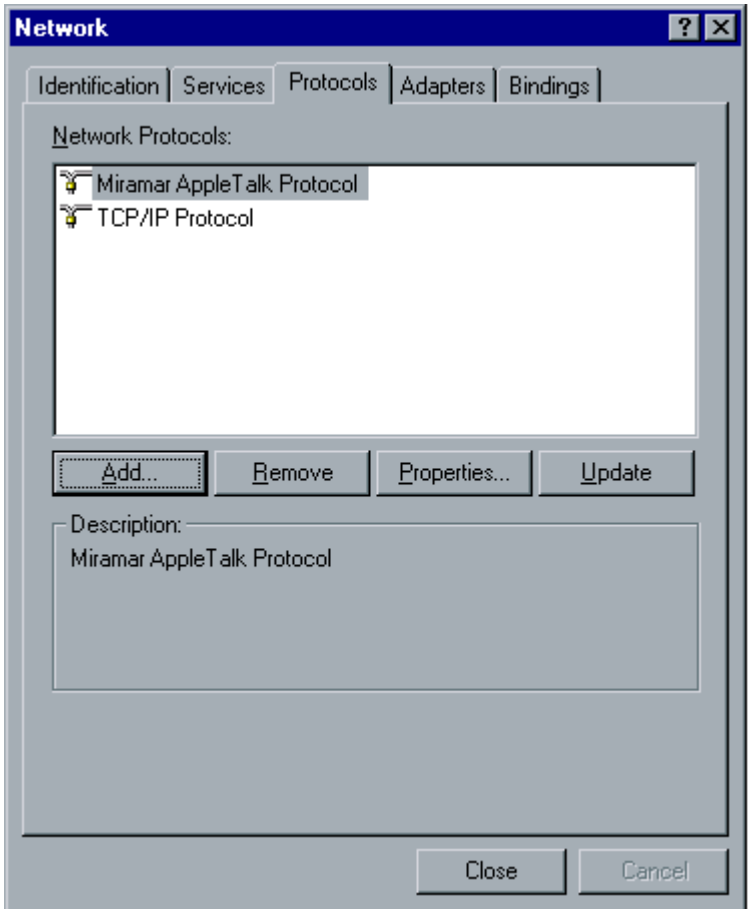

The protocol files are copied to your hard drive.


10. In the Get Registered dialog box, click **Close**.
11. In the Network dialog box, select the **Services** tab and click **Add**.

12. In the Select Network Service dialog box, select **Miramar AppleTalk File Server** and click **OK**.

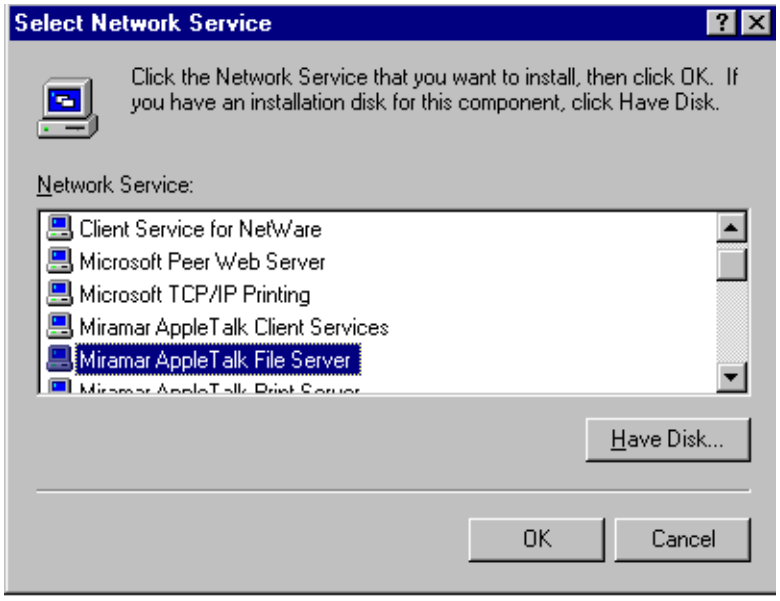

13. In the Service dialog box, click **Add**.

14. In the Select Network Service dialog box, select **Miramar AppleTalk Client Services** and click **OK**.

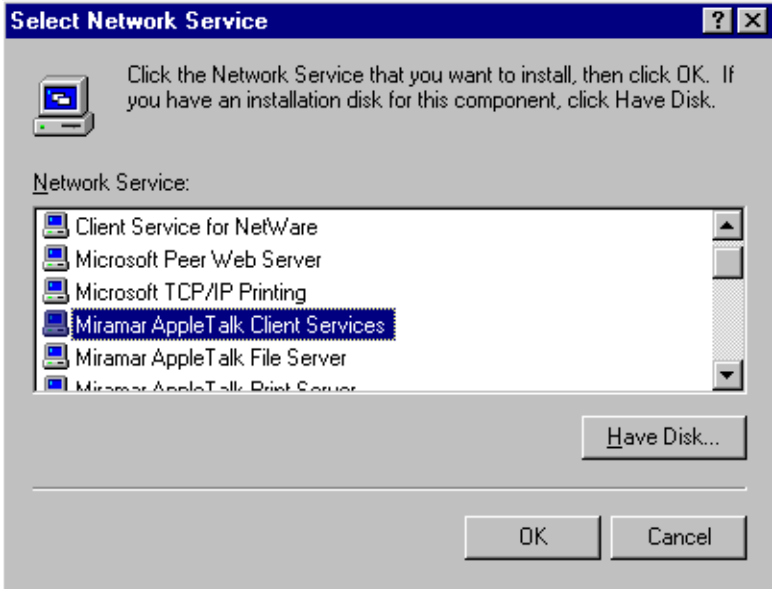

15. Click **Close** to close the Network dialog box.

    The installation program takes a few seconds to update network settings, and then asks if you want to restart your system.

16. Click **Yes** to restart your system.

17. In the Registration dialog box, click **Cancel**.


Installing Lotem Xpose

1. Run **Setup.exe**.


   My Computer > CD ROM drive > Lotem Xpose 1.1 > Setup.exe




2. In the LotemXpose Setup dialog box, click **Next**.

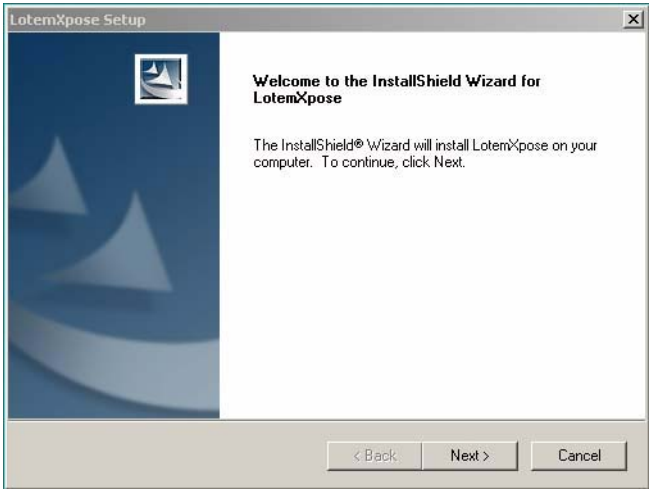


3. Read the License Agreement and click **Yes** to accept its terms.

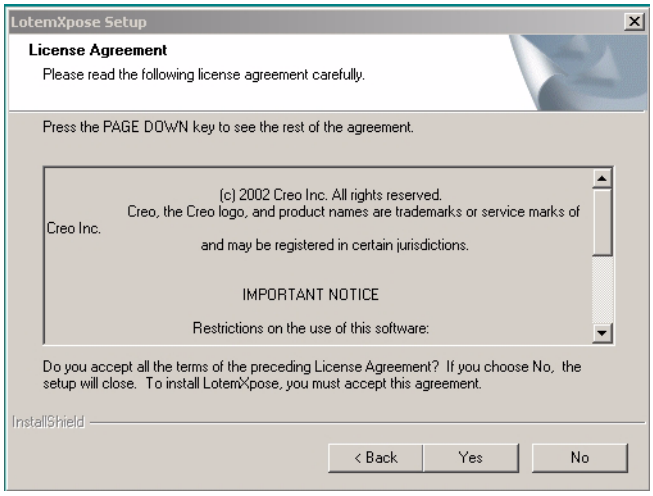


4. In the Setup Type dialog box, verify that **Typical** is selected and click **Next**.

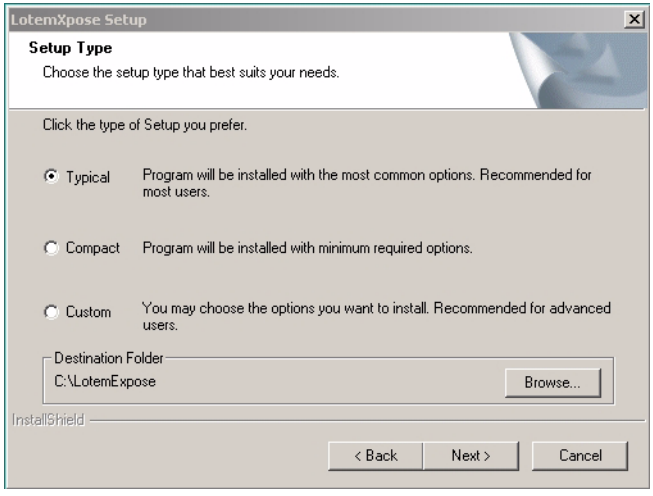

5. In the Start Copying Files dialog box, verify that the Working Directory Destination is **E:\dataVolumes** and click **Next**.

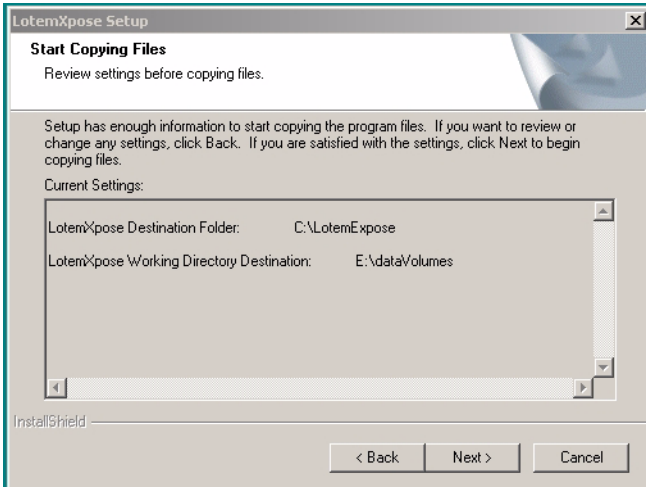

6. After the Lotem Xpose application is loaded, click **Finish** to complete the setup.

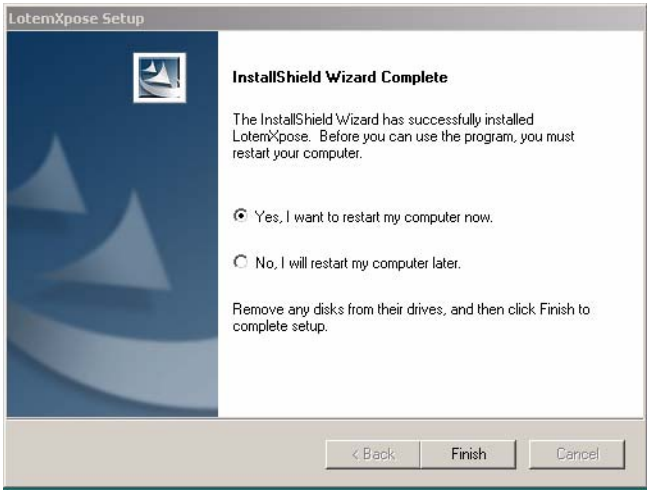

The computer restarts automatically.

7. Remove the Lotem Xpose application software CD from the CD-ROM drive.
   The setup wizard prompts you to restart.
8. Install any mandatory Lotem Xpose updates.

Restoring Lotem Xpose Settings

If you are reloading the same Lotem Xpose version, you can restore the previous Lotem Xpose settings.

1. To access the Lotem Xpose settings, from the desktop, select **Start** > **Programs** > **Lotem Xpose** > **Restore Settings**.
2. In the Registry Editor dialog box, click **OK**.
   The Lotem Xpose settings are saved in E:\dataVolumes\Config_save.




Note: After installing Lotem Xpose Software, you can check the TSP board. See *Checking TSP in Lotem Xpose* on page 26.


Configuring Lotem Xpose

1. Close all open applications.
2. On the desktop, click the Lotem Controller icon, and wait for the Lotem Controller application to open.
3. In the Lotem Xpose warning regarding no configuration, click **OK**.
4. In the SxExMainBarApp message, click **OK**.
5. Select **Start** > **Program** > **Lotem Xpose** and click **Config**.
6. In the Config wizard, answer each question as follows, and click **Next** after each answer:
   - **Logic Name?—Lotem 400**
   - **Device Group?—Platesetter**
   - **Device Family?—Lotem**
   - **IP Address?—Local Host**

7. In the Results dialog box, click **Next.**

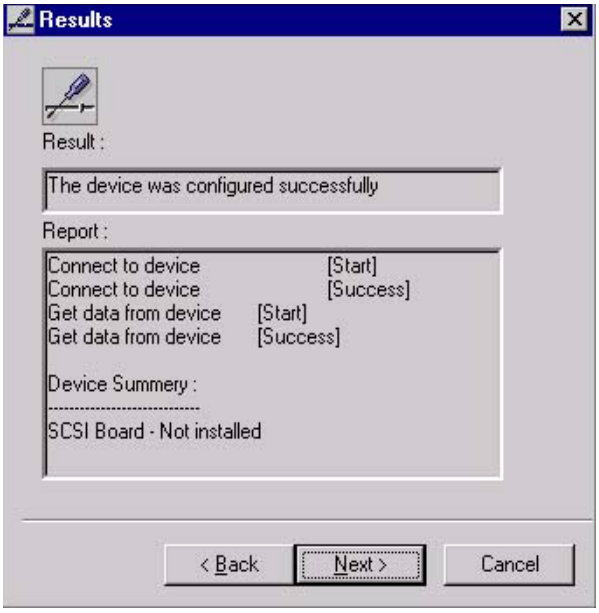

8. In the Screen Board dialog box, click **Finish**, and then click **OK** to confirm that the configuration is implemented.

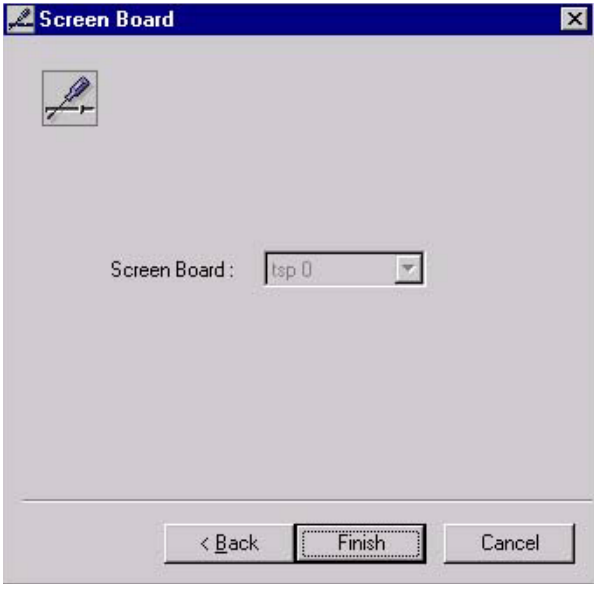

9. To launch Lotem Xpose, from the desktop, select **Start > Program > Lotem Xpose > Launch Pad**.

Changing AppleTalk Settings



Note: If your operating system is version OSX (10) or later, PC MACLAN is not installed and the section relating to AppleTalk and PC MACLAN are not relevant for your setup.

You can access the AppleTalk Settings dialog box through the PC MACLAN program and view the Lotem Controller from the MAC.

➢ From the desktop, select **Start** > **Programs** > **PC MACLAN** > **AppleTalk Settings**.

In the AppleTalk settings dialog box, you can:

- Define the network zone
- Create a shared folder
- Change access privileges (see *Appendix* on page 26)
- Un-share a folder (see *Appendix* on page 26)

Defining the Network Zone

If there are zones in your network, you can define the Appletalk zone in which the Lotem Controller appears.

1. From the desktop, select **Start** > **Programs** > **PC MACLAN** > **AppleTalk Settings**.
2. In the Miramar Systems AppleTalk settings dialog box, in the System Information section, click the **Selected Zone** arrow to display a list of available zones.
3. Select the required **zone** and click **OK**.

   The AppleTalk file server is now located in the new zone.

Sharing and Unsharing a Folder

1. From the desktop, select **Start** > **Programs** > **PC MACLAN** > **File Server**.
2. In the Shared Folder dialog box, select the **Share Folder** icon (fourth from the left).
3. Select the relevant drive and select the relevant folder.

4. Set the share/unshare status of the folder.
   - **To share a folder**—click the **Share** button and select the relevant settings.
   - **To unshare a folder**—click the **Unshare** button.
5. Click **OK**.

Appendix



Note: If your operating system is version OSX (10) or later, PC MACLAN is not installed and the section relating to AppleTalk and PC MACLAN are not relevant for your setup.

The procedures that follow, as listed below, are optional in a cold start.

- Checking TSP in Lotem Xpose
- Repairing the Lotem Xpose Application
- Turning the PC MACLAN Startup Screen Off
- Enabling or Disabling Automatic Logon in Windows NT
- Removing the Lotem Xpose Application
- Uninstalling PC MACLAN

Checking TSP in Lotem Xpose

1. Open the Control Panel.

   Start > **Settings** > **Control Panel**

2. In the Control Panel dialog box, double-click **Devices**.
3. In the Device dialog box, select **NSP** and verify the following:

   ❒ **Status** = **Started**

   ❒ **Startup** = **Automatic**

4. If the Status and Startup are not correct, as listed in step 3, select **NSP** and click **Startup**.
5. Change the startup type to **Automatic** and click **OK**.



Note: If Startup is not Automatic, there may be a problem with the TSP board or with the driver.


6. Click **Close**.

Repairing the Lotem Xpose Application

Note: To repair the Lotem Xpose application, the application software CD must be the same version as the application currently installed.

1. Insert the Lotem Xpose Application CD into the CD-ROM drive.
2. Run Setup.exe

   My Computer > **CD ROM drive** > **Lotem Xpose 1.1** > **Setup.exe**
3. Select **Repair** and click **Next.**

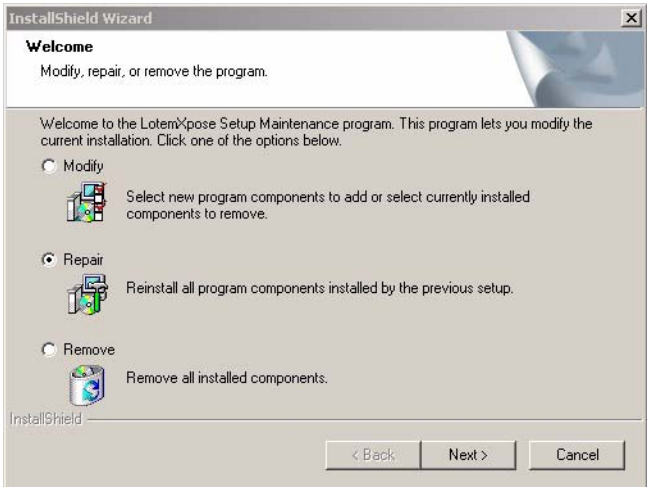

Turning the PC MACLAN Startup Screen Off

1. Access the AppleTalk settings dialog box.

   Start > **Programs** > **PC MACLAN** > **AppleTalk Settings**
2. In the AppleTalk Settings dialog box, clear the **Show Startup Screen** checkbox (at the bottom of the dialog box).
3. Click **OK** to close the dialog box.

Enabling or Disabling Automatic Logon in Windows NT

To enable automatic logon in Windows NT:

1. Open the registry editor.

   Select **Start** > **Run** and type `REGEDT32`.

2. In the registry, select **Winlogon**.

   HKEY_LOCAL_MACHINE\Software\Microsoft\Windows NT\CurrentVersion\Winlogon

3. Select **Edit** > **Choose Add Value**.

4. In the **Value Name** box, type `AutoAdminLogon`.

5. Under **Data Type**, select **REG_SZ** and click **OK**.

6. In the **String** box, type **1** and click **OK**.

7. Select **Edit** > **Choose Add Value**.

8. In the **Value Name** box, type `DefaultPassword`.

9. Under **Data Type**, select **REG_SZ** and click **OK**.

10. In the **String** box, type your password and click **OK**.



Note: The default password (creoscitex) is factory-installed.

11. From the **Registry** menu, click **Exit**.

To disable automatic logon in Windows NT:

1. Open the registry editor.

   Select **Start** > **Run** and type `REGEDT32`.

2. In the registry, select Winlogon.

   HKEY_LOCAL_MACHINE\Software\Microsoft\Windows NT\CurrentVersion\Winlogon

3. From the **Edit** menu, double-click **Value AutoAdminLogon**.

4. In the **String** box, type **0** and click **OK**.

5. From the **Registry** menu, click **Exit**.

Removing the Lotem Xpose Application

This procedure is not necessary when performing a cold start.

1. In Windows Explorer, browse to the Control Panel and select **Add/Remove Program**.
2. Select **Lotem Xpose** and then select **Add/Remove**.
3. In the Wizard, select **Remove** and click **Next**.
4. In the Confirm File Deletion dialog box, click **OK**.
5. In the Shared File Detected dialog box, mark the check box to avoid the Shared File Detected window and click **Yes**.
6. In the ReadOnly File Detected dialog box, mark the check box to avoid the Read Only File Detected window and click **Yes**.
7. In the Self-registration error dialog box, click **OK**.
8. In the Question dialog box, click **Yes** to remove all files.
9. In the InstallShield Wizard, select **Yes, I want to restart my computer now** and click **Finish**.

   The computer restarts automatically.

Uninstalling PC MACLAN

1. In the Control Panel, double-click the **Network** icon.
2. In the Network control panel, select the **Services** tab.
3. One at a time, select each of the Miramar services (client services and file server), and click **Remove**.
4. Select the **Protocols** tab, make sure Miramar AppleTalk transport is selected and click **Remove**.
5. Close the Network Control Panel.

   The system takes a few seconds to update network settings, and then asks if you want to restart your system.
6. Click **Yes** to restart your system.