
Lotem Xpose Custom Installation for LapTop or PC with Windows® 2000, and Running in Simulation Mode

1. Run Setup.exe


   My Computer>CD ROM drive>Lotem Xpose 1.1>Setup.exe

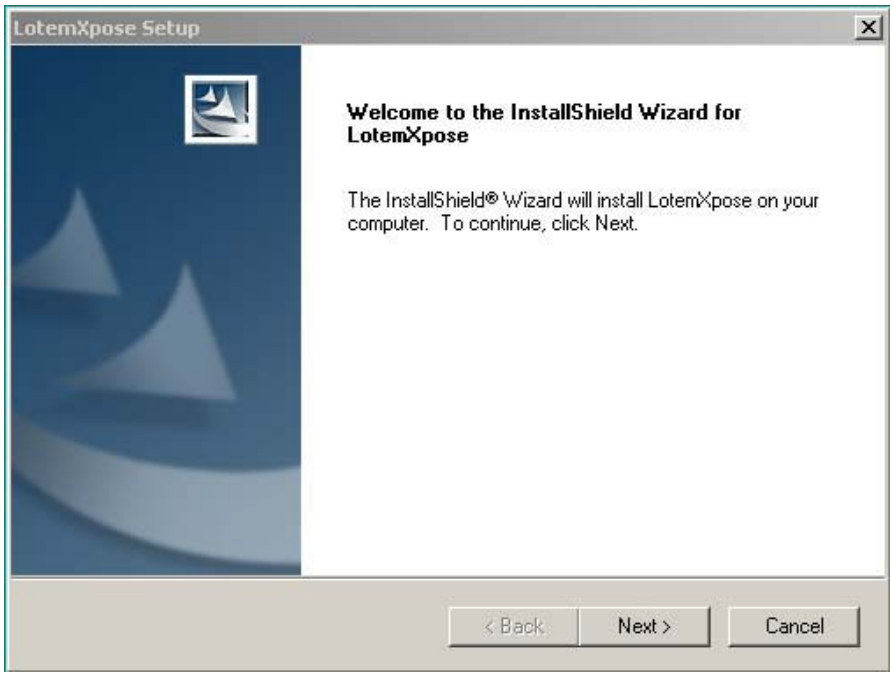


2. In the Lotem Xpose Setup window, click **Next**.




3. In the License Agreement window, click **Yes** to confirm the software license agreement.

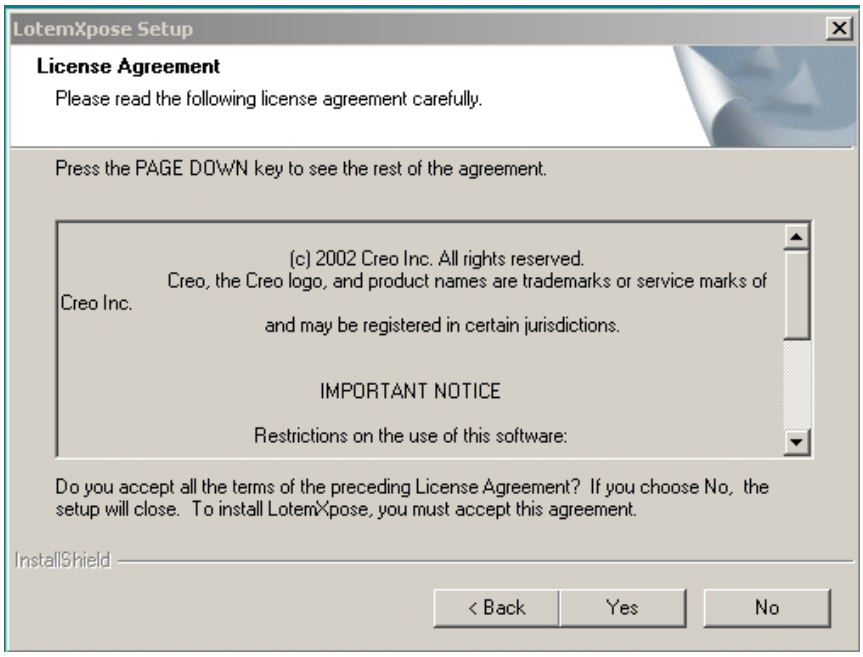


4. In the Lotem Xpose Setup dialog box, select the **Custom** checkbox, click **Next**, and then click **Next** again.

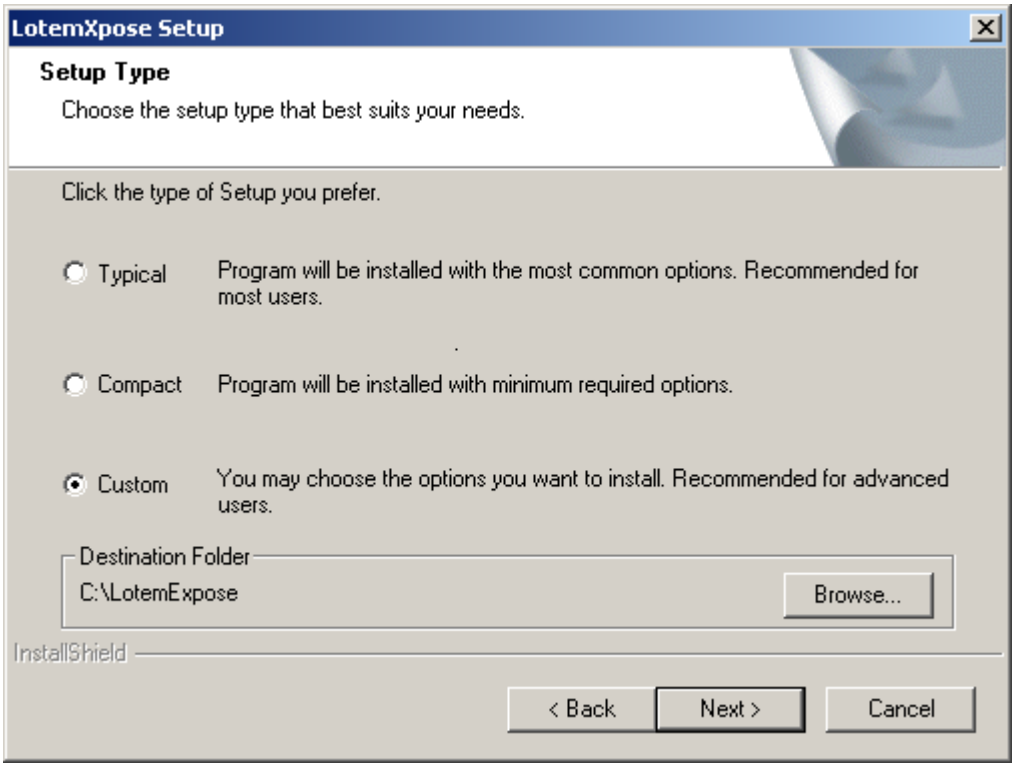


5. In the Choose Destination Working Directory dialog box, click **Browse** to update the drive for the destination folder.

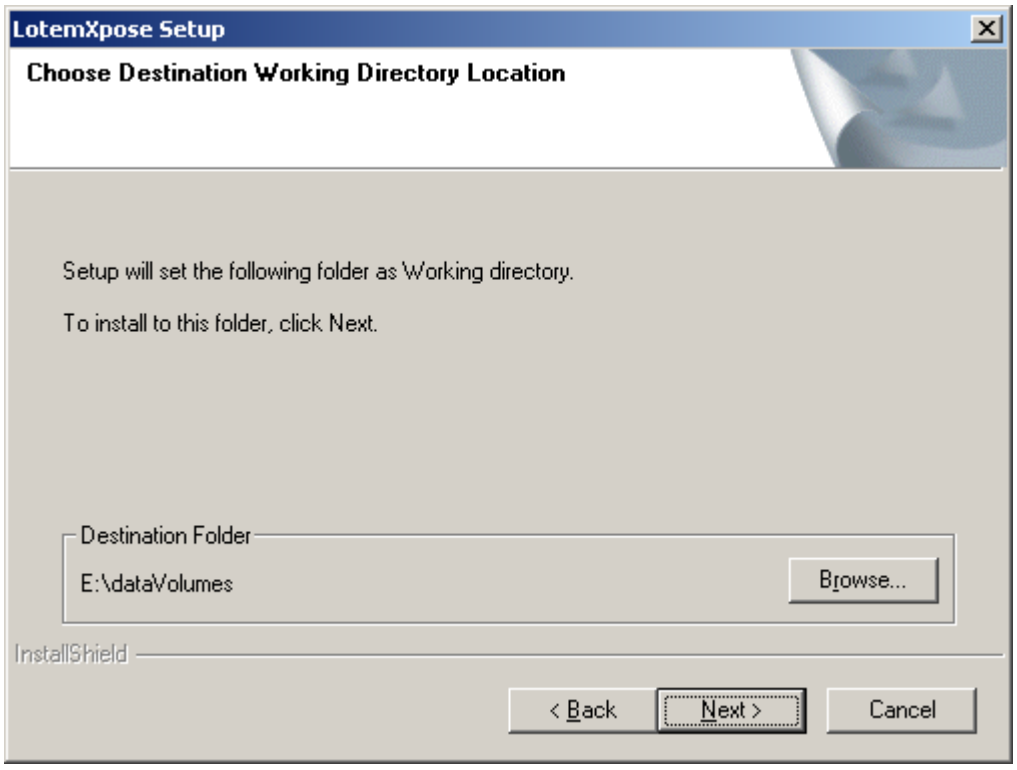

6. In the Choose Folder dialog box, verify that **D**: appears in the **Path** box. If E appears, replace the E with **D**, as shown below, and then click **OK**.

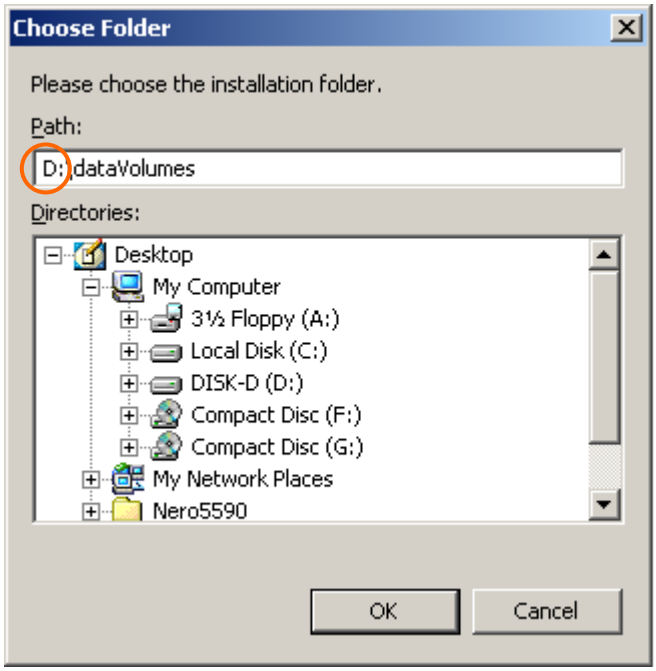


7. In the Choose Destination Working Directory dialog box, verify that the destination folder is **D:\dataVolumes**, and then click **Next**.

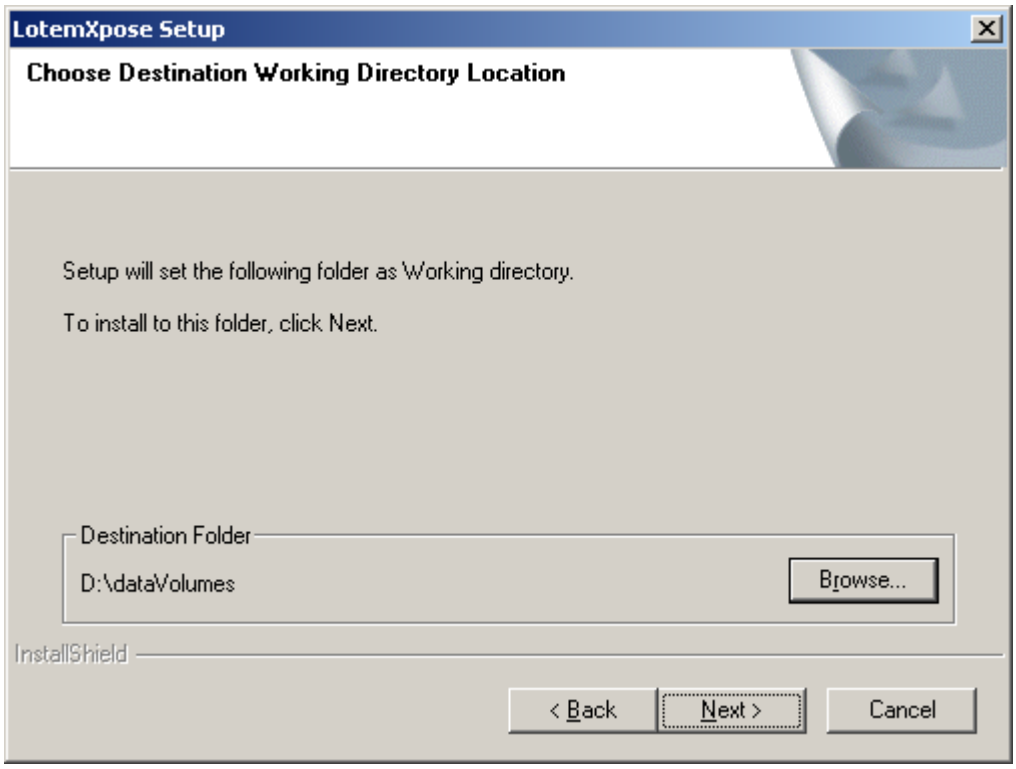


8. In each of the subsequent databoxes, click **Next**, and then click **Finish**.
   The system automatically reboots.
9. From the Lotem Xpose CD, browse to the **Simulation Mode script and regs** folder.
10. In the **Simulation Mode script and regs** folder, run the **Lotem_Xpose_simulation_config_win2k.bat** script.
11. For each message that appears, click **OK** or **Yes**.
12. At the end of the script, click **Enter**.

Running Lotem Xpose in Simulation Mode


1. On the PC workstation, right-click the My Computer icon, and then select **Properties** from the shortcut menu.
2. In the System Properties dialog box, select the **Advanced** tab, and then click the **Environment Variables** button.

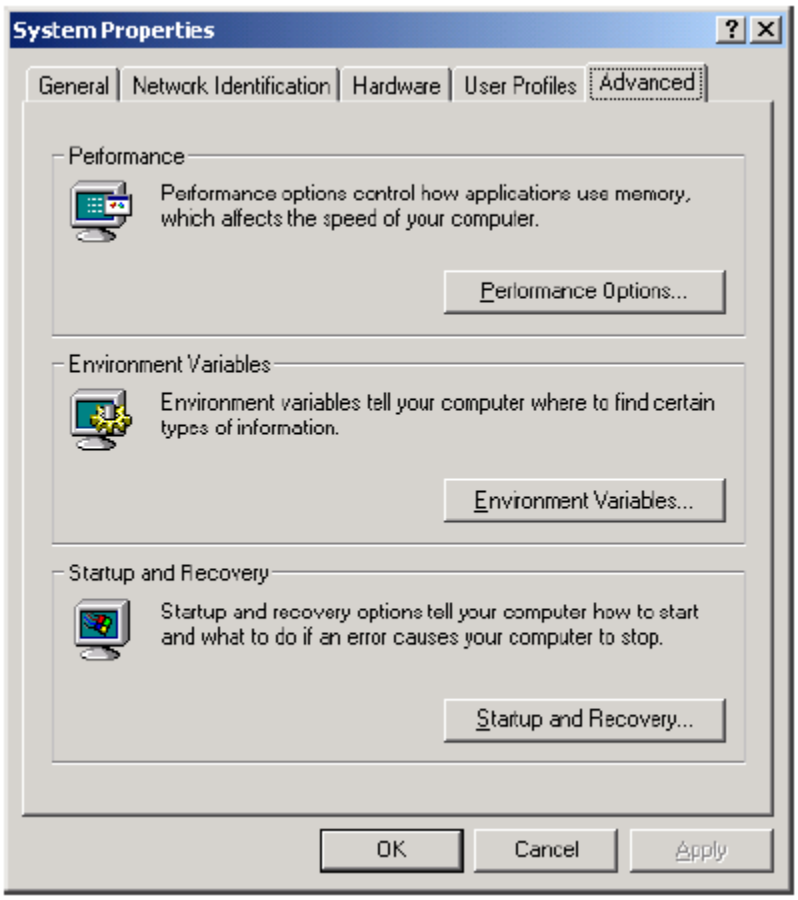

3. In the Environment Variables dialog box, select

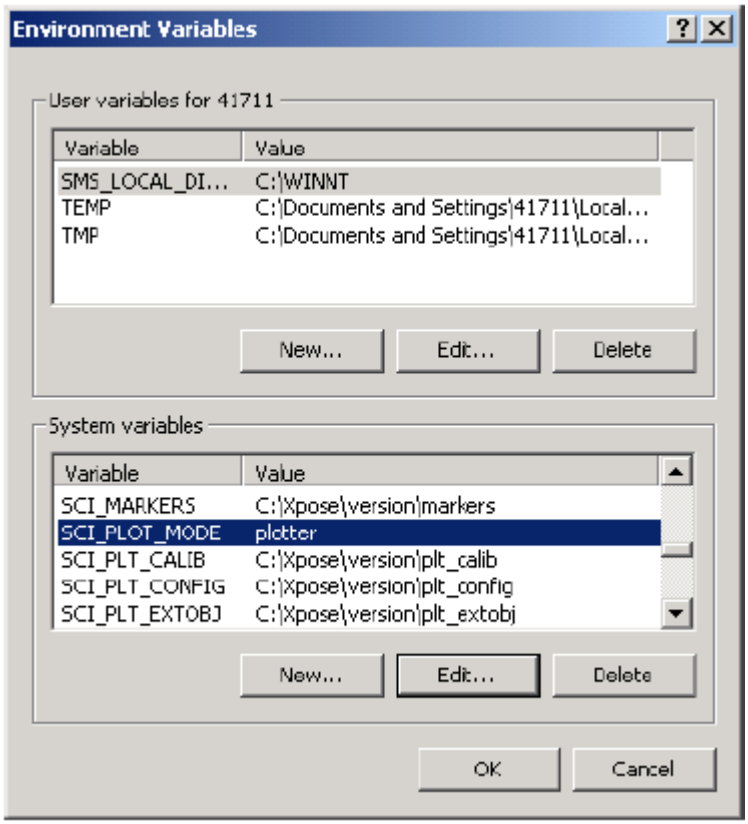

4. In the Environment Variables dialog box, In the **System variables** section, select **SCI_PLOT_MODE**, and then click **Edit**.

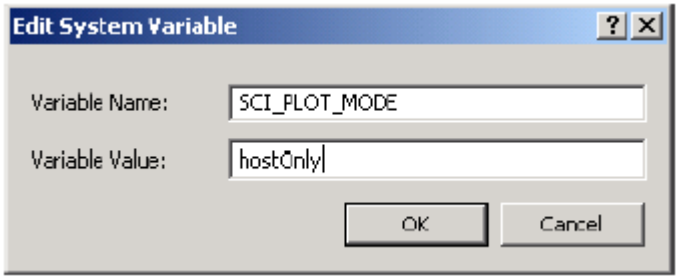

5. In the Edit System Variable dialog box, in the **Variable Value** box, type **hostOnly**, and then click **OK**. Three times.

   You can now run the Lotem Xpose launch pad from the Desktop.