

Replacing the Carriage Belt

Applies to Magnus VLF


Steps

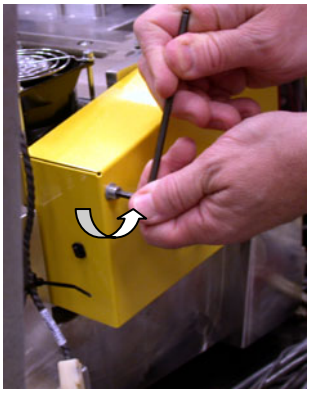


1. Remove the carriage belt cover.

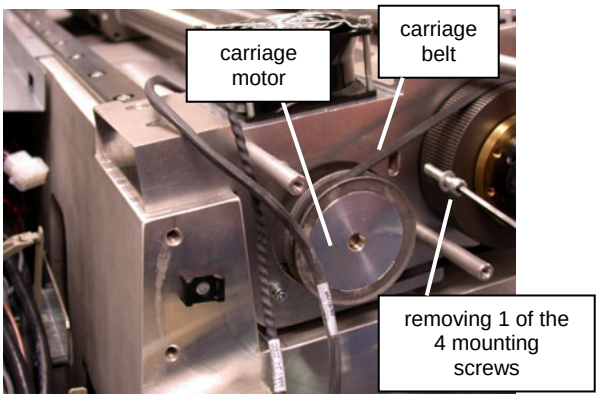

2. Loosen the 4 motor mounting screws.

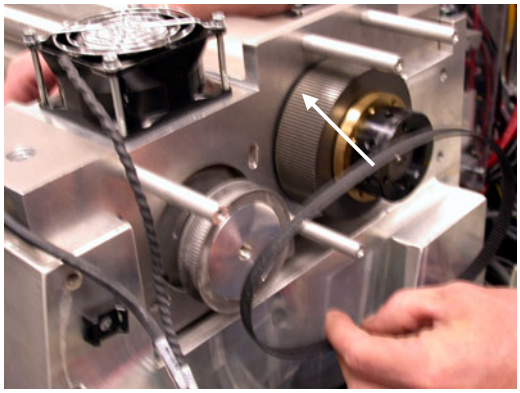


3. Remove the carriage belt and replace it with the new one.

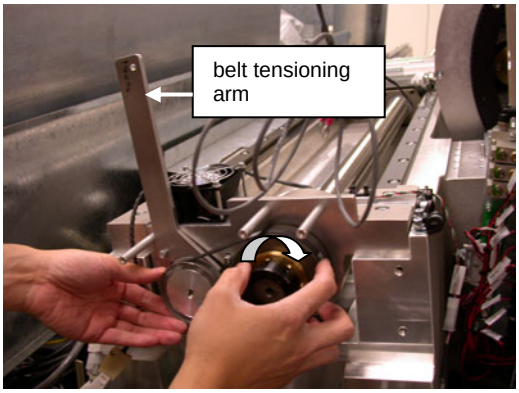

4. Turn the leadscrew by hand to set the belt securely in the middle.

   Slide the belt tensioning arm in behind the pulley on the carriage motor.

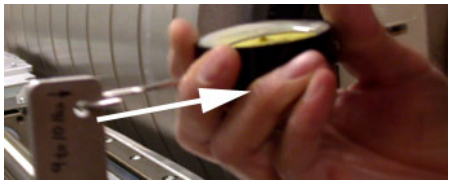

5. Hook the tension gauge onto the hole in the top of the arm.
   Pull gently in a horizontal direction until the gauge reads 9 to 10 lbs.



6 While keeping the tension on the gauge, tighten 3 of the motor mounting screws.

Remove the belt tensioning arm and fasten the last motor mounting screw.



7 Replace the carriage belt cover.

Notes

See also

Technical contact	Micle Zisman	+1.604.451.2720.ext.3570
Date submitted	08 Jul 2003	
Date modified	14 Jul 2003	