
Replacing Relays

Applies to Magnus VLF


Steps




1 Unfasten the air filter regulator assembly.

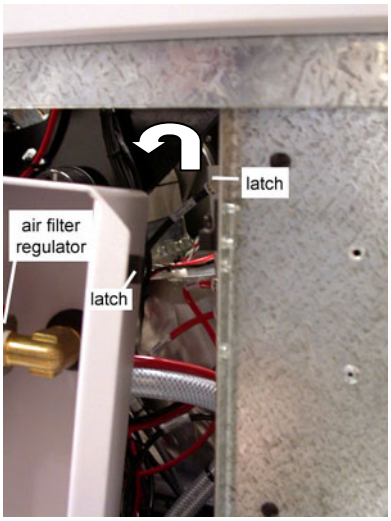

2 Lift the assembly off its latching mechanism.

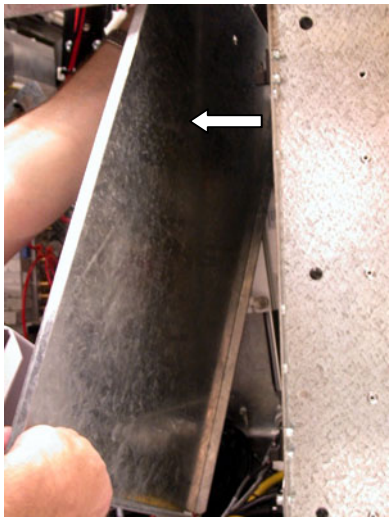

3 Remove the panel covering the relays.

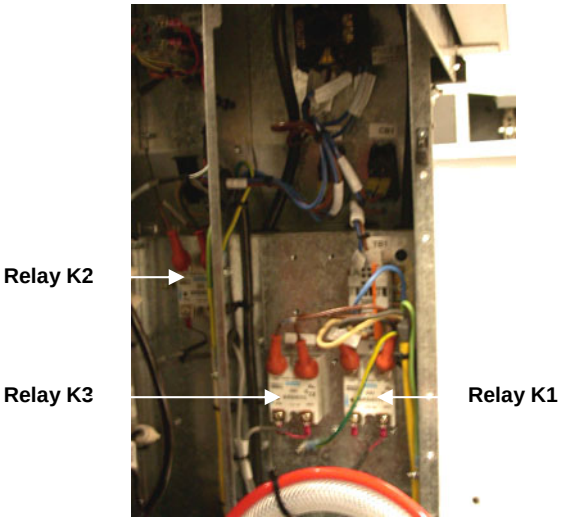

4 Remove and replace the relay.

5 Replace the relay cover.

6 Replace the air filter manifold assembly.

Notes

See also

Technical contact Micle Zisman +1.604.451.2720.ext.3570

Date submitted 14 Aug 2003

Date modified