

# DOC,ALIGN,UNLOAD TABLE HOME SENSOR,MTA

**Assembly: 500-00184A**

Pic 1

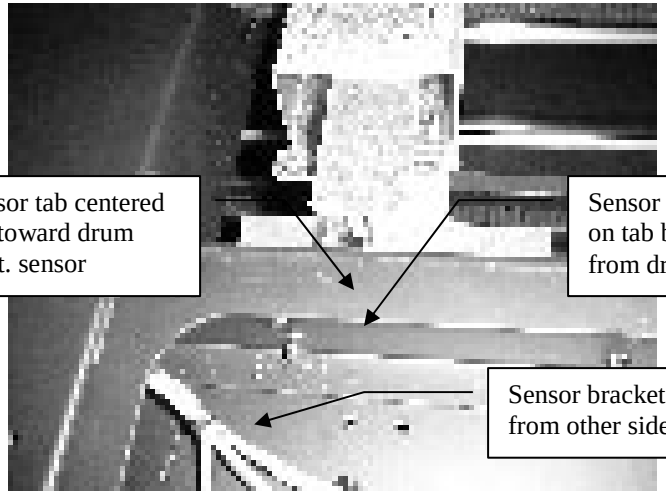


Pic 2

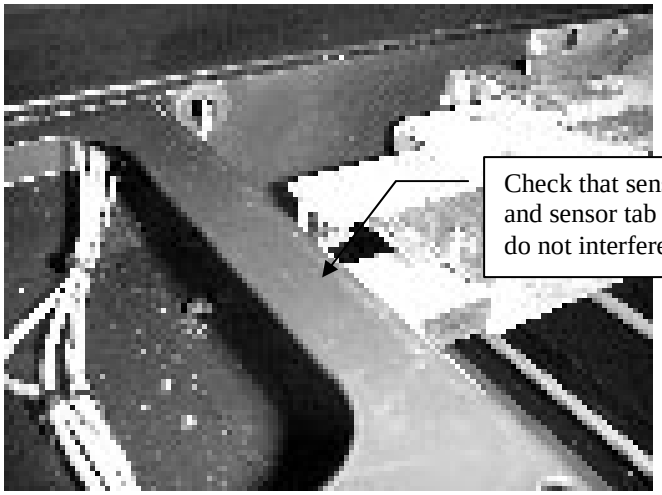


| REQUIRED ACTIVITY | PART # |
|---|---|
| Access to the sensor adjustment is outside the device on the left side of the device [possibly through the ss bin area].<br>- unlock panels and open the hood.<br>- [may need to open the ssbin top and back panels and lower the ssbin table extension] | |
| Remove the left side unload table top panel. | **500-00275A** |
| Loosen the screw on the sensor bracket. [one only - 3mm allen key]. Loosen only enough to move the sensor but not so it is slides around easily. | **52-4573** |
| Move the unloader to the home position up against the unload table frame. | **500-00278A** |
| Slide the sensor away from the drum and then toward the drum until the sensor is nearly centered on the tab [but still farther from the drum than the sensor tab]. Retighten the screw. | **252-02001A** |
| Ensure the sensor fork and the underside of the sensor tab to not touch…. The sensor may need to be moved down by rotating the sensor bracket. | **252-02001A** |
| Check using a sensor tester that the home sensor trips before the unload traveler reaches the end of travel and that the sensor does not get passed by the unload traveler sensor tab. | **Sensor tester** |