Visual Quick Reference
English


Trendsetter® NEWS SA

653-00979A-EN-A

Internal 732-00041A-EN-RevA
February 2005

Copyright © 2005 Creo Inc. All rights reserved.

www.creo.com

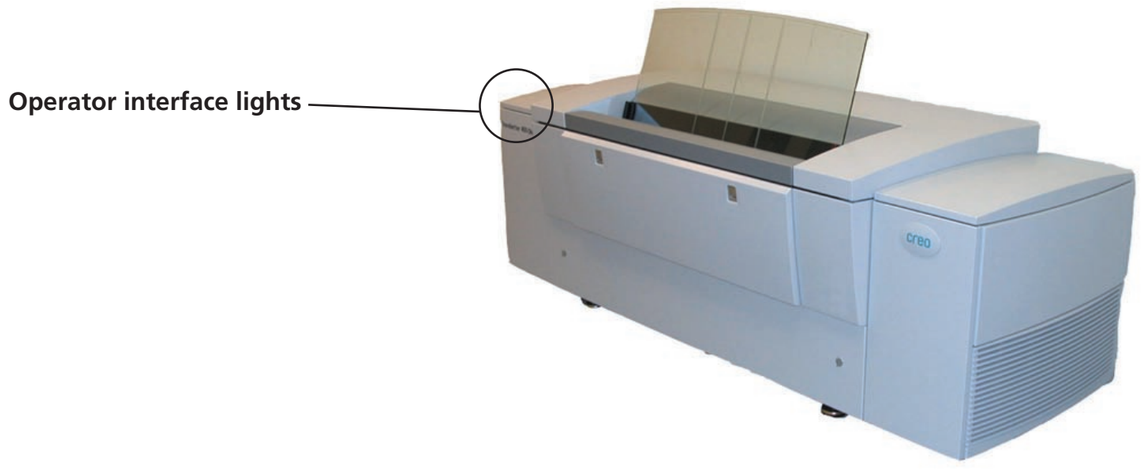



Operator Interface Lights		Operator Action
Imaging Light	Flashing green	Wait—the device is imaging a plate.
Load Light	Flashing green	Semi-automatic mode—load one or two plates for imaging. OR Semi-automatic mode—wait, the device is unloading a plate.
Error Light	Flashing yellow	An error has occurred and the job is suspended.


Prinergy



1 **In Prinergy, click OK to submit the file.**

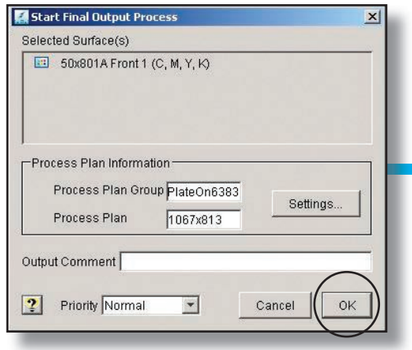


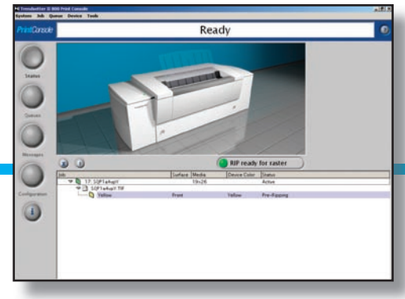





The output device receives the job in Print Console.

Brisque

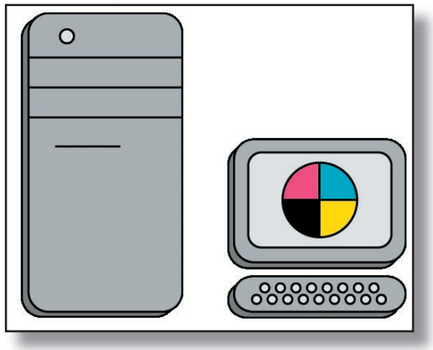

1 **In Brisque, click Submit to submit the file.**

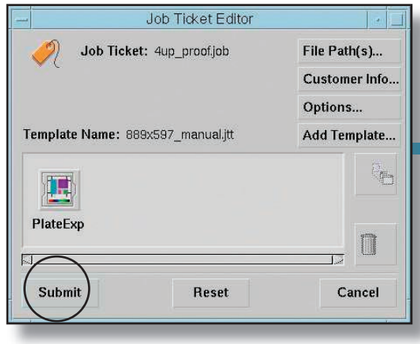


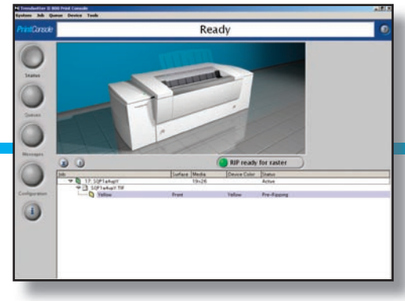




The output device receives the job in Print Console.


TIFF Workflow

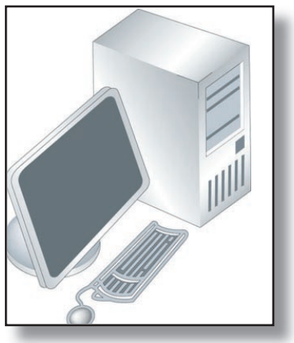


1 **In Print Console, click Open to submit the file.**

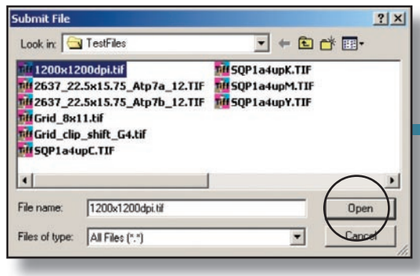

2 **Right-click the job and select Approve.**

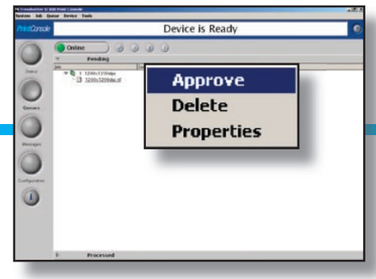

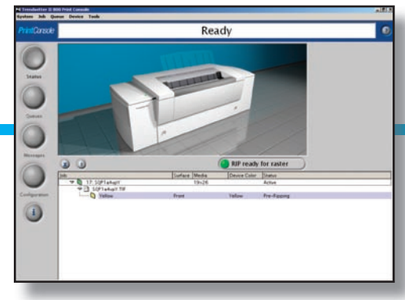




The output device receives the job.


CAUTION: Wear protective gloves when handling plates.*

1 **Ensure the device is ready.**

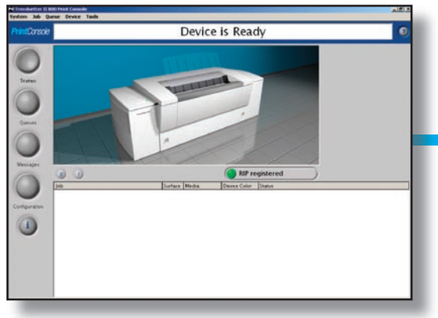



2 **In Print Console:**

a. Click **Open** to submit the file.

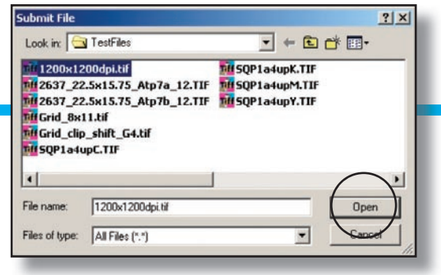

b. Ensure that the correct media is available for loading.

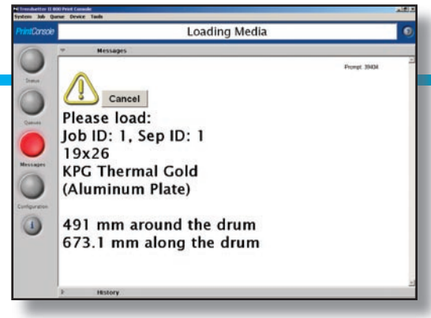

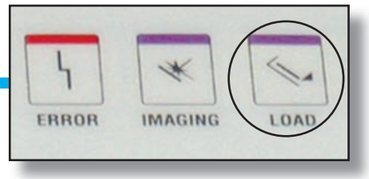

The load light glows green.

3 **Remove all slip sheets.**



4 **Position media on the load ramp.**




Double-wide (panorama)

Single-wide (broadsheet)


5 **Lower the media gently until it touches the registration pins.**



6 **Align the media on the load ramp.**

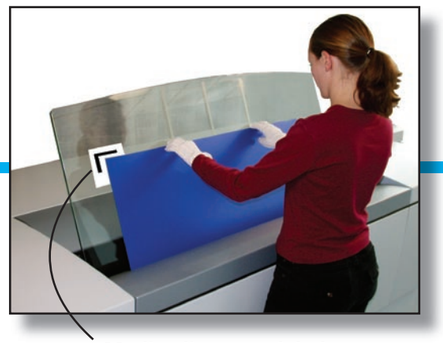


Media alignment label

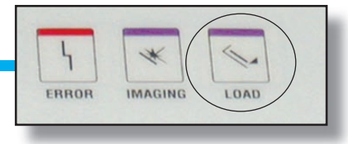

The load light flashes green.

7 **Press the Start button.**




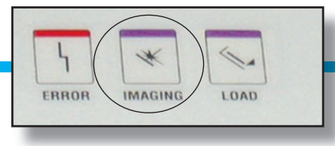

The imaging light flashes green.



Plate imaging

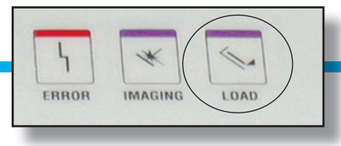

The load light glows solid green.

8 **Unload the media.**



* Refer to the *Operator Guide* for full details.

Operations				
Turn on the output device	2	These operations are required for some of the maintenance procedures listed below.		
Turn off the output device	3			
Reset the output device	8			
Maintenance		**Work To Be Done**	**How Often**	**Date Work Completed**
Exterior surfaces		Clean	Weekly	
Load ramp	1	Clean		
Plate roller *	9	Clean	Monthly	
Edge detection strips *	10	Clean	Every three months	
Compressed air supply filters:			Six months or as needed	
5 micron filter *	4	Replace		
0.01 micron filter *	5	Replace		
Intake air filter *	7	Replace		
Universal Debris Removal Cabinet (UDRC) filter **	6	Replace	As needed	N/A

* Procedures for these items are included in this visual quick reference guide.
** Optional equipment—media dependent.

Note: This document is not intended as a substitute for the *Trendsetter NEWS SA Operator Guide*. Refer to the operator guide for detailed procedures.
Software may display differently depending on the version of Print Console in use.












OFF




ON

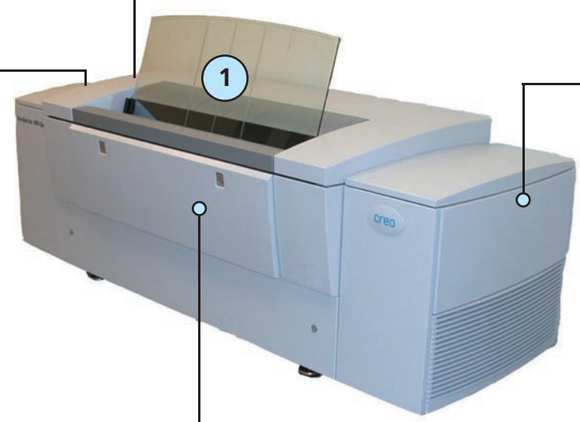

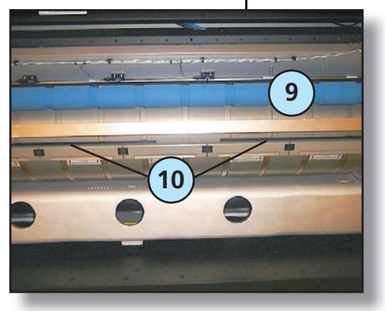

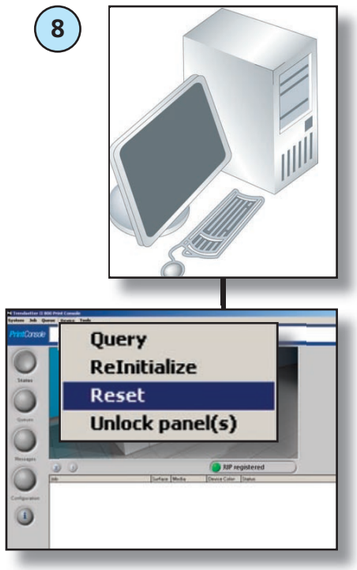

WARNING: Remove air pressure from the device before replacing an air filter.*

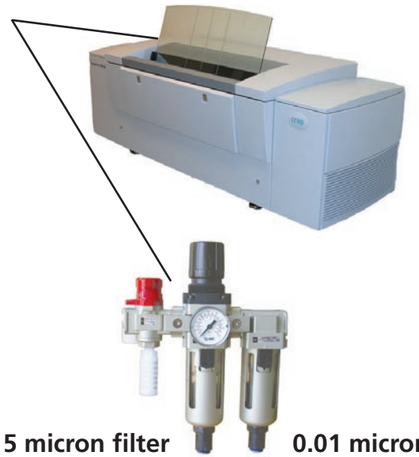


5 micron filter 0.01 micron filter

Air supply filter kit
Part number 332-00003

Replacing the 5 Micron Filter

2 Unscrew the bowl by pulling the tab down and turning the bowl to the left.

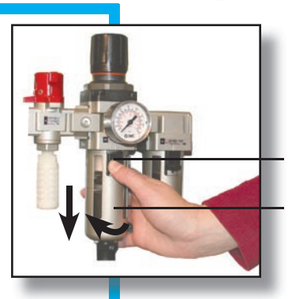



5 micron filter


3 Remove the old filter and Install the new one.



4 Clean inside the bowl.

5 Replace the O-ring, if necessary.

6 Reattach the bowl by pushing it up and turning it to the right until it clicks.

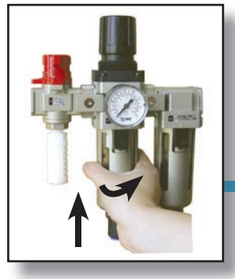


7 Turn on the compressed air.



90 psi


Replacing the 0.01 Micron Filter

1 Turn off the compressed air.

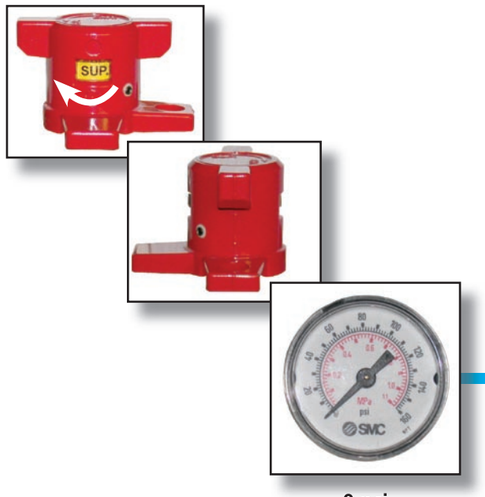

0 psi

2 Unscrew the bowl by pulling the tab down and turning the bowl to the left.

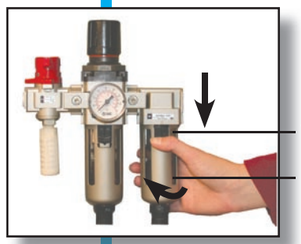



0.01 micron filter


3 Remove the old filter and Install the new one.



4 Clean inside the bowl.

5 Replace the O-ring, if necessary.

6 Reattach the bowl by pushing it up and turning it to the right until it clicks.

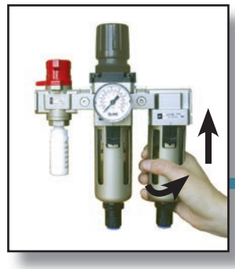


* Refer to the *Operator Guide* for full details.

WARNING: Risk of electrical shock if liquids are alowed to run freely into the output device.*


CAUTION: Be careful not to bump your head on the raised panel.*

1 To open the front panel:

a. In Print Console software, unlock the front panel.

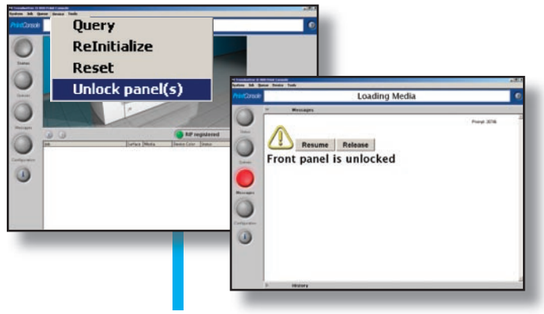


b. Rotate the two latches and lift the front panel.

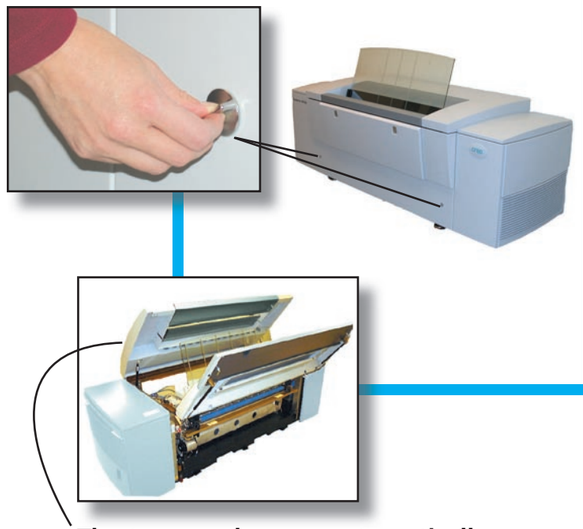

The top panel opens automatically.

Cleaning the Edge Detection Strip

2 Rotate the drum to expose the two edge detection strips.

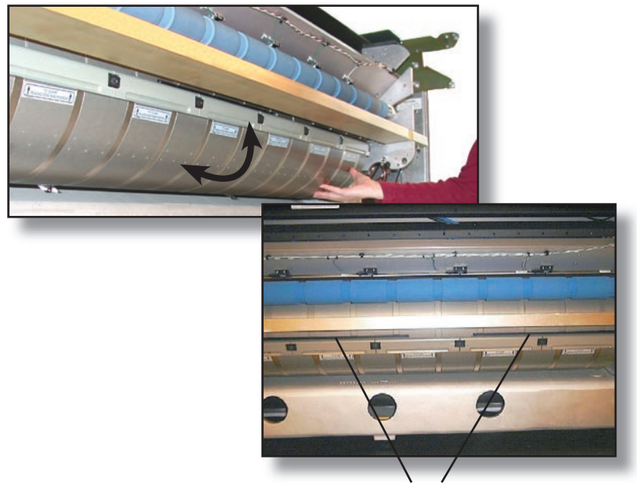

Edge detection strips

3 Dampen a cloth with isopropanol and swipe it along each strip once, in one direction only.



Cleaning the Plate Roller

2 Locate the blue plate roller.



3 Dampen a cloth with water, and slide the cloth over the plate roller.




4 To close the panels:

a. Pull down the front panel and turn the locking latches.



b. Pull down the top panel and then push on the two corners to lock the internal latches.

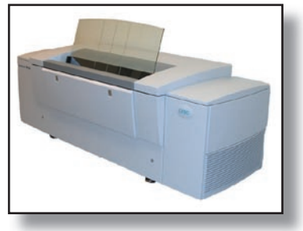



1 **Remove the fan box panel:**

a. Push the upper corners of the fan box panel in until you hear both latches click.



b. Lift the fan box panel up and out.



2 **Remove the old intake air filter from inside the fan box panel.**



3 **Clean the intake air filter frame.**



4 **Install the new intake air filter.**



Airflow arrows point inward.

5 **Replace the fan box panel:**

a. Lift the fan box panel and lower it onto the locating pins.



Locating pin

b. Push the upper corners of the fan box panel in until you hear both latches click.



CAUTION: Wear protective gloves when handling plates.*

CAUTION: If you have an implanted cardiac pacemaker, ensure that magnetic clamps are kept more than 7 cm (2.75 in.) away from the pacemaker.*




1 The device suspends activity.





2 Open the front panel:

a. In Print Console software, unlock the front panel.

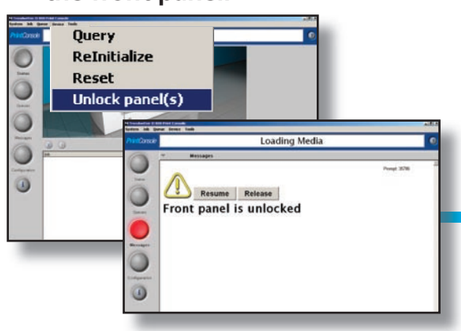

b. Rotate the two latches and lift the front panel.

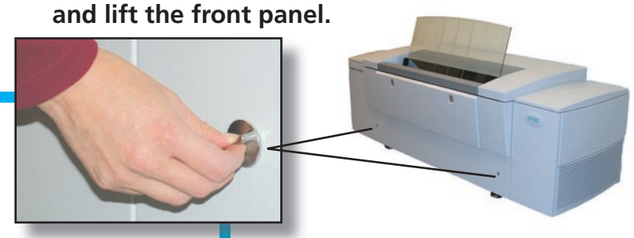

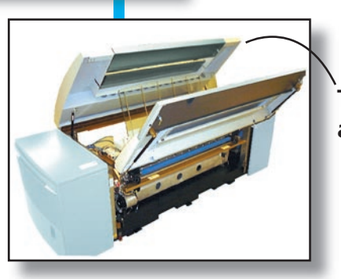


The top panel opens automatically.

3 Rotate the drum to expose the trailing-edge clamps.



4 Slide the trailing-edge clamps off the plate.

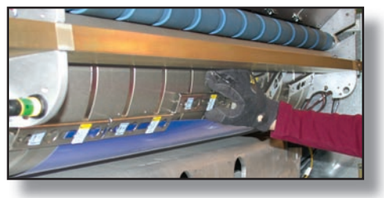

5 Fold over the corners of the plate.



6 Press the leading-edge clamps to free the plate.



7 Clean out any debris left behind.



8 In Print Console, click **Resume**.



9 Reposition the trailing-edge clamps:

a. Align the trailing-edge clamps.




b. Slide the trailing-edge clamps into position.




10 Close the panels:

a. Pull down the front panel and rotate the locking latches.

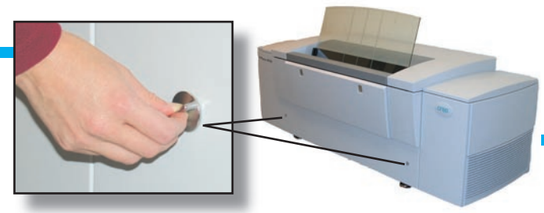

b. Pull down the top panel, and then push on the two corners to lock the internal latches.

11 In Print Console, click **Resume**.

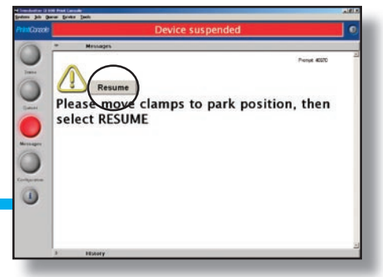

 * Refer to the *Operator Guide* for full details.