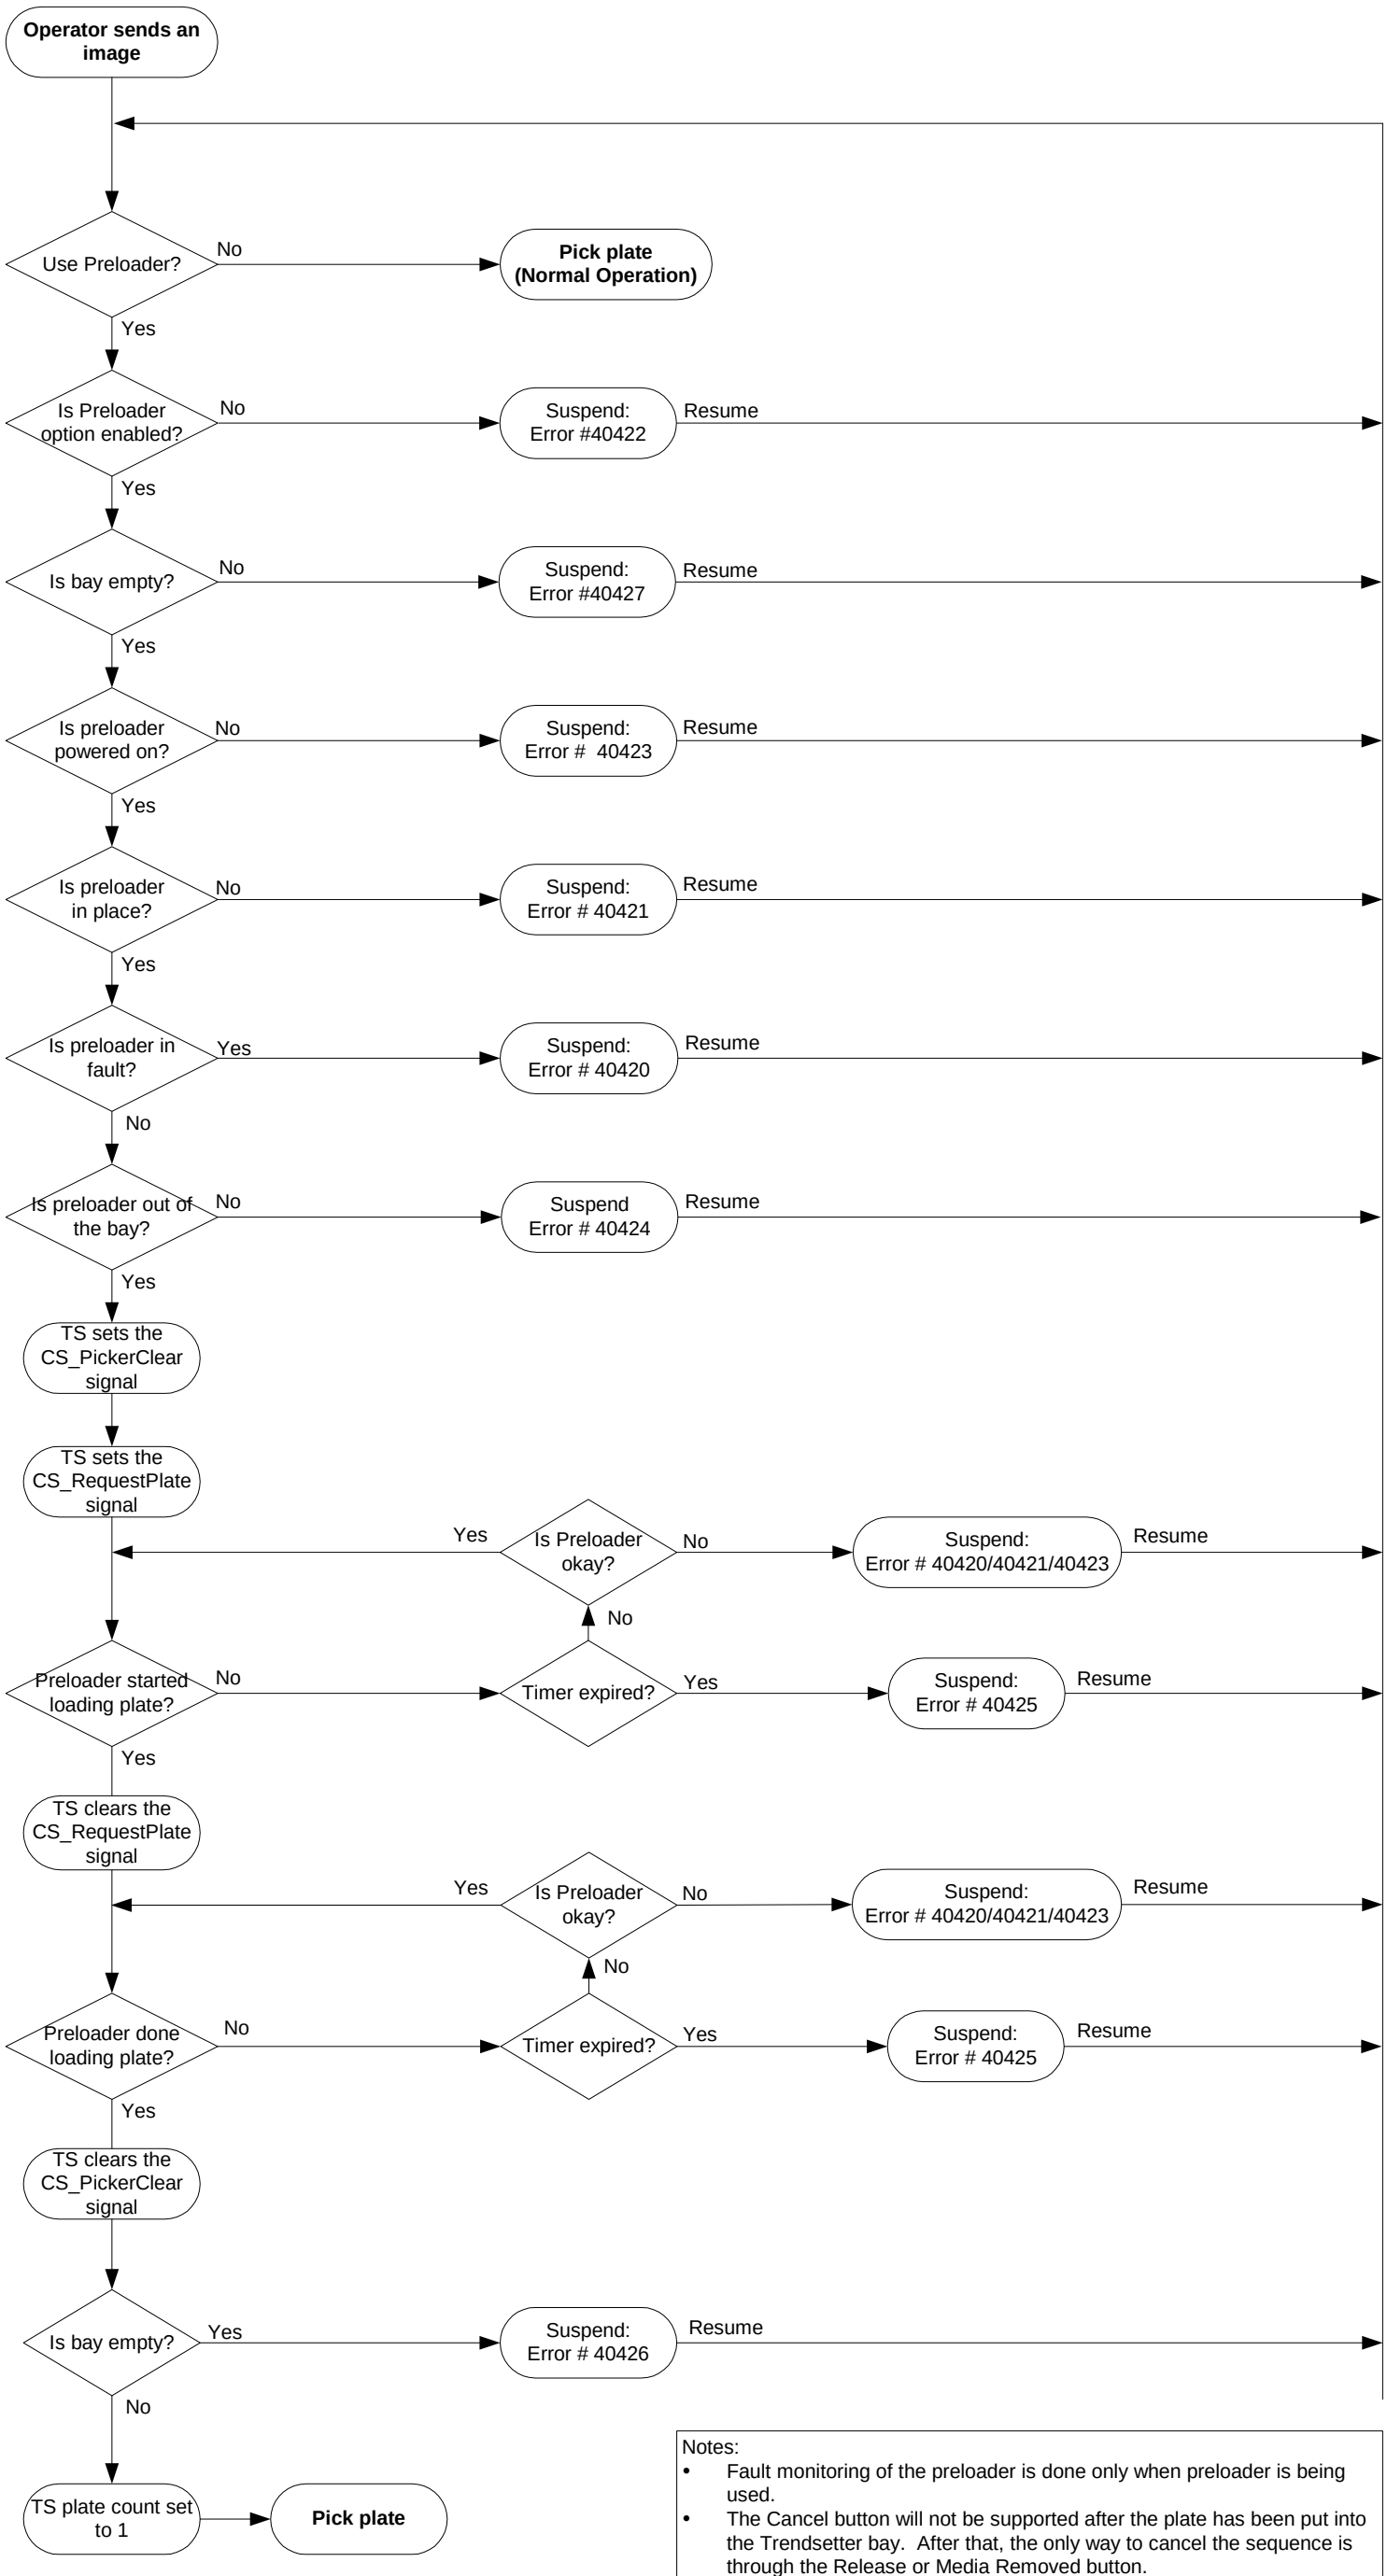



Notes:

- Fault monitoring of the preloader is done only when preloader is being used.
- The Cancel button will not be supported after the plate has been put into the Trendsetter bay. After that, the only way to cancel the sequence is through the Release or Media Removed button.
- If Release or Media Removed is selected, all media must be removed from the Trendsetter bay before continuing.

ERROR 40420:
The Preloader is in fault state. Please check the Preloader display for more information

ERROR 40421:
The Preloader is not ready. It may be out of position, open, or not fully powered on

ERROR 40422:
40422 Preloader requested for loading, but the Trendsetter is not configured properly

ERROR 40423:
The Preloader is not powered on. Please check the Preloader connections

ERROR 40424:
The Preloader is in the bay. Please check the Preloader display for more information

ERROR 40425:
40425 The Preloader is not loading plates properly into the Trendsetter bay. Please check the Preloader display for more information

ERROR 40426:
No plates detected in the bay. The plate may have not been loaded properly loaded by the Preloader

ERROR 40427:
Please remove all plates from the Trendsetter bay