
User screen for OP7 - Notices/ Errors at the Preloader

Update November 2004
K.Zehnle Prototyping

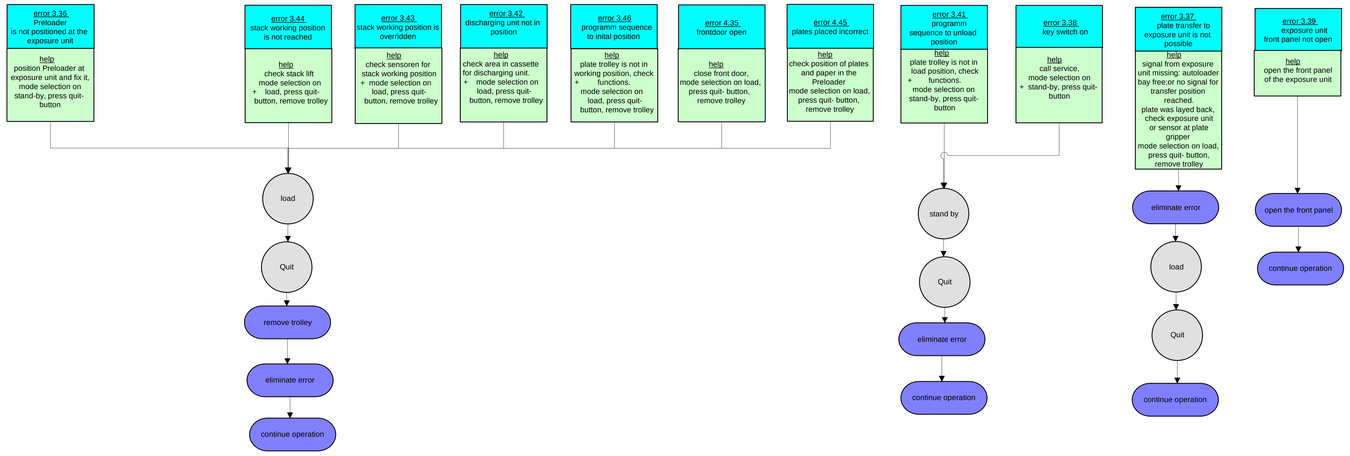


key button configuration for user


ESC: switch back from actual line or display
HELP: explanation is shown, if existing - LED lights in this case
ACK: notices and errors are switched off from the display


notice during start up with main switch

Preloader
starting time on

continue operation means: select mode to use, press quit-button

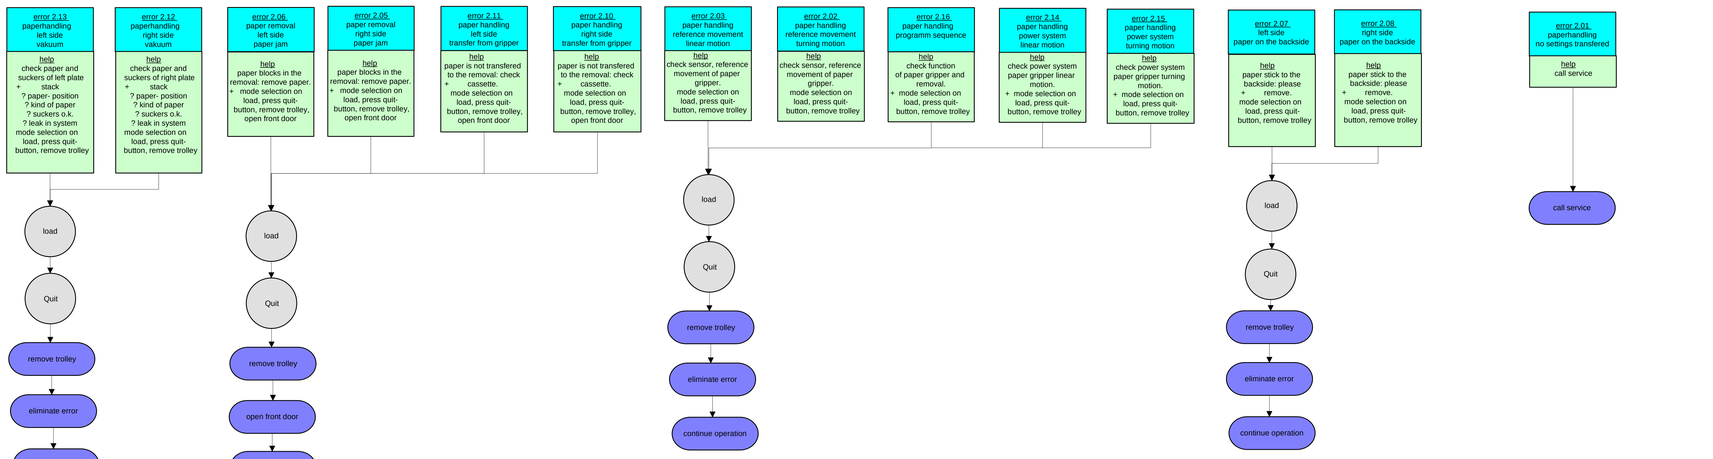

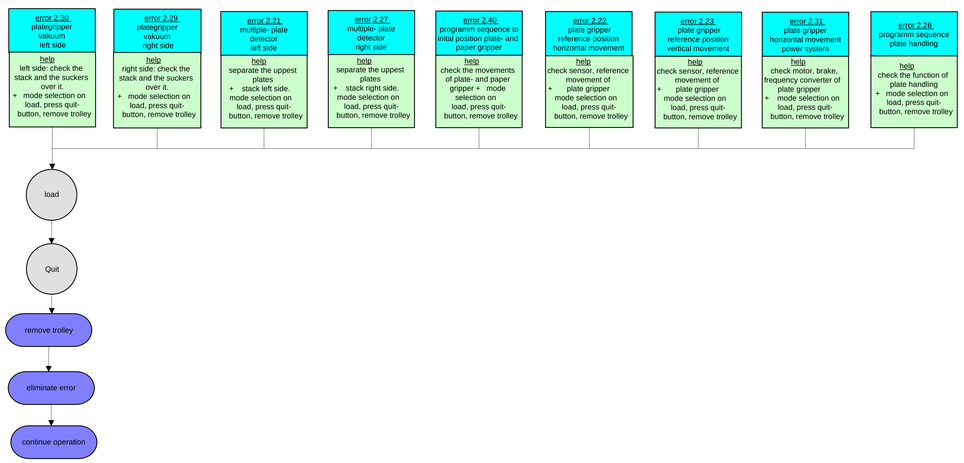





Error messages in clear text

Cylinder labeling	Function / Status
1A1	Multible plate detecting not in initial position
2A1	Trolley lift unit right side not in initial position
2A2	Trolley lift unit left side not in inital position
2A1	Trolley lift unit right side not in operating position
2A2	Trolley lift unit left side not in operating position
3A1	Paper pusher right or left side not in initial position
7A1	Paper removal roller left side not in inital position
7A2	Paper removal roller right side not in initial position
12A1/12A2	Fan out unit not in initial position
12A1/12A2	Fan out unit not in operating position
13A1	Intermediate lift not in initial position
14A1	Pick up lift not in initial position
15A1	Deposit lift not in initial position
17A1/17A2	Stripper rail not in initial position