
Visual Quick Reference
English

Trendsetter 400/800 II


653-00827A-EN-A
Internal 732-00025A-EN-A

www.creo.com

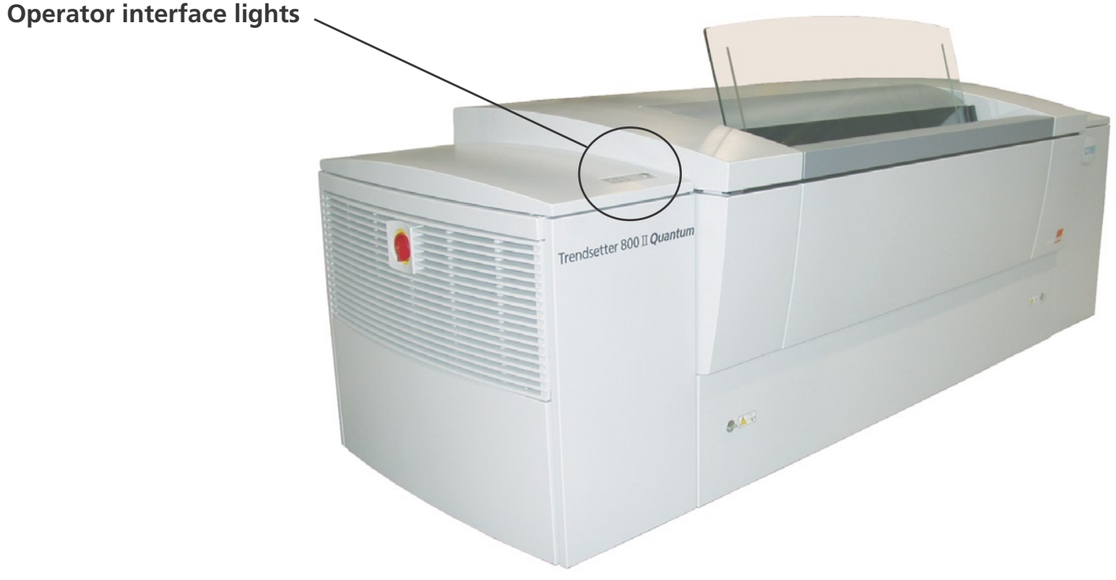



			Operator Action
Operator Interface Lights	Imaging Light	Flashing green	Wait—the device is imaging the plate.
	Load Light	Solid green	Place a plate on the load ramp. The green light stays on until the plate is unloaded.
	Error Light	Flashing yellow	An error has occurred and the job is suspended.

Prinergy

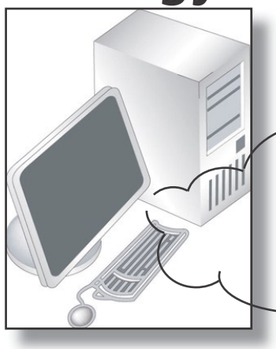


1 In Prinergy, click OK to submit the file.

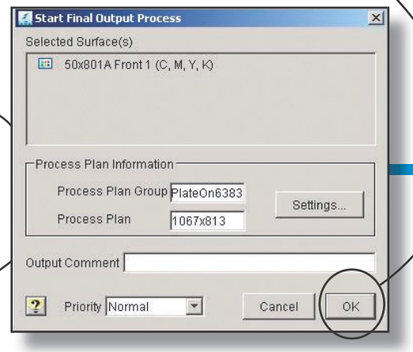


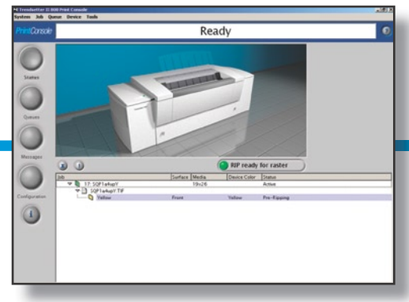

The output device receives the job in Print Console.




Brisque

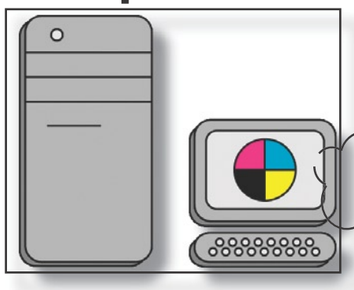


1 In Brisque, click Submit to submit the file.




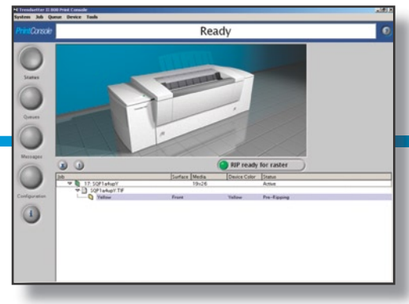


The output device receives the job in Print Console.




TIFF Workflow

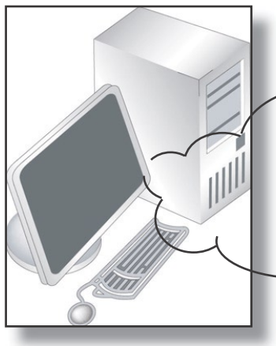


1 In Print Console, click Open to submit the file.

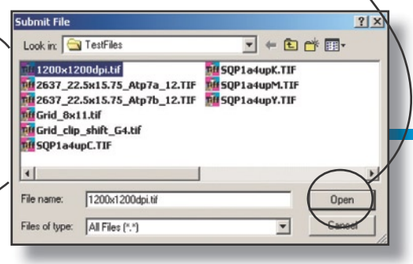



2 Right-click the job and select Approve.

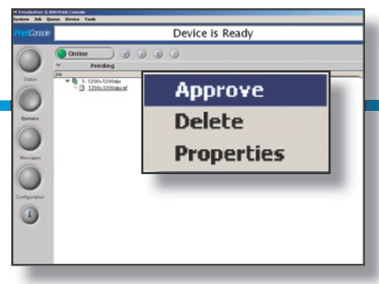

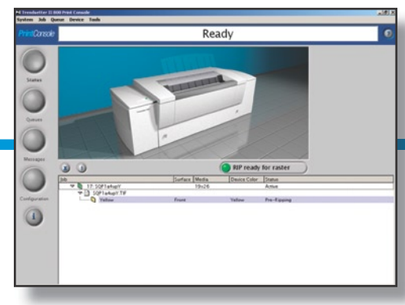


The output device receives the job.

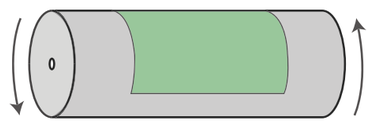

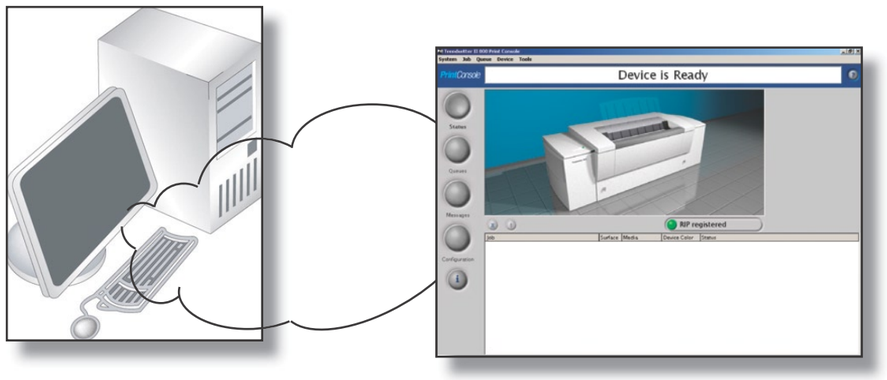


1 **In Print Console:**

a. Click Open to submit the file.

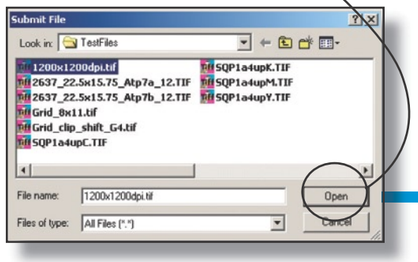

The load light flashes green.

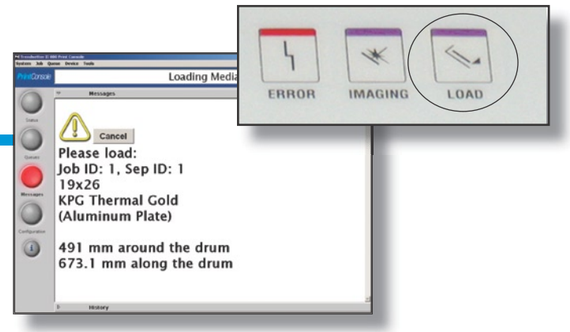

b. Ensure that the correct plate is available for loading.

2 **Remove slip sheet.**




3 **Position plate on the load ramp.**




4 **Lower the plate gently until it touches the registration pins.**




5 **Align the plate on the load ramp.**

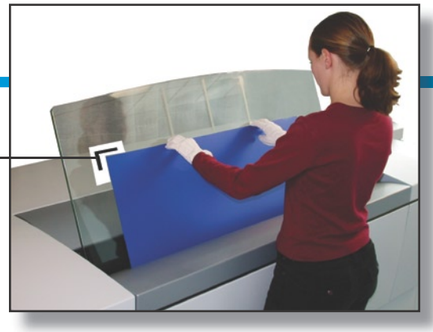


The load light flashes green.

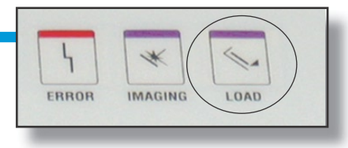

6 **Press the Start button.**

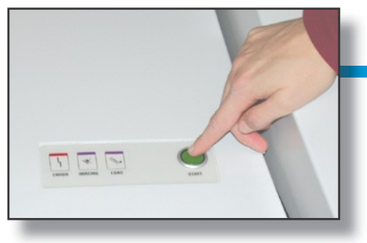

The imaging light flashes green.

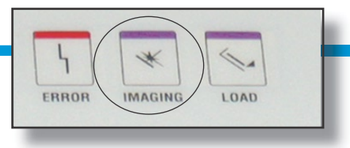


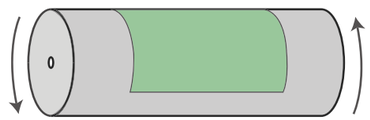


Plate imaging

The load light glows solid green.




7 **Unload the plate.**

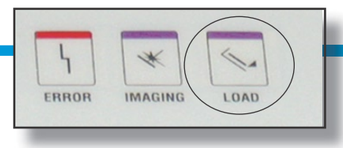


Maintenance and Operations		Work To Be Done	How Often	Date Work Completed
Exterior surfaces		Clean	Weekly	
Load ramp	1	Clean		
Plate roller *	10	Clean	Monthly	
Edge detection strip *	9	Clean	Every three months	
Compressed air supply filters:			Six months or as needed	
5 micron filter *	4	Replace		
0.01 micron filter *	5	Replace		
Intake air filter *	7	Replace		
Debris removal filter	6	Replace	As needed	
Turn on the output device	3	Turn on power		N/A
Turn off the output device	2	Turn off power		
Reset the output device	8	Reset		

* Procedures for these items are included in this visual quick reference guide.
Note: This document is not intended as a substitute for the Trendsetter 400/800 (TSM Version) Operator Manual. Refer to the operator manual for a more detailed explanation.
All software images refer to Print Console version 3.5.

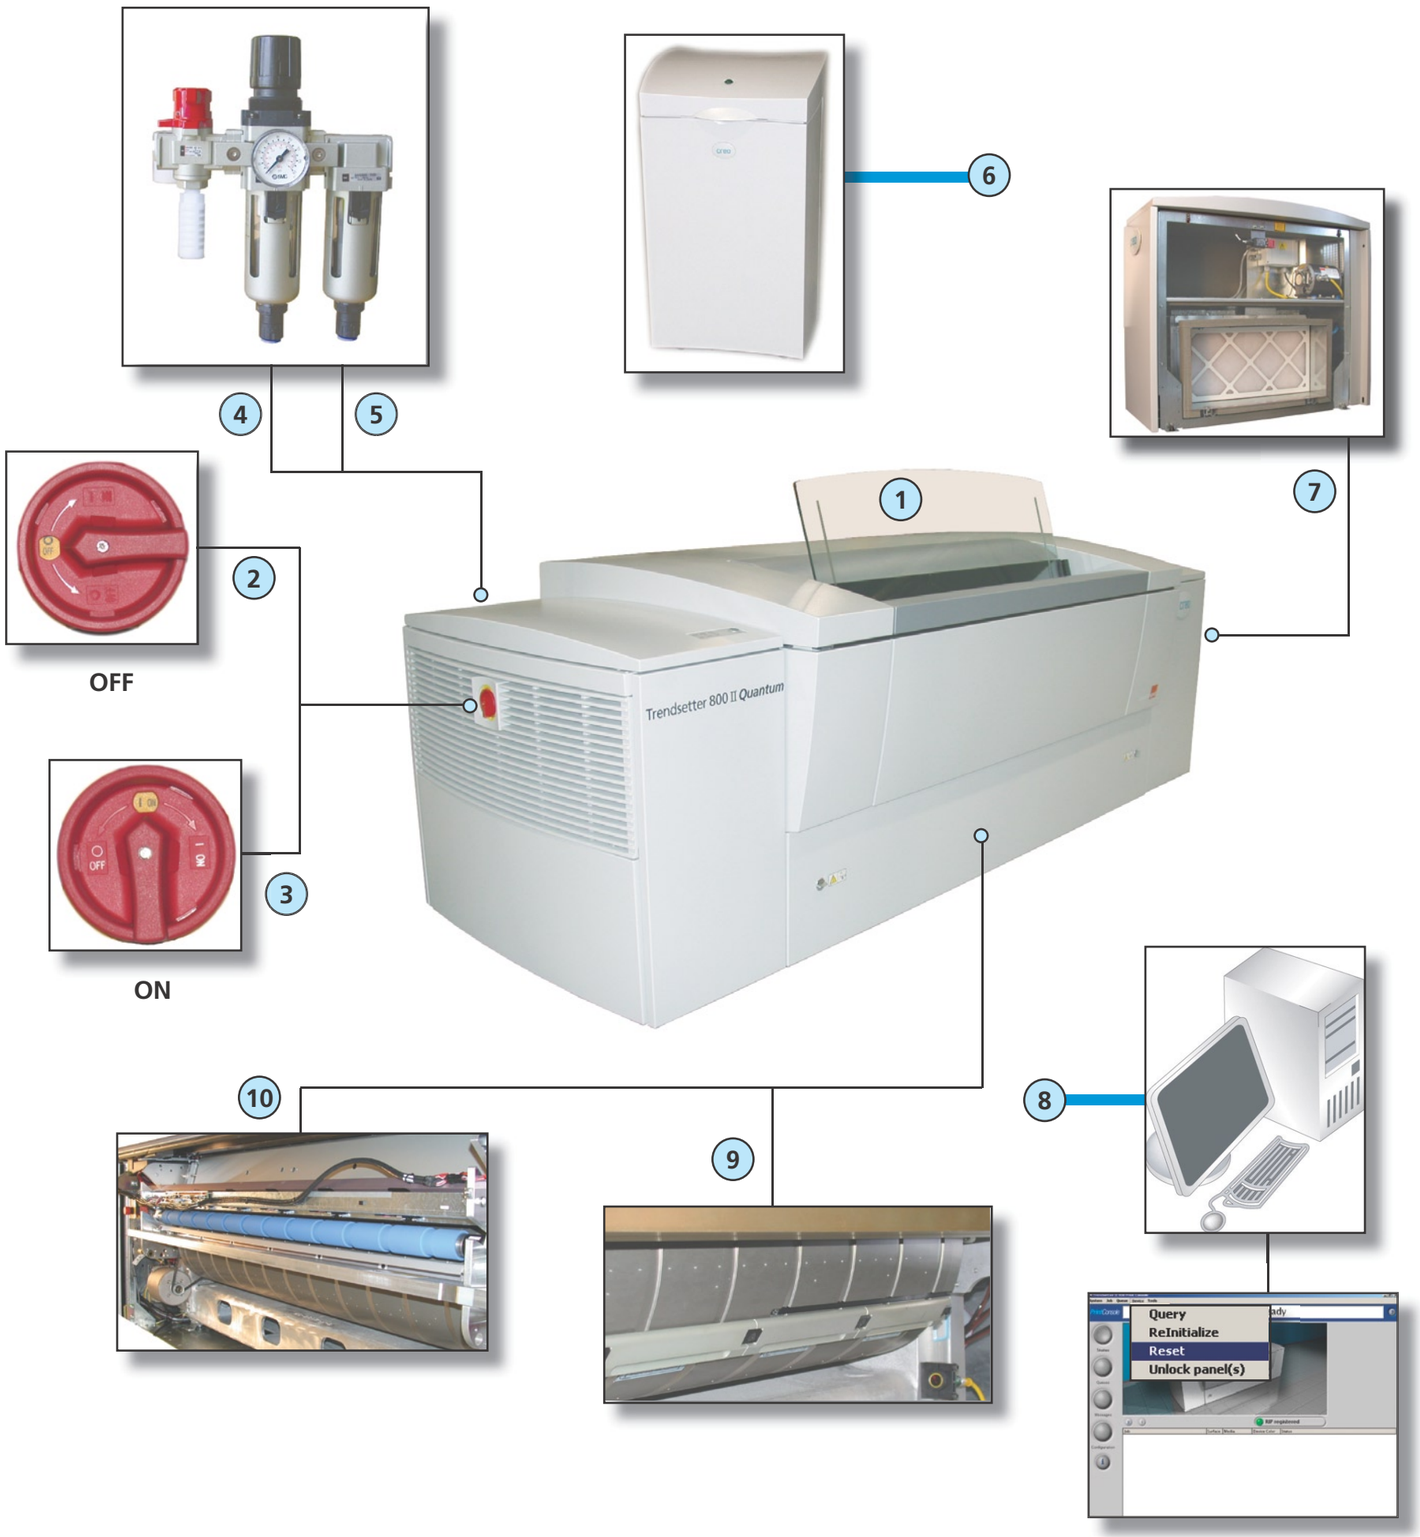

Copyright © 2004 Creo Inc. All rights reserved.

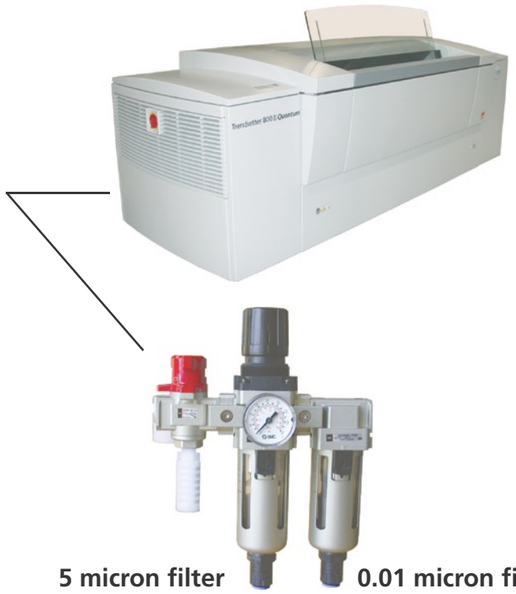

5 micron filter 0.01 micron filter

Air supply filter kit
Part number 332-00003


Replacing the 5 Micron Filter

1 Turn off the compressed air.




0 psi

2 Rotate the filter bowl by pulling the tab down and turning the bowl to the left.

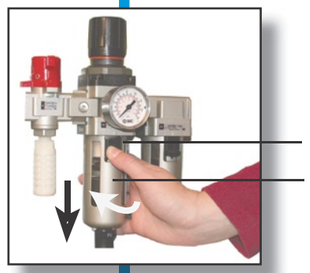

3 Install the new filter.

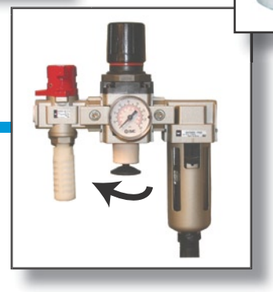



5 micron filter

4 Clean inside the bowl.

5 Replace the O-ring, if necessary.

6 Reattach the bowl by pushing it up and turning it to the right until it clicks.




7 Turn on the compressed air.




80 psi

Replacing the 0.01 Micron Filter

2 Rotate the filter bowl by pulling the tab down and turning the bowl to the left.

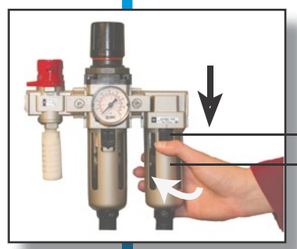

3 Install the new filter.

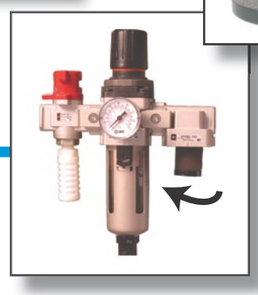



0.01 micron filter

4 Clean inside the bowl.

5 Replace the O-ring, if necessary.


6 Reattach the bowl by pushing it up and turning it to the right until it clicks.




Cleaning the Edge Detection Strip

1 To open the front panel:

a. In Print Console software, unlock the front panel.

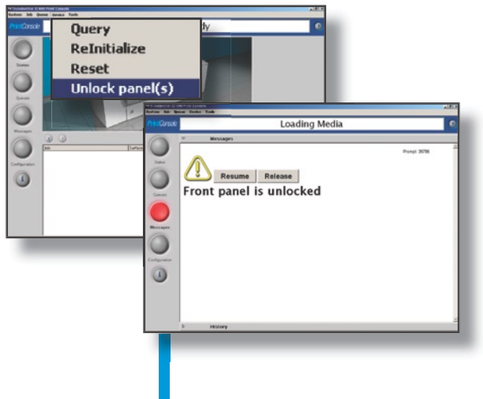


b. Rotate the two latches and lift the front panel.

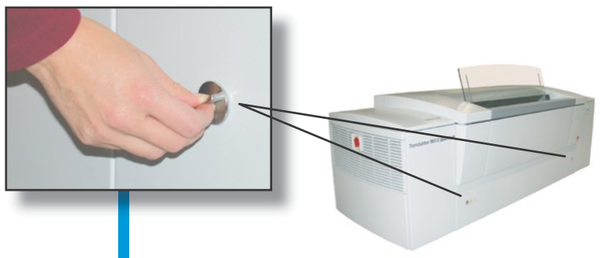



2 Rotate the drum to expose the edge detection strip.

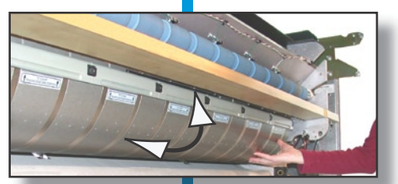



3 Dampen a cloth with isopropanol, and slide the cloth along the edge detection strip.



4 To close the front panel:

a. Pull down the front panel.



b. Turn the locking latches.





c. Close the top panel.

Cleaning the Plate Roller

2 Locate the blue plate roller.



3 Dampen a lint-free cloth with water, and slide the cloth over the plate roller.





Fan box panel

Intake air filter
Part number 55-0700

1 **Remove the fan box panel:**

a. Push the upper corners of the fan box panel in until you hear both latches click.





b. Lift the fan box panel up and out.

2 **Remove the old intake air filter from inside the fan box panel.**



3 **Clean the intake air filter frame.**



4 **Install the new intake air filter.**





Airflow arrow points inward.

5 **Replace the fan box panel:**

a. Lift the fan box panel and lower it onto the locating pins.






Locating pin




b. Push the upper corners of the fan box panel in until you hear both latches click.

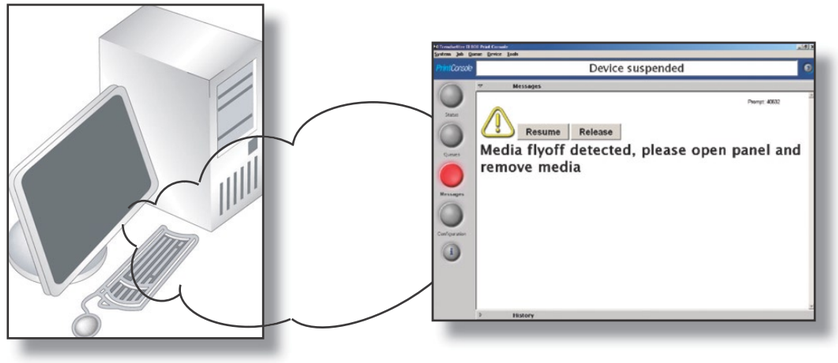

1 To open the front panel:

a. In Print Console software, unlock the front panel.

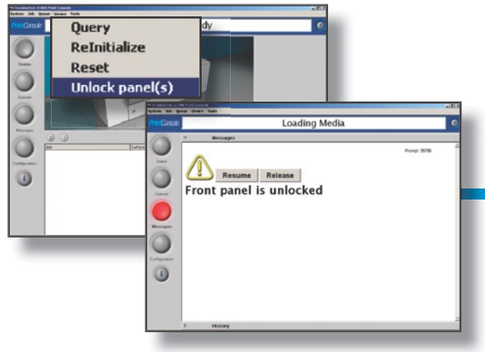


b. Rotate the two latches and lift the front panel.



2 Rotate the drum to expose the trailing-edge clamps.



3 Slide the trailing-edge clamps off the plate.

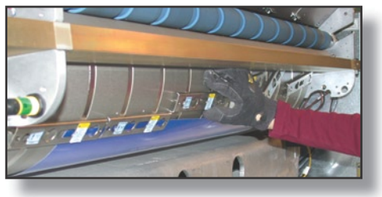


4 Fold over the corners of the plate.



5 Press the leading-edge clamps to free the plate.




6 Clean out any debris left behind.

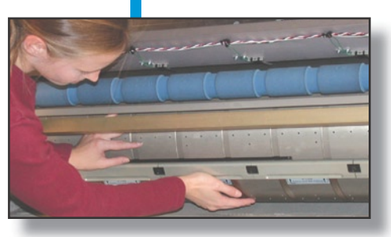

7 In Print Console, click Resume.



8 Reposition the trailing-edge clamps:

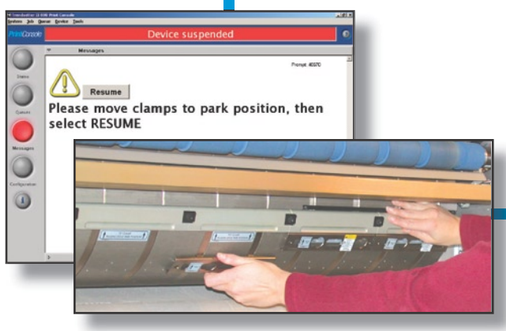

a. Align the trailing-edge clamps.

b. Slide the trailing-edge clamps into position.




9 Close the front panel.



Close the top panel.

10 In Print Console, click Resume.

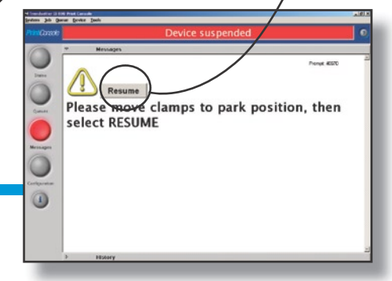

www.creo.com