Visual Quick Reference
English

Trendsetter ContinuousLoad


653-00825A-EN-A
Internal 732-00023A-EN-A

www.creo.com





Imaging Light	Load Light	Error Light	Status Lights	Operator Action
			Off	The device is idle. Submit a job through Print Console when you're ready.
	Solid green		Solid blue	Place a plate on the prestage area.
	Solid green		Solid green	Wait—the device is loading the plate.
Flashing green	Solid green			Wait—the device is imaging the plate.
	Solid green		Flashing green	Wait—the device is unloading the plate.
			Flashing blue	Manual bypass only—remove the plate from the manual bypass door.
		Flashing yellow	Flashing yellow	An error has occurred and the job is suspended. Press the Media Removed or Resume button.

Prinergy

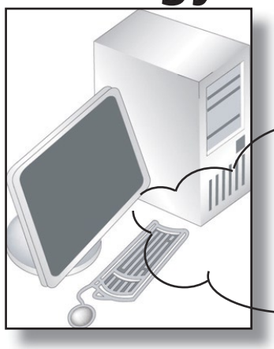


1 In Prinergy, click OK to submit the file.

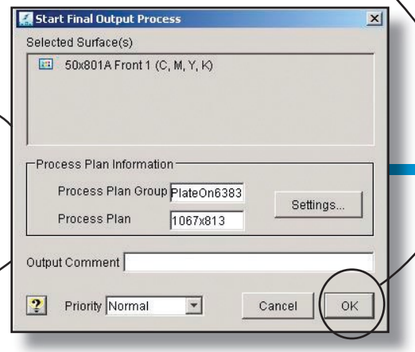


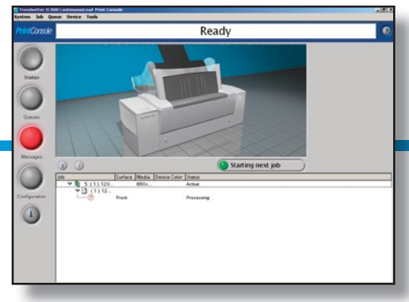


The output device receives the job in Print Console.




Brisque

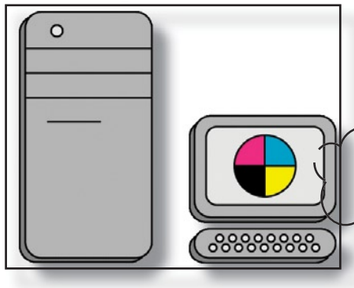


1 In Brisque, click Submit to submit the file.

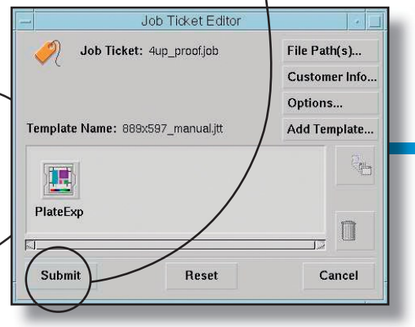


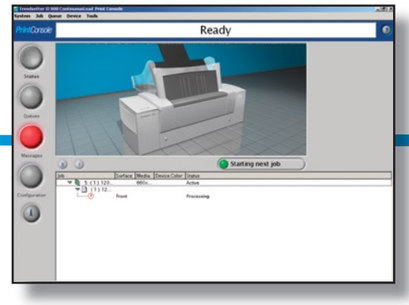


The output device receives the job in Print Console.




TIFF Workflow

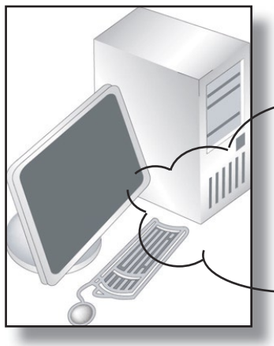


1 In Print Console, click Open to submit the file.

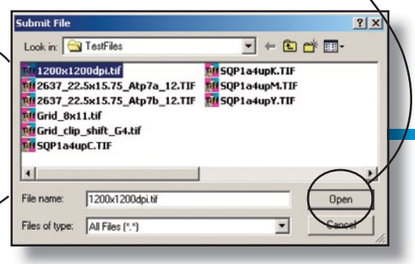


2 Right-click the job and select Approve.

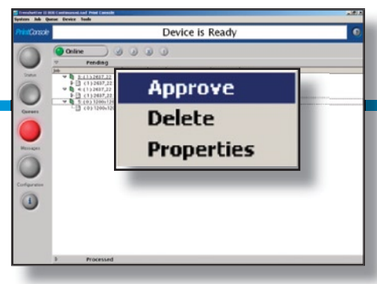

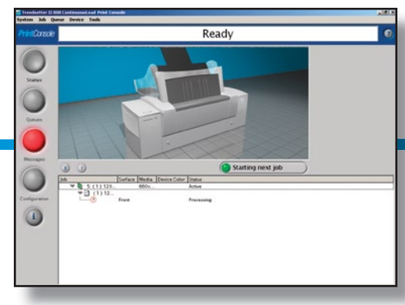


The output device receives the job.

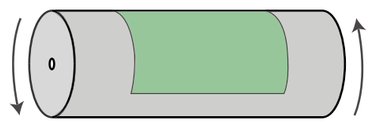


Imaging a Plate Automatically

Trendsetter ContinuousLoad

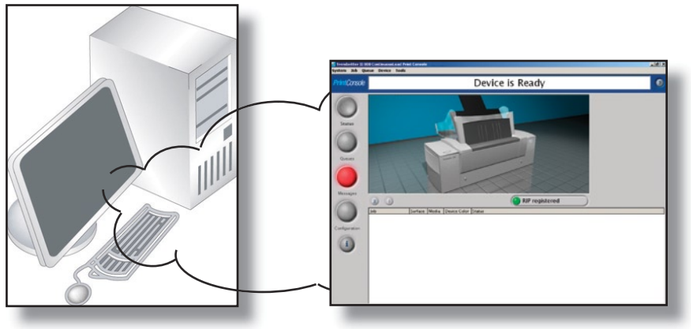


1 **In Print Console:**

a. Click Open to submit the file.

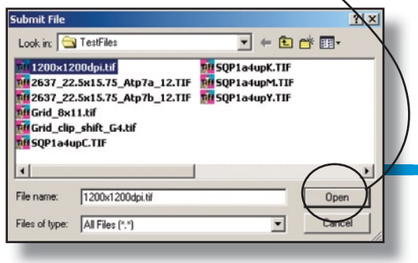

Status light glows a solid blue.

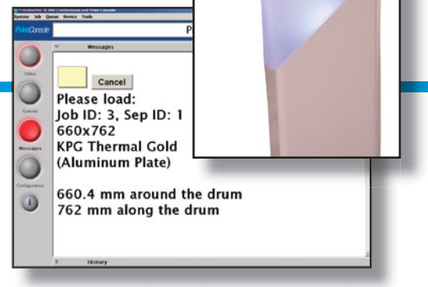

b. Ensure that the correct plate is available for loading.

2 **Remove the slip sheet.**




3 **Position the plate on the load ramp.**



The plate sits on the plate door.

4 **Align the plate on the load ramp.**

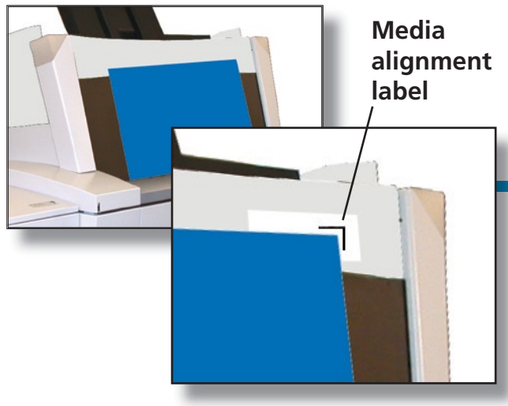

Media alignment label

5 **Press the Start button.**



Status light glows a solid green.






Plate imaging

Status light flashes blue.

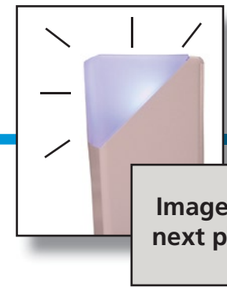


Image the next plate.

6 **Remove the slip sheet.**




7 **Position the next plate on the load ramp.**



The plate sits on the plate door.


8 **Align the plate on the load ramp.**

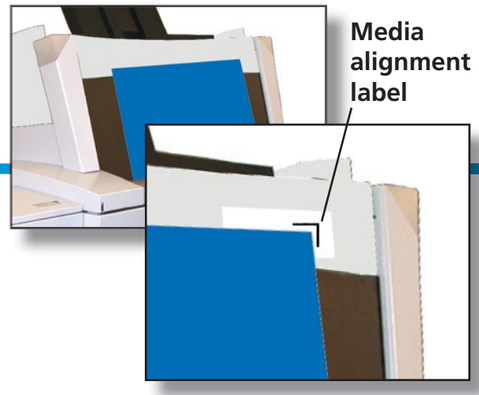

Media alignment label

9 **Press the Start button.**



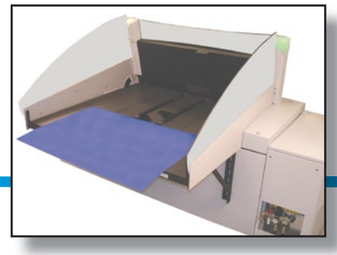

When the first plate unloads at the rear, the next plate loads onto the drum for imaging.





Plate imaging

To continue imaging plates, repeat steps 6 through 9.


Imaging a Plate Manually

Trendsetter ContinuousLoad

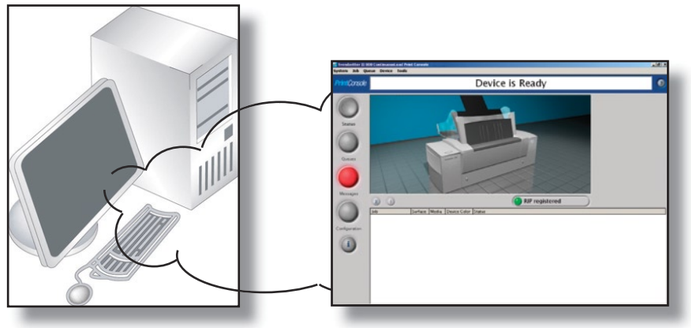

1 **In Print Console:**

a. Click Configuration, then click Print Setups.

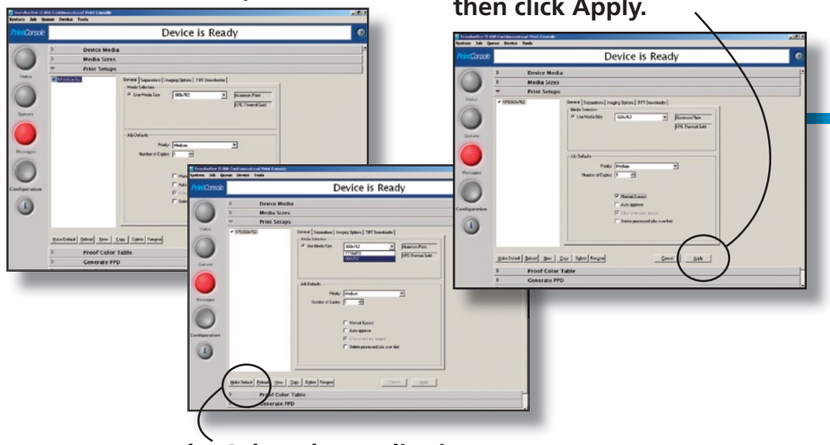


c. Select Manual Bypass, then click Apply.

b. Select the media size, then click Make Default.

2 **In Print Console:**

a. Click Open to submit the file.

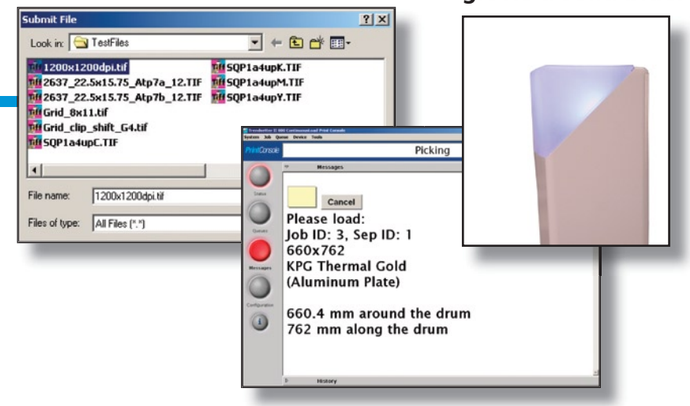

The status light glows a solid blue.

b. Ensure that the correct plate is available for loading.

3 **Remove slip sheet.**



4 **Placing the plate:**


a. Position the plate on the load ramp.






b. Lower the plate gently until it touches the registration pins.

5 **Align the plate on the load ramp.**

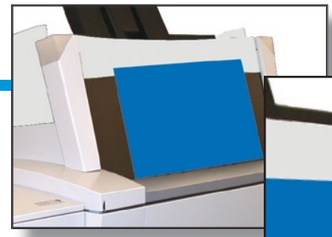

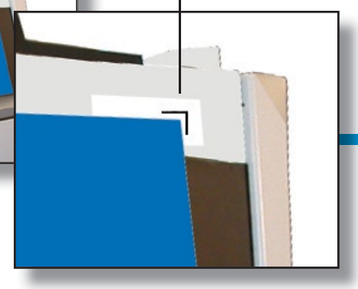

6 **Release the plate.**



7 **Press the Start button.**



The status light glows a solid green.




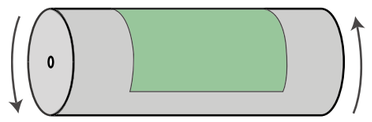


Plate imaging



The status light flashes blue.

8 **Unload the imaged plate.**

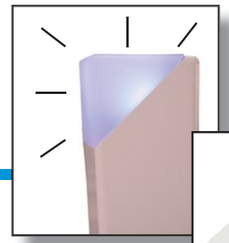


9 To continue imaging plates manually, repeat steps 2 through 8.

10 To exit from manual mode, uncheck Manual Bypass in step 1 to reset to ContinuousLoad mode.

Maintenance and Operations		Work To Be Done	How Often	Date Work Completed
Exterior surfaces		Clean	Weekly	
Load ramp	1	Clean		
Plate roller *	9	Clean	Monthly	
Edge detection strip *	10	Clean	Every three months	
Compressed air supply filters:			Six months or as needed	
5 micron filter *	4	Replace		
0.01 micron filter *	5	Replace		
Intake air filter *	7	Replace		
Suction cups *	11	Replace		
Debris removal filter	6	Replace	As needed	
Turn on the output device	3	Turn on power		N/A
Turn off the output device	2	Turn off power		
Reset the output device	8	Reset		

* Procedures for these items can be found in this visual quick reference guide.
Note: This document is not intended as a substitute for the Trendsetter ContinuousLoad (TSM Version) Operator Guide. Refer to the operator guide for more detailed explanation.
All software images refer to Print Console version 3.7.

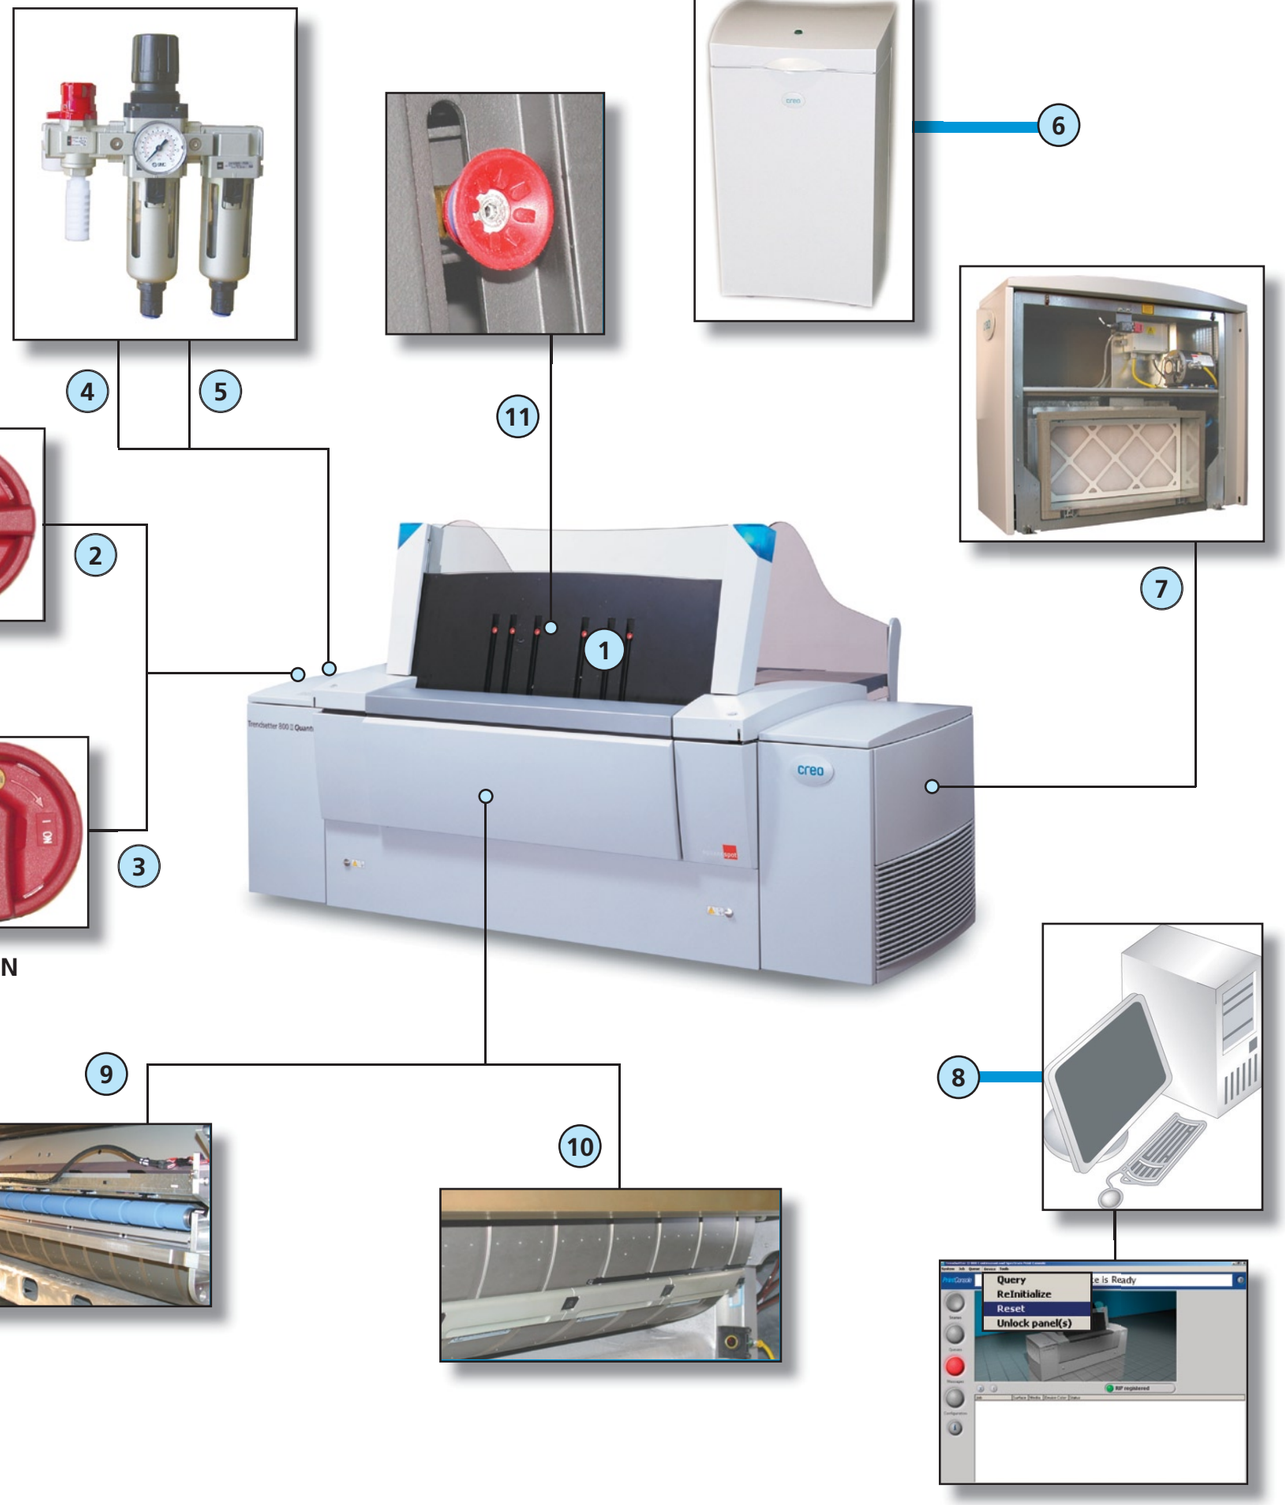

Copyright © 2004 Creo Inc. All rights reserved.





5 micron filter

0.01 micron filter

Air supply filter kit
Part number 332-00003

Replacing the 5 Micron Filter

1 Turn off the compressed air.









0 psi

2 Rotate the filter bowl by pulling the tab down and turning the bowl to the left.

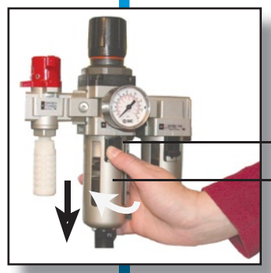

3 Install the new filter.

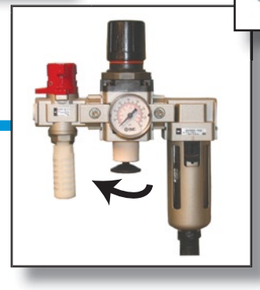



5 micron filter


4 Clean inside the bowl.

5 Replace the O-ring, if necessary.

6 Reattach the bowl by pushing it up and turning it to the right until it clicks.




7 Turn on the compressed air.

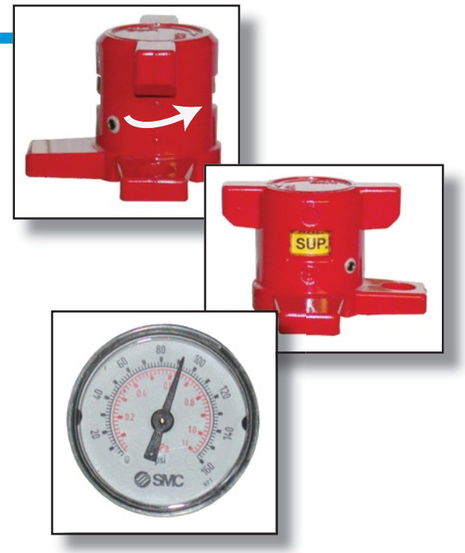


90 psi

Replacing the 0.01 Micron Filter

2 Rotate the filter bowl by pulling the tab down and turning the bowl to the left.

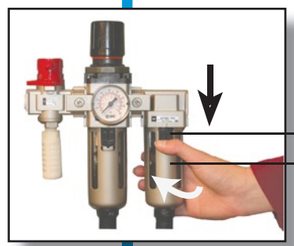

3 Install the new filter.

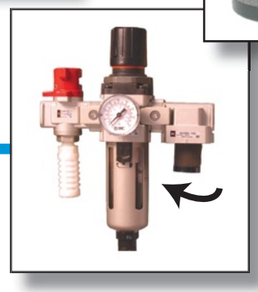



0.01 micron filter

4 Clean inside the bowl.

5 Replace the O-ring, if necessary.


6 Reattach the bowl by pushing it up and turning it to the right until it clicks.




Cleaning the Edge Detection Strip


1. To open the front panel:

   a. In Print Console software, unlock the front panel.

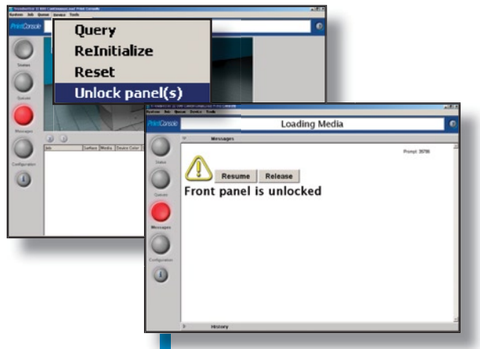


   b. Rotate the two latches and lift the front panel.

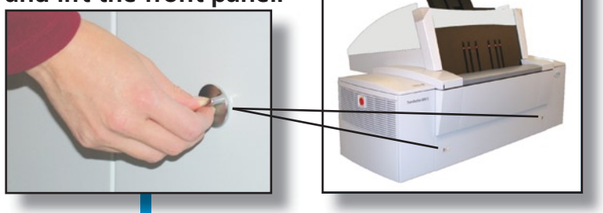

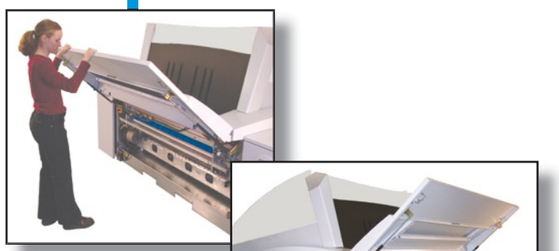

2. Rotate the drum to expose the edge detection strip.

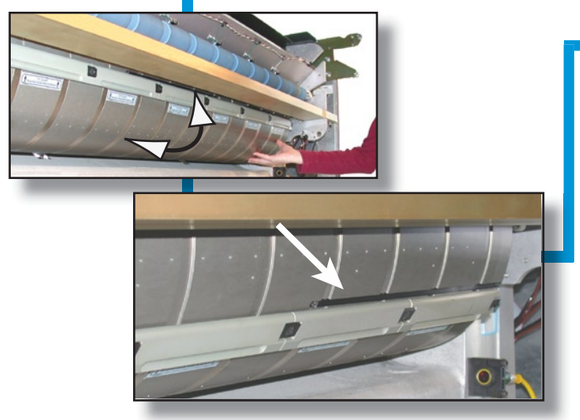

3. Dampen a cloth with isopropanol, and slide the cloth along the edge detection strip.



4. To close the front panel:

   a. Pull down the front panel.



   b. Turn the locking latches.



Cleaning the Plate Roller

2. Locate the blue plate roller.



3. Dampen a lint-free cloth with water, and slide the cloth over the plate roller.





Fan box panel

Intake air filter
Part number 55-0700

1 **Remove the fan box panel:**

a. Push the upper corners of the fan box panel in until you hear both latches click.





b. Lift the fan box panel up and out.

2 **Remove the old intake air filter from inside the fan box panel.**



3 **Clean the intake air filter frame.**



4 **Install the new intake air filter.**





Airflow arrow points inward.

5 **Replace the fan box panel:**

a. Lift the fan box panel and lower it onto the locating pins.






Locating pin




b. Push the upper corners of the fan box panel in until you hear both latches click.

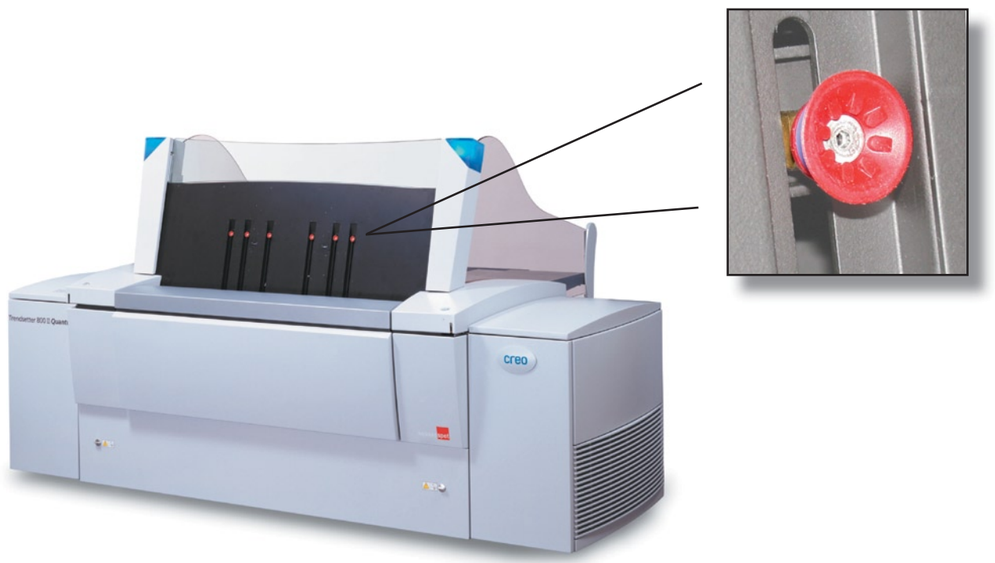

Suction cups (set of six)
Part number 340-00004

1 Peel off the worn suction cup.

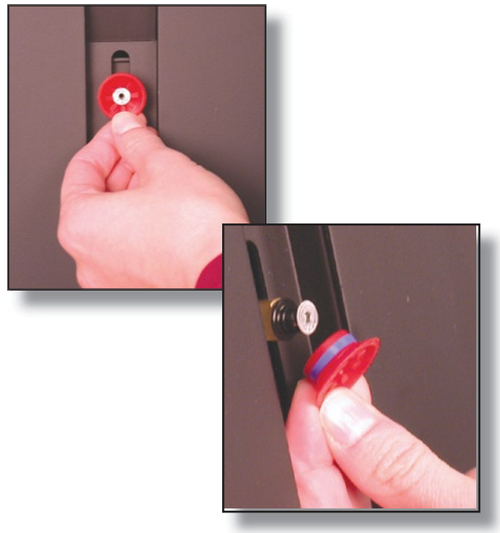


2 Replace with a new suction cup:

a. Insert new suction cup onto mounting stem.




b. Rotate the suction cup 360 degrees.

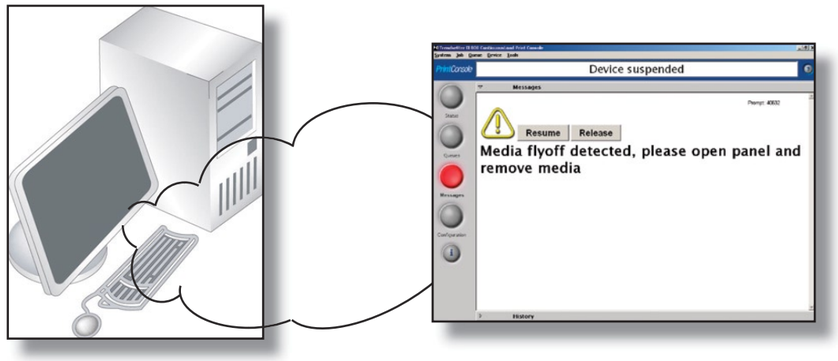


1 **To open the front panel:**

a. In Print Console software, unlock the front panel.

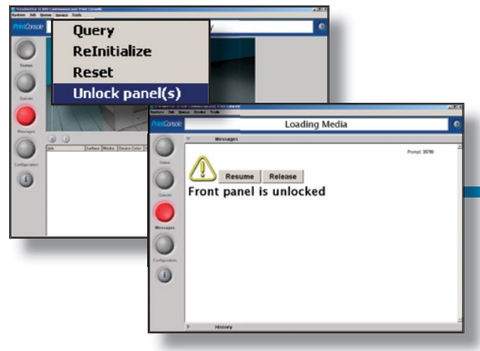


b. Rotate the two latches and lift the front panel.

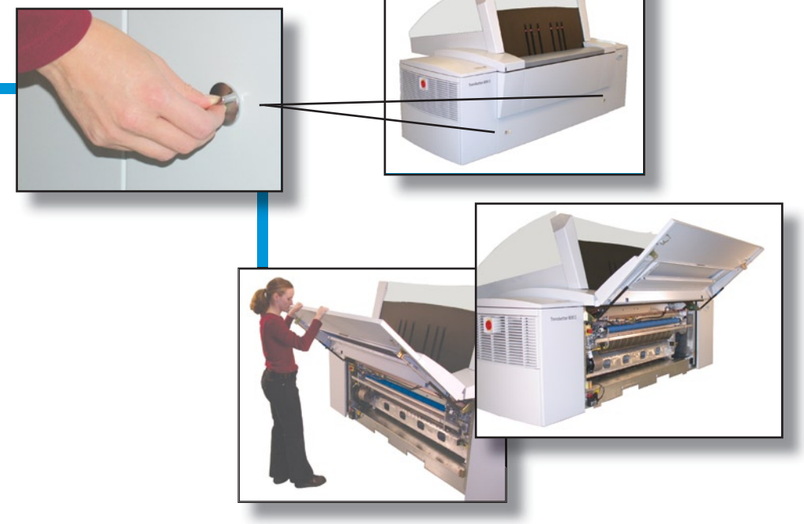

2 **Rotate the drum to expose the trailing-edge clamps.**



3 **Slide the trailing-edge clamps off the plate.**

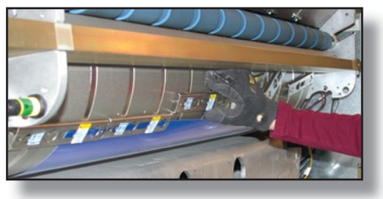

4 **Fold over the corners of the plate.**




5 **Press the leading-edge clamps to free the plate.**




6 **Clean out any debris left behind.**



7 **In Print Console, click Resume.**

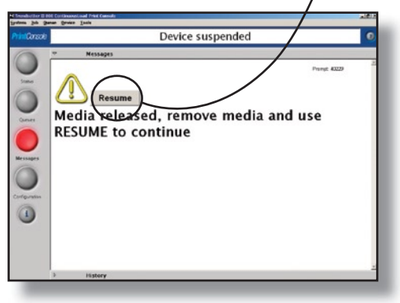

8 **Reposition the trailing-edge clamps:**

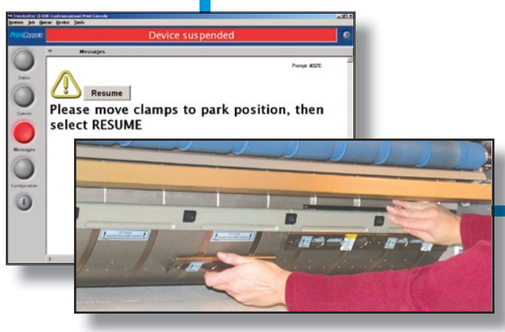

a. Align the trailing-edge clamps.


b. Slide the trailing-edge clamps into position.



9 **Close the front panel.**



10 **In Print Console, click Resume.**

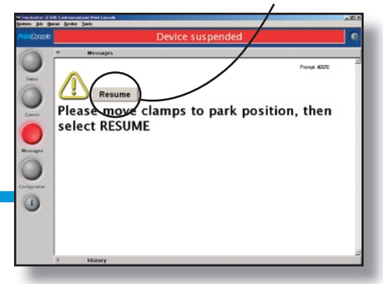

www.creo.com