Lubricating the Leadscrew Hanger Bearing

Applies to

- ☑ Trendsetter VLF (up to B744)
- ☑ Trendsetter VLF Autoloader
- ☑ VLF Platesetter


Background

The leadscrew hanger bearing is received from the vendor without any grease. It has a light rust inhibitor only. For maintenance, it is important that the bearing is packed with grease


Steps

To lubricate the leadscrew hanger bearing:

1. Carefully pry off the plastic dust cover.

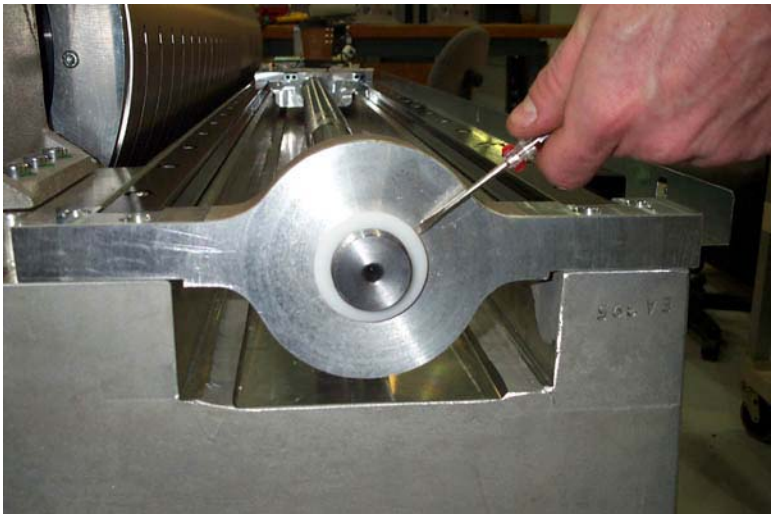

2. Using a grease gun with a needle attachment, fill the free space around the bearing up to 90% full. You may use any general-purpose grease or bearing grease.

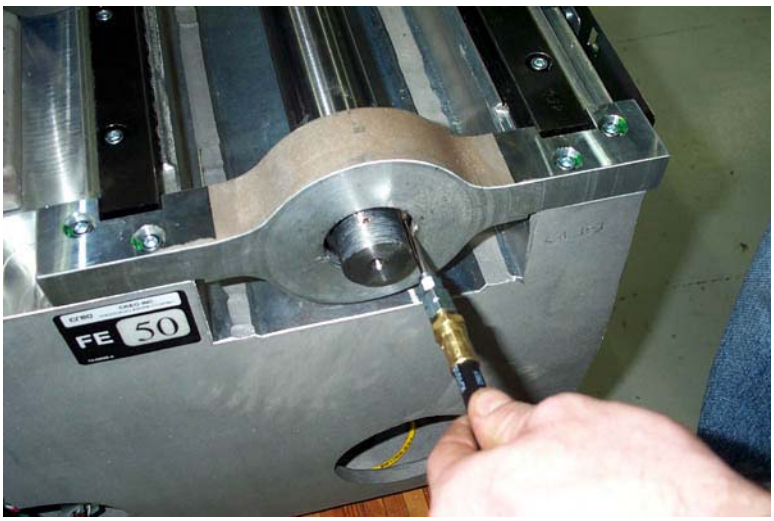

3. Fit the dust cover back in place.

Notes	Once the bearing is packed with grease, it should not need re-greasing while in service since the application is low-speed.
Technical contact	Angus Gillon
Date submitted	14 Oct 2003
Date modified	22 Oct 2003