# Installation and User Guide

English

# Upd_Brisque4_Flexo

version **4.0.97.2**

399Z1R892A

www.creo.com

## Copyright

Copyright © 2001 Creo Products Inc. All rights reserved.

Creo is a major operating division of Creo Products Inc.

No copying, distribution, publication, modification, or incorporation of this document, in whole or part, is permitted without the express written permission of Creo. In the event of any permitted copying, distribution, publication, modification, or incorporation of this document, no changes in or deletion of author attribution, trademark legend, or copyright notice shall be made.

No part of this document may be reproduced, stored in a retrieval system, published, used for commercial exploitation, or transmitted, in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the express written permission of Creo Products Inc.

This document is also distributed in Adobe Systems Incorporated's PDF (Portable Document Format). You may reproduce the document from the PDF file for internal use. Copies produced from the PDF file must be reproduced in whole.

## Trademarks

The Creo script, the Creo swooshes logo, and the names of the Creo products and services referred to in this document are trademarks of Creo Products Inc.

Acrobat, the Acrobat logo, Adobe, Adobe Font Downloader, Adobe Illustrator, Adobe Photoshop, PDF, and PostScript are registered trademarks of Adobe Systems Incorporated.

Microsoft, Microsoft Windows NT, Microsoft Windows 2000, and Windows are trademarks or registered trademarks of Microsoft Corp.

Other brand or product names are the trademarks or registered trademarks of their respective owners.

## FCC Compliance

The Creo equipment referred to in this document complies with the requirements in Part 15 of FCC Rules for a Class A computing device. Operation of the Creo equipment in a residential area may cause unacceptable interference to radio and TV reception, requiring the operator to take whatever steps are necessary to correct the interference.

## Limitation of Liability

The product, software or services are being provided on an “as is” and “as available” basis. Except as may be stated specifically in your contract, Creo Products Inc. and Creo (jointly referred to as “Creo”) expressly disclaim all warranties of any kind, whether express or implied, including, but not limited to, any implied warranties of merchantability, fitness for a particular purpose and non-infringement.

You understand and agree that Creo Products Inc. or Creo shall not be liable for any direct, indirect, incidental, special, consequential or exemplary damages, including but not limited to, damages for loss of profits, goodwill, use, data or other intangible losses (even if Creo has been advised of the possibility of such damages), resulting from: (i) the use of or the inability to use the product or software; (ii) the cost of procurement of substitute goods and services resulting from any products, goods, data, software, information or services purchased; (iii) unauthorized access to or alteration of your products, software or data; (iv) statements or conduct of any third party; (v) any other matter relating to the product, software, or services; (vi) defects in the product or software or losses arising in any way from the claimed negligence or fault of Creo.

The text and drawings herein are for illustration and reference only. The specifications on which they are based are subject to change. Creo Products Inc. may, at any time and without notice, make changes to this document. Creo Products Inc., for itself and on behalf of its subsidiaries, assumes no liability for technical or editorial errors or omissions made herein, and shall not be liable for incidental, consequential, indirect, or special damages, including, without limitation, loss of use, loss or alteration of data, delays, or lost profits or savings arising from the use of this document.

## Patents

This product is covered by one or more of the following U.S. patents:

| | | | | | | |
|---|---|---|---|---|---|---|
| 4456924 | 5247352 | 5412737 | 5600448 | 5802034 | 5996499 | 6136509 |
| 4500919 | 5249067 | 5420702 | 5608822 | 5813346 | 5998067 | 6147789 |
| 4558302 | 5283140 | 5420722 | 5615282 | 5818498 | 6003442 | 6158345 |
| 4743091 | 5291273 | 5459505 | 5625766 | 5854883 | 6014471 | 6159659 |
| 4992864 | 5296935 | 5473733 | 5636330 | 5861904 | 6016752 | 6164637 |
| 5049901 | 5313278 | 5481379 | 5649220 | 5861992 | 6031932 | 6180325 |
| 5079721 | 5323248 | 5488906 | 5650076 | 5864651 | 6043865 | 6181362 |
| 5103407 | 5325217 | 5497252 | 5652804 | 5875288 | 6060208 | 6181439 |
| 5111308 | 5331439 | 5508828 | 5691823 | 5894342 | 6063528 | 6186068 |
| 5113249 | 5333064 | 5509561 | 5691828 | 5900981 | 6063546 | 6189452 |
| 5122871 | 5339176 | 5517359 | 5696393 | 5934196 | 6072518 | 6191882 |
| 5124547 | 5343059 | 5519852 | 5699174 | 5942137 | 6090529 | 6204874 |
| 5132723 | 5355446 | 5526143 | 5699740 | 5946426 | 6096461 | 6208369 |
| 5150225 | 5359451 | 5532728 | 5708736 | 5947028 | 6098544 | 6252522 |
| 5153769 | 5359458 | 5561691 | 5713287 | 5958647 | 6107011 | 6260482 |
| 5155782 | 5367360 | 5568595 | 5739819 | 5966504 | 6112663 | |
| 5157516 | 5367388 | 5576754 | 5742743 | 5969872 | 6115056 | |
| 5208818 | 5384648 | 5579115 | 5764381 | 5973801 | 6121996 | |
| 5208888 | 5384899 | 5592309 | 5771794 | 5986819 | 6130702 | |
| 5247174 | 5412491 | 5594556 | 5785309 | 5995475 | 6134393 | |

Creo Products Inc.
3700 Gilmore Way
Burnaby, B.C., Canada
V5G 4M1
Tel: 1-604-451-2700
Fax: 1-604-437-9891

http://www.creo.com

399Z1R892A

# Table of Contents


General ..... 2
Loading Upd_Brisque4_Flexo ..... 3
The FlexoTable Application ..... 4
    Launching FlexoTable ..... 4
    Editing FlexoTable ..... 5
Saving the FlexoTable ..... 7
    Backing up FlexoTable to a Data Volume ..... 7
    Restoring FlexoTable from a Data Volume ..... 8

# Upd_Brisque4_Flexo ver. 4.0.97.2

General....2
Loading Upd_Brisque4_Flexo....3
The FlexoTable Application....4
Saving the FlexoTable....7

# General

The FlexoTable application enables the service engineer to optimize and clear the Screen Set from unwanted effects, by determining the optimum number of laser beams the ThermoFlex platesetter will use to expose the separation. The application searches the table for the specific Screen Set parameters. When found, it returns the optimal number of beams for the exposure.

The table maintained by this application is saved locally on the Brisque and may be backed up. When needed, the table may be restored from it's backup location.

This document is relevant to the following platesetters:

- ThermoFlex model 2630 (24 beams)
- ThermoFlex model 4045 (48 beams).



**Note:** all Screen Sets assigned up to 24 beams are automatically referred to ThermoFlex 2630, where Screen Sets assigned from 25 to 48 beams are automatically referred to ThermoFlex 4045.

# Loading Upd_Brisque4_Flexo



**Note:** The Upd_Brisque4_Flexo should be installed on top of Brisque version 4.0.97 or higher.

**To load Upd_Brisque4_Flexo:**

1. Log out from the Brisque.
2. Log in as **root**, type `ripro` (your password) and press ENTER.
3. Insert the **Upd_Brisque4_Flexo** CD into the CD drive.
4. At the prompt, type `scismit` and press ENTER.
5. From scismit, select **Software Handling**, then **Update Software Packages.**
6. Press F4 to get the list of packages.
7. Press F7 to select both packages: **Upd_Brisque4_Expose.JRE** and **Upd_Brisque4_Flexo.**
8. Press ENTER twice.
9. To confirm, press ENTER when the message `Are You Sure?` appears.



**Important:** After loading is completed, please wait until the system reboots itself.

10. Remove the **Upd_Brisque4_Flexo** CD.
11. Log in as **cdesci.**

**To verify the update installation.**

- From the Launch Pad, open the **Station Info** panel and select **More Info**; the following packages should be listed:
  - **Upd_Brisque4_ExposeJRE.obj 4.0.97.2**
  - **Upd_Brisque4_FlexoJAR.obj 4.0.97.2**


# The FlexoTable Application

The FlexoTable application enables the service engineer to assign the correct number of beams for an optimum exposure of a specific Screen Set (defined by a fixed set of parameters including Screen Set resolution, frequency and angle).

## Launching FlexoTable

**To launch FlexoTable:**

1. From the Brisque Launch Pad, open a new terminal.
2. Log in as **root** and type **ripro** (your password).
3. Type `cd /scitex/version/Java/scripts` and press ENTER.
4. Type `./flexoTable.sh` and press ENTER; the Multi Beam Control window appears.

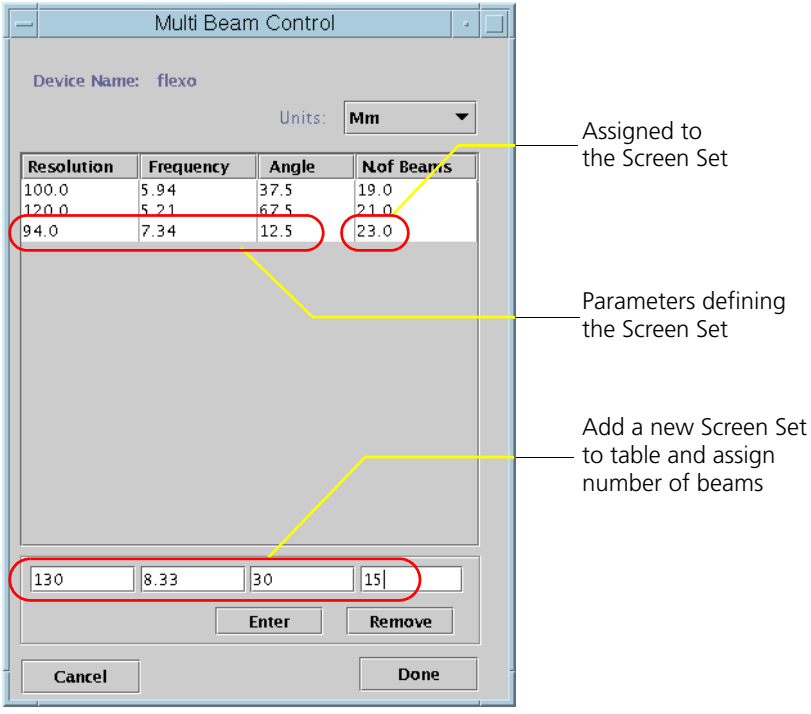

## Editing FlexoTable

The service engineer may add or delete a set of parameters (representing a Screen Set) to the table, or may modify only the number of beams, assigned to a set of parameters (a Screen Set).

**To add parameters to the table:**



**Note:** All parameters must be identical to those of the Screen Set in order for the application to identify the specific parameters of a Screen Set.

1. From the **Units** list box, select the correct unit of measure:
   - **mm** - millimeters
   - **inch** - inches.
2. Type the Screen Set resolution (exactly as it appears in the Screen Set) in the box directly under the Resolution column.
3. Type the Screen Set frequency (exactly as it appears in the Screen Set) in the box directly under the Frequency column.
4. Type the Screen Set angle (exactly as it appears in the Screen Set) in the box directly under the Angle column.
5. Type the required number of beams in the box directly under the N. of Beams column.
6. Click the **Enter** button; the set of parameters appears at the bottom of the table.
7. Repeat the process for each additional set.
8. When done, click the **Done** button; the table is saved on the local Brisque and removed from the screen. You return to the # prompt.

**To delete parameters from the table:**

1. In the boxes at the bottom of the window, type the numbers exactly as they appear in all the columns of a single line in the table.
2. Click the **Remove** button; the line (Screen Set) is removed from the table.
3. Repeat the process for each additional set.
4. When done, click the **Done** button; the table is saved on the local Brisque and removed from the screen. You return to the # prompt.

**To modify the number of beams assigned to a set of parameters:**



**Note:** On an existing set of Screen Set parameters, the service engineer may modify only the N. of Beams parameter.

1. In the Multi Beam Control window, select (highlight) the N. of Beams parameter and type another instead, then click the **Enter** button.
2. Repeat the process for each additional set.
3. When done, click the **Done** button; the table is saved on the local Brisque and removed from the screen. You return to the # prompt.

# Saving the FlexoTable

The table with all the modifications is saved locally when you press the **Done** button. However, if the application is removed and restored the default table appears. You may save a table to a data volume, and restore a saved table, when required.

## Backing up FlexoTable to a Data Volume

**To back up FlexoTable:**

1. Log out from the Brisque application.
2. Log in as **root** and type `ripro` (your password); the # prompt appears.
3. At the prompt, type `scismit`, then press ENTER.
4. From the SciSmit main menu, select **Backup and Restore**, then **Save and Restore Configuration to Data Volume**, then **Save Configuration to Data Volume**; a confirmation window appears.
5. Press ENTER to start the operation.
6. The Status window displays the **OK** status upon completion.



**Note:** If a failed status is returned, you can scroll through the screen to locate the reason for the failure. In most cases, it is due to a missing DIT password (TransferPro), missing APR path, or missing license. In any case, the configuration is completely saved and can be restored.

7. Select F10 to exit SciSmit.
8. Type `Quit` to return to the # prompt.
9. Type `cdesci` to return to the Brisque application.

## Restoring FlexoTable from a Data Volume

**To restore FlexoTable:**

1. Log out from the Brisque application.
2. Log in as **root** and type `ripro` (your password); the # prompt appears.
3. At the prompt, type `scismit`, then press ENTER.
4. From the **SciSmit** main menu, select **Backup and Restore**, then **Save and Restore Configuration to Data Volume**, then **Restore Configuration from Data Volume,** and press ENTER.
5. Press F4 and select **ALL Brisque Setups**, then press ENTER twice.
6. To confirm, press ENTER when the message `Are You Sure?` appears.



**Important:** After completion of restore, please wait until the system reboots itself.

7. The Status window appears, displaying an OK status for a successful restore operation.
8. Select F10 to exit SciSmit.
9. Type `Quit` to return to the # prompt.
10. Type `cdesci` to return to the Brisque application.

www.creo.com | creo™