Brisque version 5 Quick Reference Card

ecentral.creo.com | creo

1 Getting Started

Brisque version 5.0 workflow solution combines familiar Brisque functionality with a new user interface. The new cross platform client/server architecture offers a friendly and colorful user interface to simplify your work. Brisque version 5.0 software includes new features, enhancements, and corrections.
Note: For more information, refer to the *Software Migration From Brisque version 4.1 to 5.0 Customer Installation Guide*.

Pre-Client Installation

- Add Brisque IP addresses on Macintosh.
- Add Brisque IP addresses on Windows.

Client Installation

1. Open Internet Explorer on your client Windows or Macintosh workstation.
2. Type the client installer URL: **ftp://client:client@IPaddress**.
3. **For Windows:** Copy the BC5NT.exe file to your computer, extract the installer and install it, using the Installation Wizard.
   For Macintosh: Copy the BC5OSX.tar file to your computer, extract the installer and install it, using the Installation Wizard


Login

Users are either administrators or operators (for example, macuser).




- To add and define users, you must log in as **administrator**.
- To set system preferences (and to add and define users), select **Preferences** from the **Edit** menu.

2 Brisque Desktop

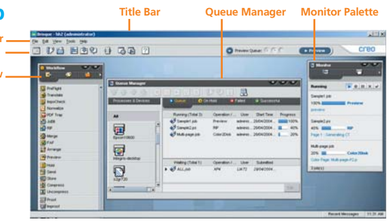


Toolbar Contains the following activation buttons:

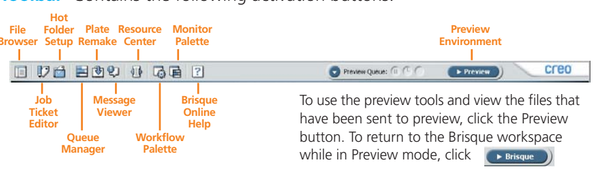

To use the preview tools and view the files that have been sent to preview, click the Preview button. To return to the Brisque workspace while in Preview mode, click ▸ Brisque


3 File Browser

Enables you to organize and manage the files and folders on the Brisque host and local workstation. To open the File Browser:

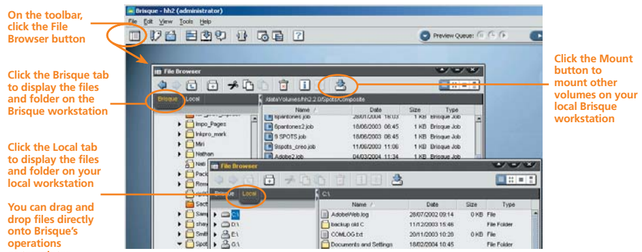


4 Queue Manager

Provides an itemized and detailed list of the Brisque processes, as well as the status of the devices that are connected to the Brisque workstation. To open the Queue Manager:

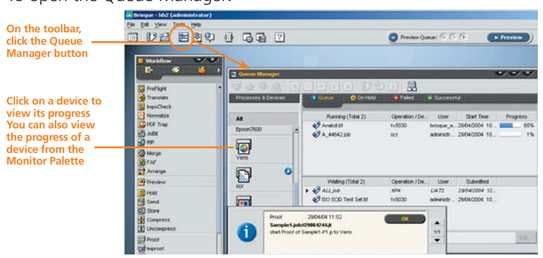

5 Message Viewer

Displays a log of Brisque messages generated during production. To open the Message Viewer:

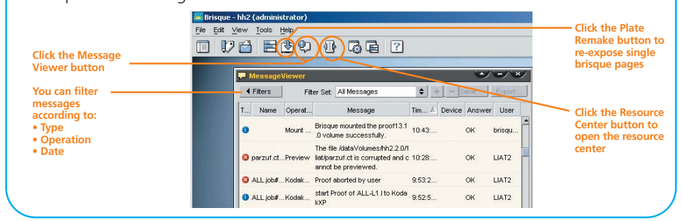

6 Resource Center activated from Toolbar

Enables you to organize and manage the files and folders on the Brisque host and local workstation.

7 Online Help activated from Toolbar

Brisque version 5.0 online help contains information about Brisque operations and workflows, as well as a search feature that allows you to perform a full-text search.

8 Automated Workflows from the Workflow Palette

Includes the following three tabs, enabling you to activate individual Brisque operations, and to use automated workflows via templates and hot folders:


- **Operations** contains a list of all available Brisque operations.
- **Templates** contains a list of all existing templates.
  Templates can only be activated from the Workflow palette.
- **Hot Folders** contains a list of all existing hot folders.



To modify an operation, double-click it



To modify a hot folder, double-click it

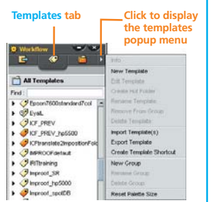


To modify a template, double-click it

Orange template tags indicate automatic workflows

Creating New Hot Folders


Hot Folders are automatically activated by the file types you choose and assigned by the operation you defined.

On the toolbar, click Hot Folder Setup
OR
From the Tools menu, select Hot Folder

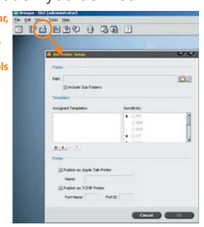

Creating Templates

On the toolbar, click the Job Ticket Editor
OR
From the Tools menu, select New Template

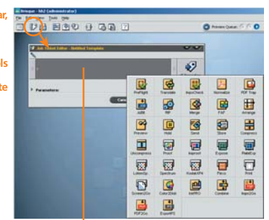


Click inside the JTE to display the list of available operations

653-00809A-EN

9 Preview Environment

Provides a separate workspace (and queue), allowing you to interactively preview several types of files:

- PostScript®
- PDF files
- TIFF files
- Brisque files (CTs, LWs, Pages, Jobs, Imposition Jobs, Packaging Jobs)

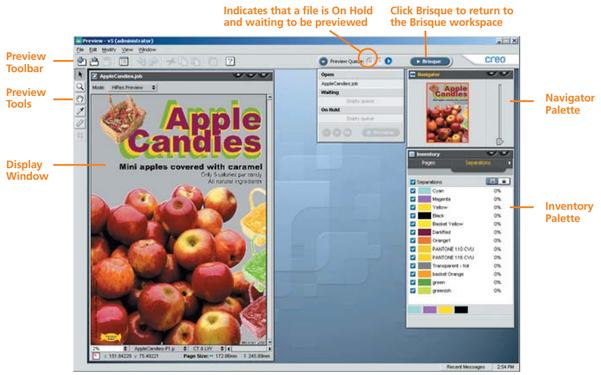


Preview Queue

Lists the files that have been submitted for HiRes preview. You can preview up to 2 files at the same time. The remaining files are in the Waiting and On Hold queues. To open the Preview Queue, click the Preview Queue button on the Preview toolbar.


Preview Preferences

Enables you to define default settings for the Preview workspace.

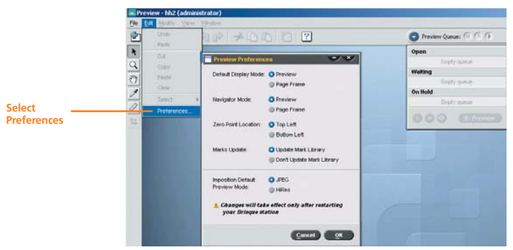


10 Device Configuration

Enables you to configure all output devices from the Brisque host via the Output Devices Handling window. All the device groups and families, and the device configurations are displayed in this window, as well as the device setting.

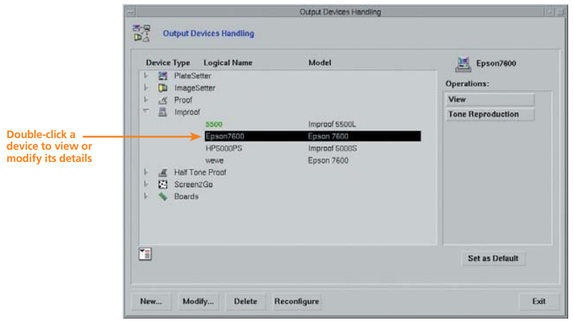


11 Monitor Palette

Enables you to monitor workloads and device status.

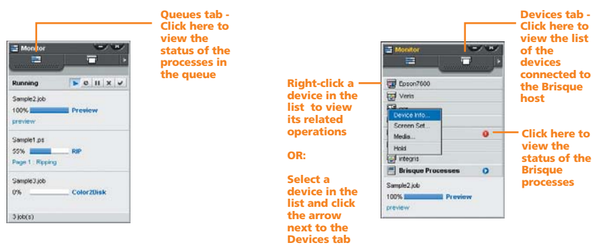


12 Typical Workflows

Auto Arrange Workflows

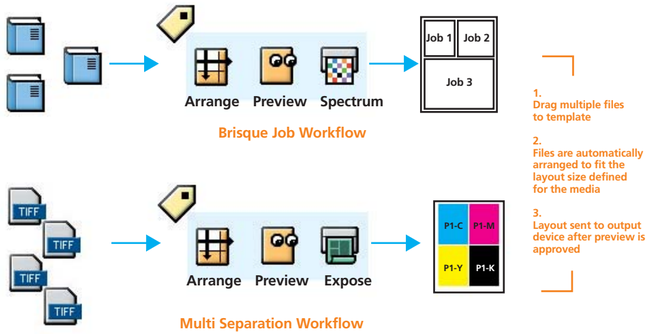


Scatter Drop Workflow

Defines a minimum coverage for the media or an amount of time that files are held in the queue before a layout is sent to be arranged. Scatter drop supports all output operations. To activate Scatter Drop directly from the template or assign a scatter drop template to a hot folder

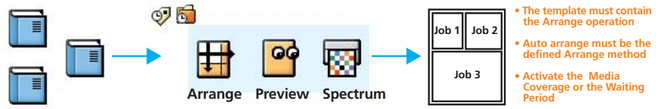

Imposition Workflow

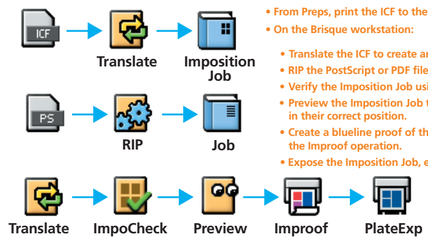

- From a DTP application, print a PostScript or PDF file to the Brisque workstation.
- From Preps, print the ICF to the Brisque workstation.
- On the Brisque workstation:
  - Translate the ICF to create an imposition Job.
  - RIP the PostScript or PDF file to create a Brisque job.
  - Verify the Imposition Job using the ImpoCheck operation.
  - Preview the Imposition Job to ensure that all the pages are in their correct position.
  - Create a blueline proof of the Imposition Job using the Improof operation.
  - Expose the Imposition Job, either to film or plate.