v5ready for migration from Brisque v4.1 to v5.0


V5ready phases:

1. **First phase - checking**
    - 1a. Checking readiness for loading Brisque version 5.0
    - 1b. Checking readiness for customer self installable
2. **Second phase - loading** (only if pass the first phase)
    - 2a. Pre loading (checking the S/W media and saving configuration files)
    - 2b. Start the loading


The first phase may be performed ahead before the loading, anyway it will be performed again during the loading.

A log-file / fax-form will be created during the checking phase to be send to Creo before the loading, in order to obtain the new Brisque and Ethershare licenses (or any other issue) from Creo.


Preparing phase

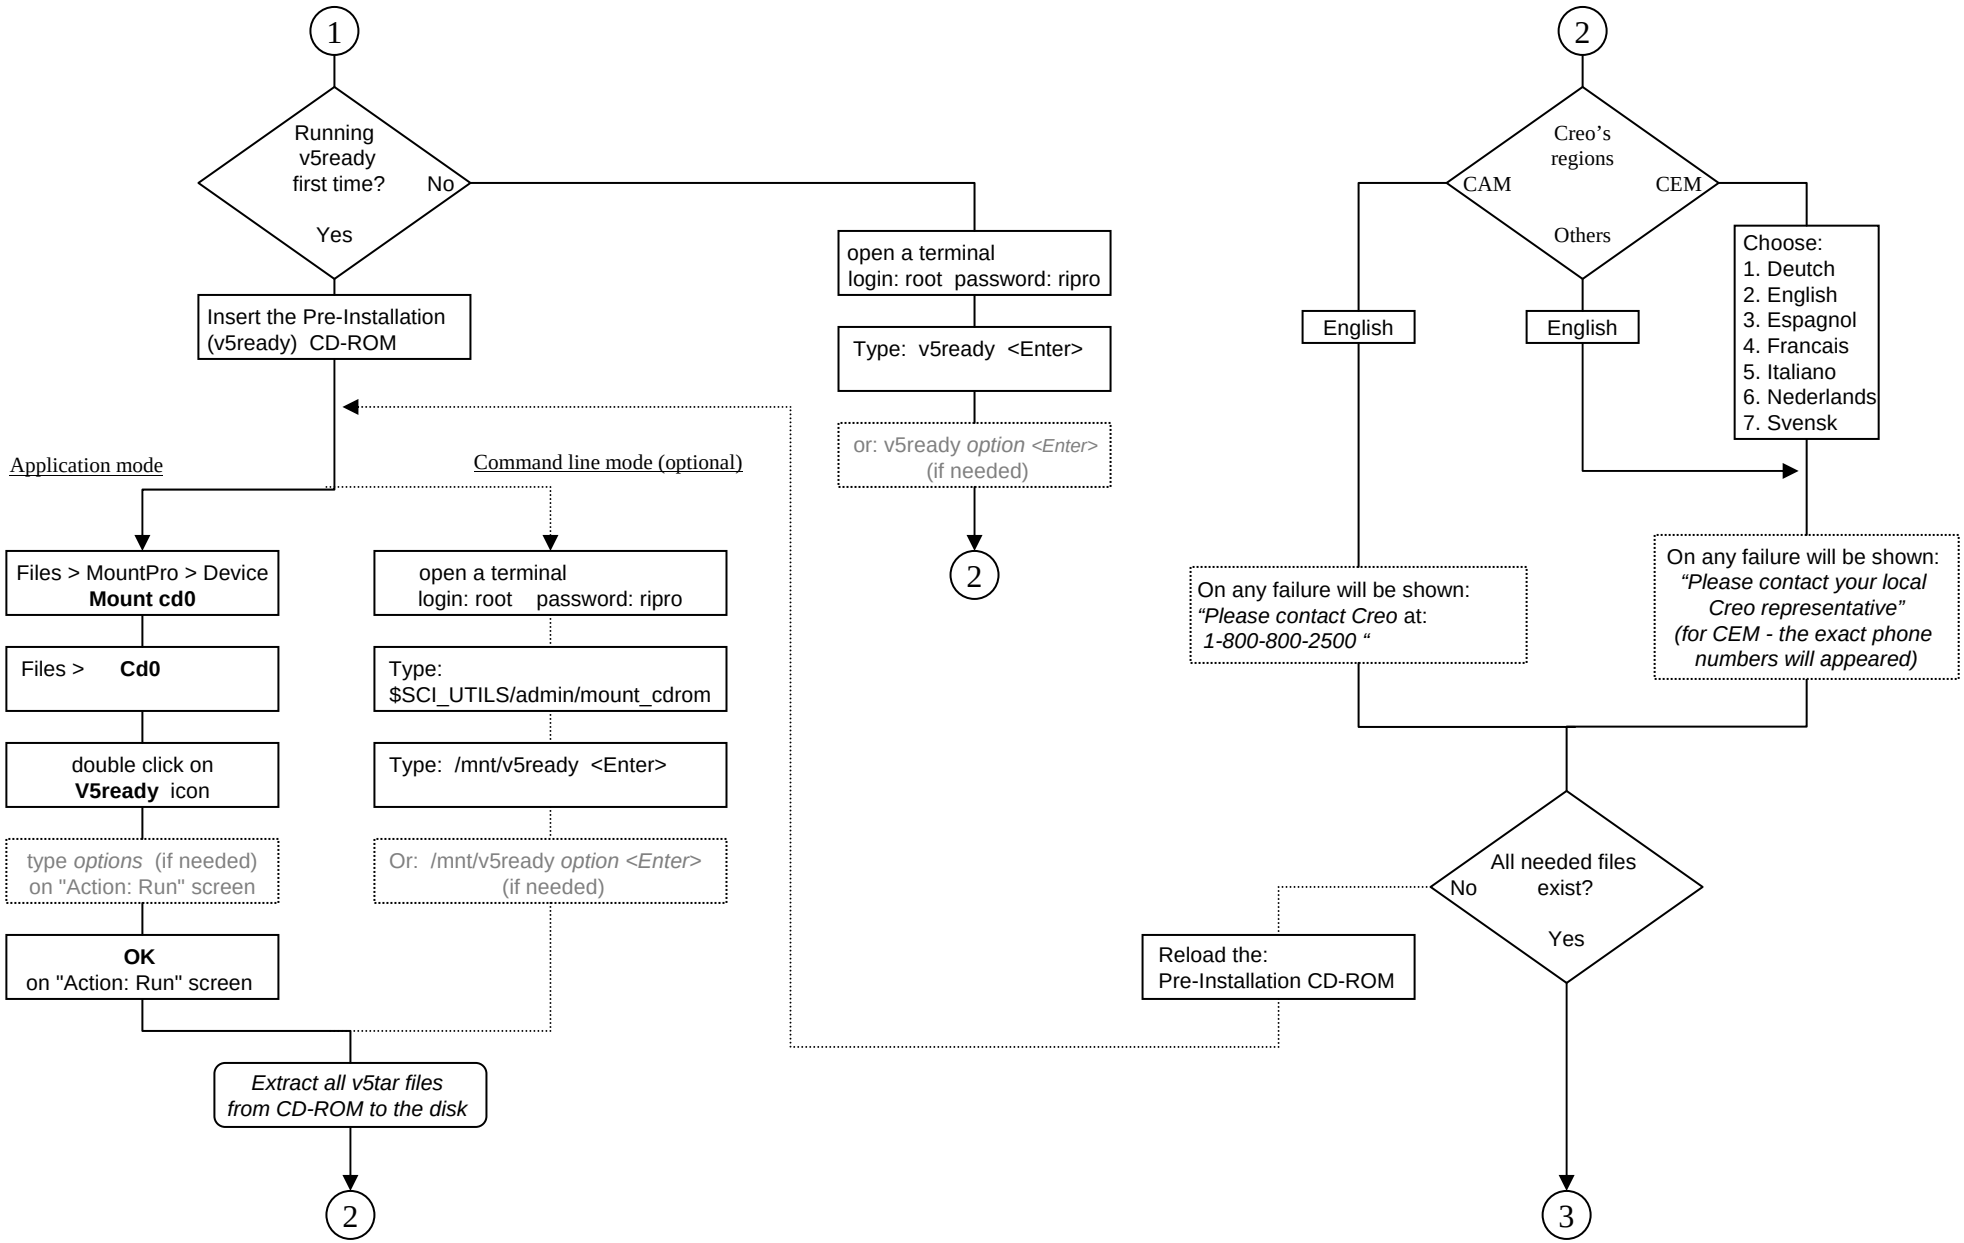



Checking phase

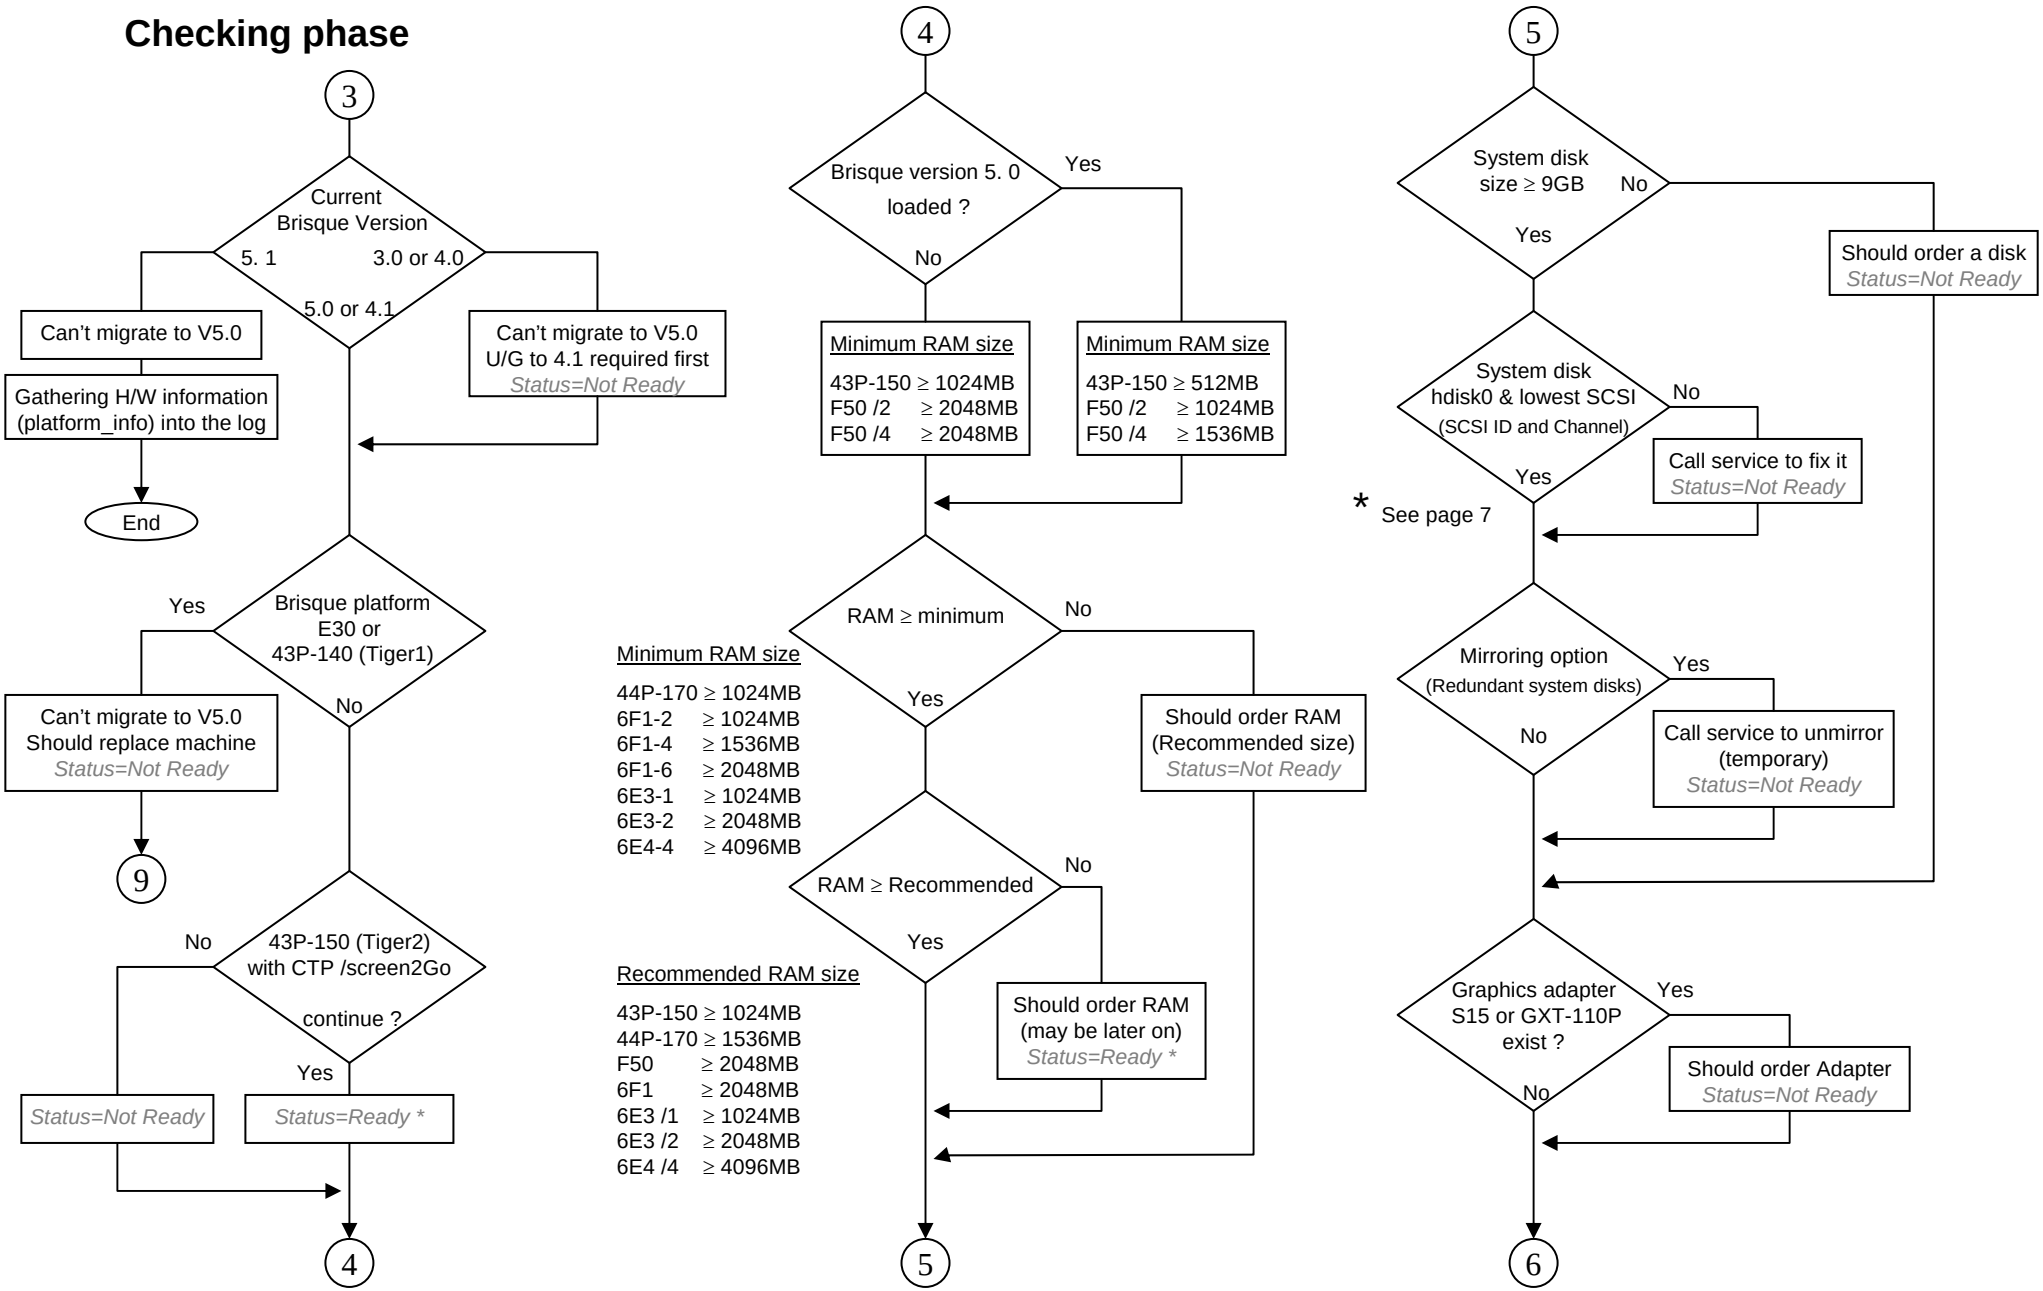


Checking phase

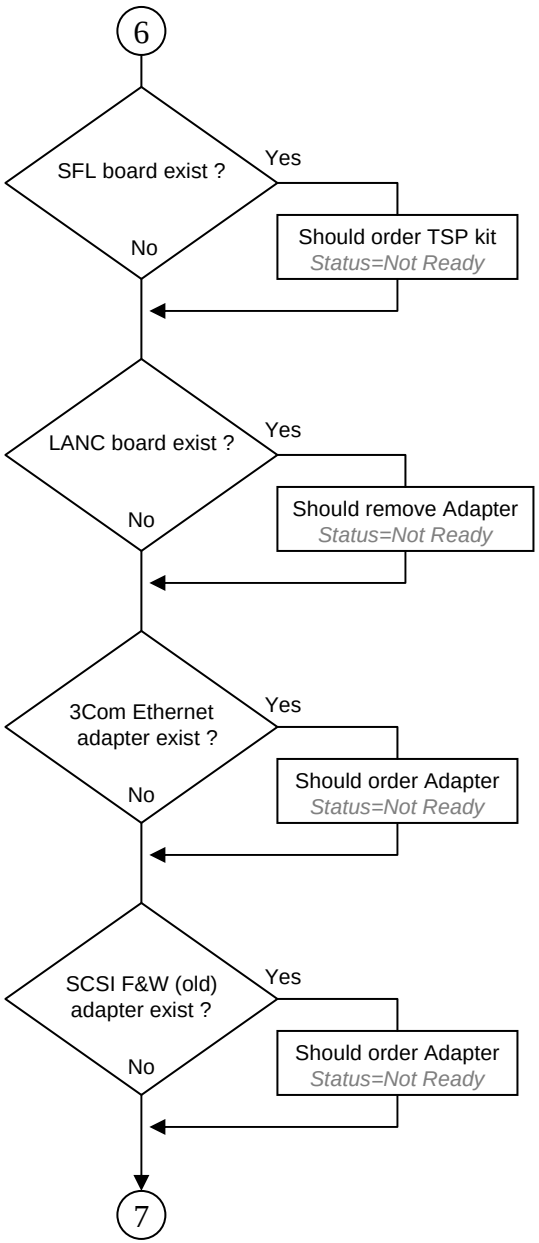

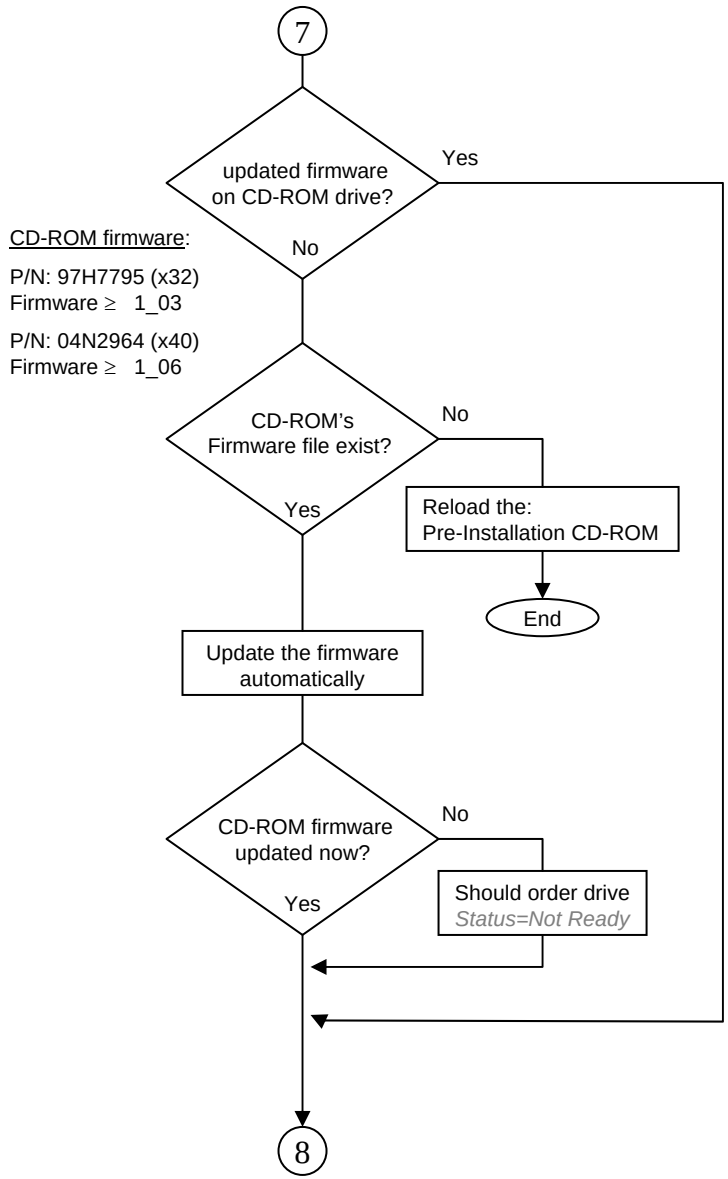

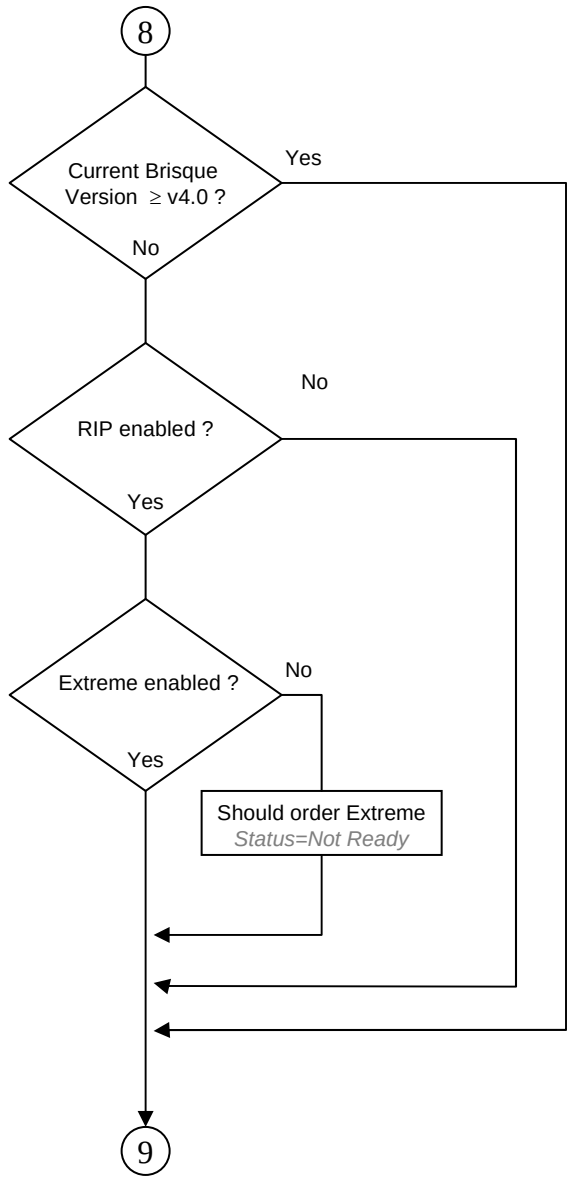



Loading phase

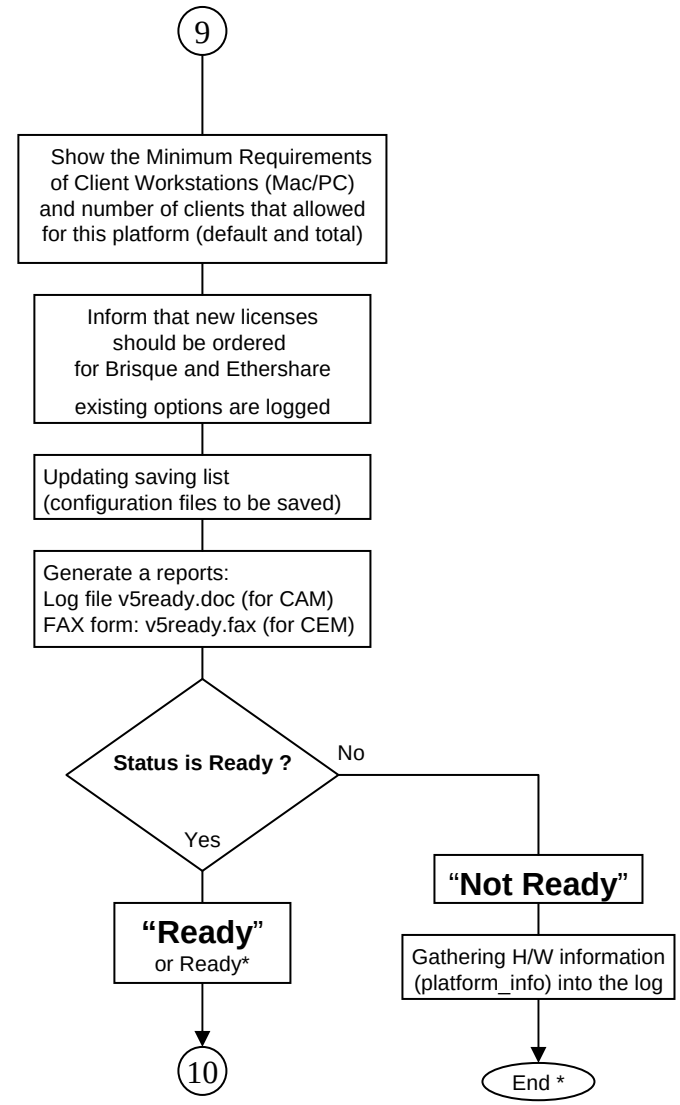


Ready* = current RAM size is below Creo recommendation. may continue the loading and upgrade the memory later on.

End* = if "save" option is chosen, on "Not Ready" will perform the following Save Configuration too.

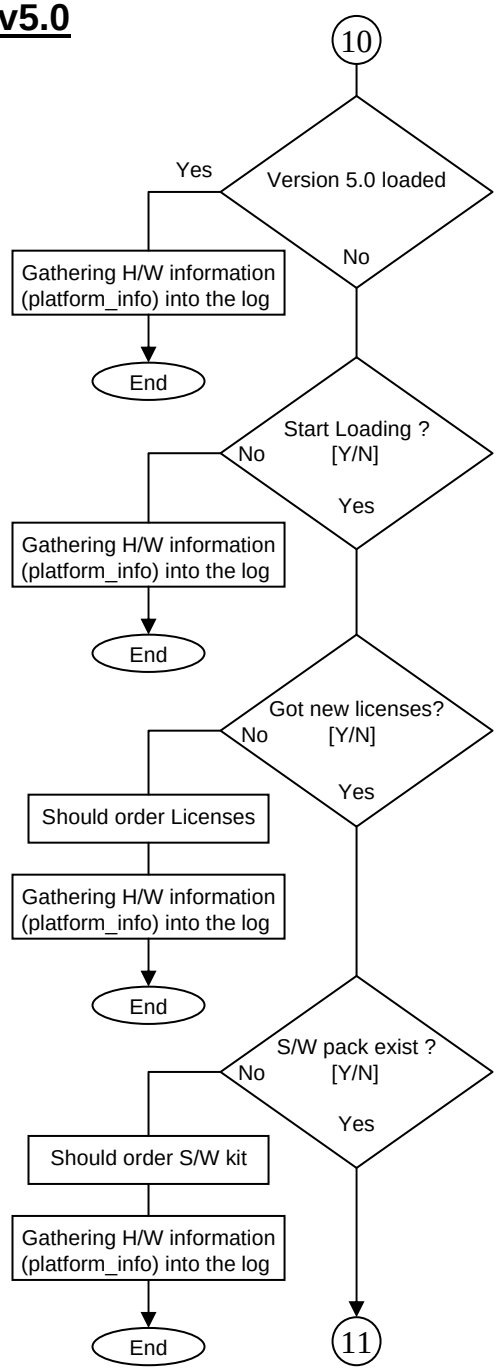

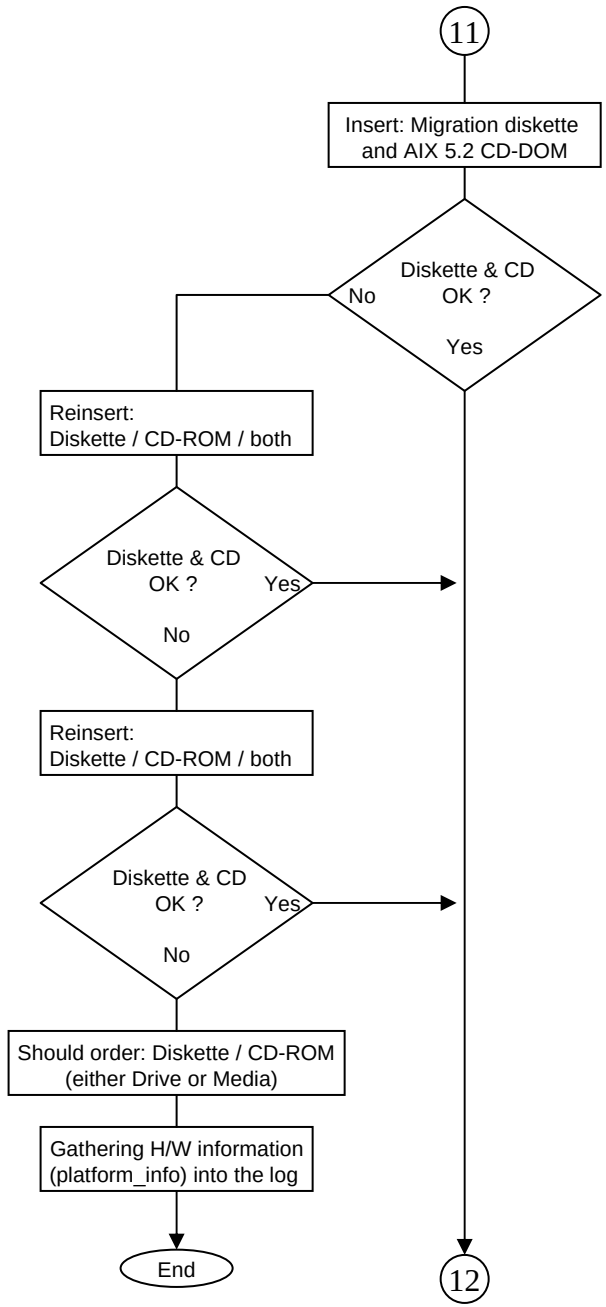

Loading phase

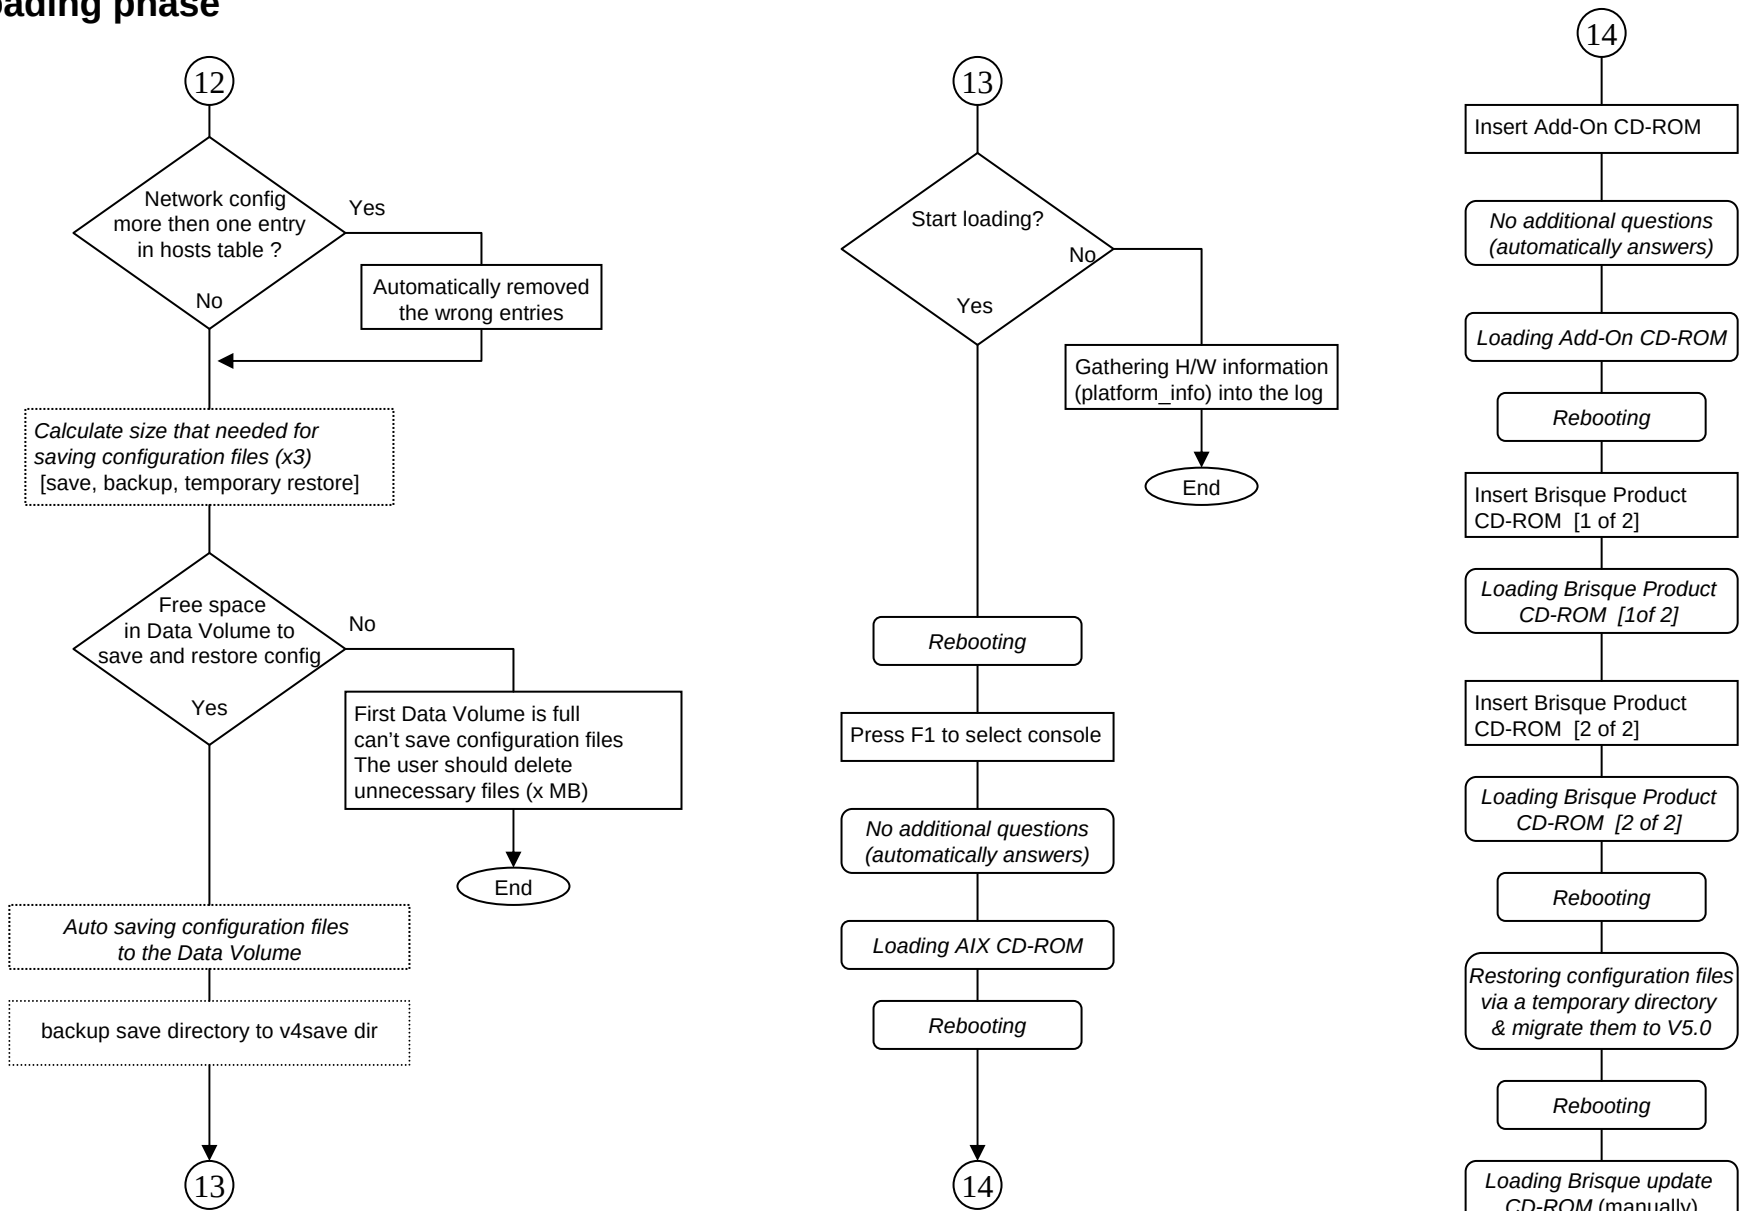

Appendix A: Checking the system disk

