Upgrade Procedure

English

Brisque Software Upgrade From v5.0 to v5.1

731-00641A-EN

www.creo.com

Copyright

Copyright © 2005 Creo Inc. All rights reserved.

No copying, distribution, publication, modification, or incorporation of this document, in whole or part, is permitted without the express written permission of Creo. In the event of any permitted copying, distribution, publication, modification, or incorporation of this document, no changes in or deletion of author attribution, trademark legend, or copyright notice shall be made.

No part of this document may be reproduced, stored in a retrieval system, published, used for commercial exploitation, or transmitted, in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the express written permission of Creo Inc.

This document is also distributed in Adobe Systems Incorporated's PDF (Portable Document Format). You may reproduce the document from the PDF file for internal use. Copies produced from the PDF file must be reproduced in whole.

Trademarks

The Creo wordmark, Creo logo, and the names of the Creo products and services referred to in this document are trademarks of Creo Inc.

Adobe, Acrobat, and the Acrobat logo are registered trademarks of Adobe Systems Incorporated, and are registered in the U.S. Patents and Trademark Office and may be registered in other jurisdictions.

Apple, AppleTalk, AppleShare, EtherTalk, LocalTalk, Macintosh, and LaserWriter are trademarks of Apple Computer, Inc.

Microsoft, Windows, Windows 2000, and Windows NT are trademarks or registered trademarks of Microsoft Corp.

Xerox is a registered trademark of Xerox Corp.

Other brand or product names are the trademarks or registered trademarks of their respective owners.

FCC Compliance

The Creo equipment referred to in this document complies with the requirements in Part 15 of FCC Rules for a Class A computing device. Operation of the Creo equipment in a residential area may cause unacceptable interference to radio and TV reception, requiring the operator to take whatever steps are necessary to correct the interference.

Limitation of Liability

The product, software or services are being provided on an "as is" and "as available" basis. Except as may be stated specifically in your contract, Creo Inc. expressly disclaims all warranties of any kind, whether express or implied, including, but not limited to, any implied warranties of merchantability, fitness for a particular purpose and non-infringement.

You understand and agree that Creo Inc. shall not be liable for any direct, indirect, incidental, special, consequential or exemplary damages, including but not limited to, damages for loss of profits, goodwill, use, data or other intangible losses (even if Creo has been advised of the possibility of such damages), resulting from: (i) the use or the inability to use the product or software; (ii) the cost of procurement of substitute goods and services resulting from any products, goods, data, software, information or services purchased; (iii) unauthorized access to or alteration of your products, software or data; (iv) statements or conduct of any third party; (v) any other matter relating to the product, software, or services.

The text and drawings herein are for illustration and reference only. The specifications on which they are based are subject to change. Creo Inc. may, at any time and without notice, make changes to this document. Creo Inc., for itself and on behalf of its subsidiaries, assumes no liability for technical or editorial errors or omissions made herein, and shall not be liable for incidental, consequential, indirect, or special damages, including, without limitation, loss of use, loss or alteration of data, delays, or lost profits or savings arising from the use of this document.

Patents

This product is covered by one or more of the following U.S. patents:

RE37,376	5,325,217	5,532,728	5,742,743	5,996,499	6,158,345	6,353,216
4,558,302	5,339,176	5,561,691	5,764,374	5,998,067	6,159,659	6,366,339
4,743,091	5,343,059	5,568,595	5,764,381	6,003,442	6,164,637	6,371,026
4,992,864	5,355,446	5,576,754	5,771,794	6,014,471	6,180,325	6,377,739
5,049,901	5,359,451	5,579,115	5,785,309	6,016,752	6,181,362	6,387,597
5,079,721	5,359,458	5,592,309	5,813,346	6,031,932	6,181,439	6,396,422
5,103,407	5,367,360	5,594,556	5,818,498	6,043,865	6,186,068	6,396,618
5,111,308	5,384,648	5,600,448	5,854,883	6,060,208	6,189,452	6,407,849
5,113,249	5,384,899	5,608,822	5,861,904	6,063,528	6,191,882	6,414,755
5,122,871	5,412,491	5,615,282	5,861,992	6,063,546	6,204,874	6,422,801
5,124,547	5,412,737	5,625,766	5,875,288	6,072,518	6,208,369	6,435,091
5,132,723	5,420,702	5,636,330	5,894,342	6,090,529	6,214,276	6,441,914
5,150,225	5,420,722	5,649,220	5,900,981	6,096,461	6,217,965	6,450,092
5,153,769	5,459,505	5,650,076	5,934,196	6,098,544	6,260,482	6,456,396
5,155,782	5,473,733	5,652,804	5,942,137	6,107,011	6,266,080	6,476,931
5,157,516	5,481,379	5,680,129	5,946,426	6,112,663	6,266,134	6,477,955
5,208,818	5,488,906	5,691,823	5,947,028	6,115,056	6,267,054	6,509,903
5,208,888	5,497,252	5,691,828	5,958,647	6,121,996	6,268,948	6,541,181
5,247,174	5,508,828	5,696,393	5,966,504	6,130,702	6,283,589	6,545,772
5,249,067	5,509,561	5,699,174	5,969,872	6,134,393	6,295,076	6,564,018
5,283,140	5,517,359	5,699,740	5,973,801	6,136,509	6,299,572	
5,291,273	5,519,852	5,708,736	5,986,819	6,137,580	6,318,266	
5,323,248	5,526,143	5,713,287	5,995,475	6,147,789	6,352,816	

Creo Inc.
3700 Gilmore Way
Burnaby, B.C., Canada
V5G 4M1
Tel: +1.604.451.2700
Fax: +1.604.437.9891

http://www.creo.com

Internal 731-00641A-EN Rev A

Revised Nov 2005

Brisque Software Upgrade From v5.0 to v5.1

Read Me First 2
Preparation for Brisque v5.0 to v5.1 Upgrade 2
Upgrading From Brisque Version 5.0 to 5.1 4

Read Me First

This document describes how to upgrade your Brisque® version 5.0.x to Brisque version 5.1.



Important: The upgrade preparation procedure that is detailed in the following section must be performed before starting the upgrade process. And it is important to perform the preparation a few days before upgrading the software to allow time for the delivery of the new license.

Preparation for Brisque v5.0 to v5.1 Upgrade

Preparing for Brisque software upgrade requires obtaining a new Brisque license. Therefore, you should perform the preparation a few days before upgrading to allow time for the delivery of the new license. Perform the procedure described below.

Obtaining New Brisque License

Upgrading from Brisque v5.0.x to Brisque v5.1 requires a new Brisque license. Using the **v51ready** program, you can obtain the information that is needed for the new license. The program will also create a v51ready report—**v51ready.fax** or **v51ready.doc** (depending on your region). The report is created in your first dataVolume.

You should send the report to Creo once it is ready. A new Brisque license will be sent back to you shortly afterwards. The following process describes how to prepare the v51ready report.

Preparing v51ready report using v51ready program:

1. Insert the **Brisque v5.1 Pre-Installation CD (#1)** into the CD-ROM drive.
2. Open a terminal from Brisque:
   a. If you are in "Black Box" mode, click **Terminal**.
   b. If you are in Brisque application mode, click the **Service** tab, and then click **Terminal**.

   A terminal panel opens with the **>** prompt.
3. Type `su` and at the root password, type `ripro`.

4. At the prompt, type: `/scitex/version/utils/admin/mount_cdrom` and press ENTER.
5. Type: `/mnt/v51ready` and press ENTER.
6. Follow the on-screen instructions of the v51ready program.
7. If you selected **A** (America), a **v51ready.doc** file is created. If you selected **E** or **O** (Europe or Other regions), a **v51ready.fax** is created.
8. Send the v51ready report to Creo, as indicated on the screen. You will receive shortly afterwards your new Brisque v5.1 license.



Important: Do not proceed to the upgrade process until you receive the new Brisque v5.1 license.

Upgrading From Brisque Version 5.0 to 5.1



Important: Do not perform the upgrade process until you receive the new Brisque v5.1 license.

1. Insert the **Brisque v5.1 Pre-Installation CD (#1)** into the CD-ROM drive.
2. Open a terminal from Brisque:
   a. If you are in "Black Box" mode, click **Terminal**.
   b. If you are in Brisque application mode, click the **Service** tab, and then click **Terminal**.

   A terminal panel opens with the **>** prompt.
3. Type `su` and at the root password, type `ripro`.
4. At the prompt, type: `/scitex/version/utils/admin/mount_cdrom` and press ENTER.
5. Type: `/mnt/v51ready` and press ENTER.
6. Follow the on-screen v51ready program instructions. When ready, you are prompted to insert the **Brisque v5.1 Product CD (1 of 2) (#5)**.
7. Proceed with the installation and follow the on-screen instructions along with this document.
8. Type **Y** to reboot and the installation will start.



Note: This process takes 25 minutes to complete.
Remember to keep the front door open since the CD will be automatically ejected.

When ready, the following message is displayed on the screen:

```
**************************************************
Please insert Brisque Product 2 CD and press Enter to
continue...
**************************************************
```


9. Remove the **Brisque v5.1 Product CD (1 of 2) (#5)** from the drive and insert the **Brisque v5.1 Product CD (2 of 2) (#6)**. Then press ENTER.



Note: This process takes approximately 15 minutes to complete.

10. Upon completion the system reboots. Remove the **Brisque v5.0 Product CD (2 of 2) (#6)**.


11. Log in as `cdesci` and press ENTER twice. The License panel appears.

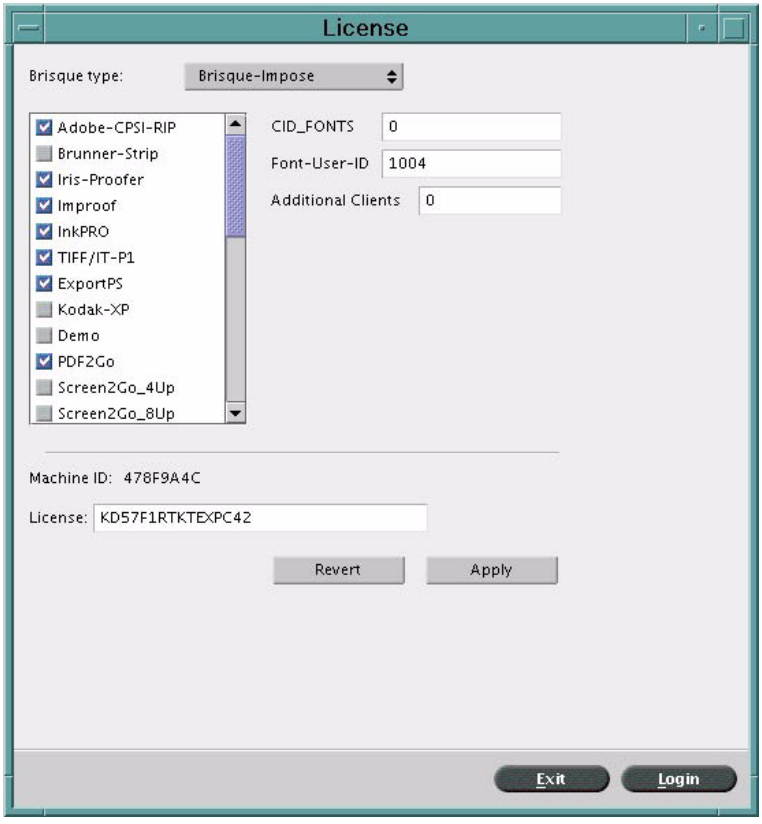

12. Select and type the Brisque licensing parameters in the License panel. For example, select the Brisque type, and then type the values for CID_FONTS, Font-User-ID, Additional Clients, Machine ID and License.
When finished, click **Apply**. The License Status message appears.



13. Press **OK** to return to the License panel.
14. Press **Exit** on the License panel to return to the Console Login prompt.
15. Log in again as `cdesci` and press ENTER twice. The Brisque Service panel appears.

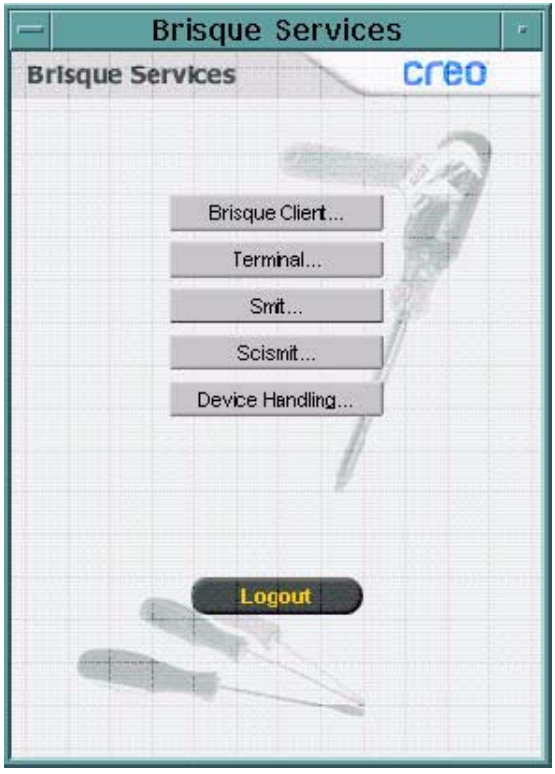

Brisque is now ready and you can log in as a local client by selecting **Brisque Client**.

Important: If the Brisque 5.1 Support Kit contains a Brisque v5.1 Additional Updates CD (633-00175D), then you must now perform the *Loading the Additional Updates* procedure (described on page 7). The updates are available on the Brisque v5.1 Additional Updates CD.

Loading the Additional Updates



Note: This procedure must be performed if the Brisque 5.1 Support Kit contains a Brisque v5.1 Additional Updates CD (633-00175D).

To load the additional updates:

1. Insert the **Brisque v5.1 Additional Updates CD** into the CD-ROM drive.
2. From the menu bar, open the **Services** menu and select **Update Installation**. The LoadUpdate application starts.
3. Select the **Install** tab.
4. Select the **CD** button. The update appears in the **Updates** list.
5. Select the **Upd_Brisque5xxx** update, and click **Install**.
6. Click **OK** (to restart).
   Brisque restarts before and after the update is loaded.
7. Remove the **Brisque v5.1 Additional Updates CD** from the CD-ROM drive.
8. After restarting, login as `cdesci` and select **Tools > System Tools** to confirm the installation.