v51ready for migration from Brisque v4.1 & v5.0 to: v5.1


V51ready phases:

1. **First phase - checking**
    - 1a. Checking readiness for loading Brisque version 5.1
    - 1b. Checking readiness for customer self installable
2. **Second phase - loading** (only if pass the first phase)
    - 2a. Pre loading (checking the S/W media and saving configuration files)
    - 2b. Start the loading

The first phase may be performed ahead before the loading, anyway it will be performed again during the loading.


A log-file / fax-form will be created during the checking phase to be send to Creo before the loading, in order to obtain the new Brisque and Ethershare licenses (on v4.1) or any other issue from Creo.

Preparing phase

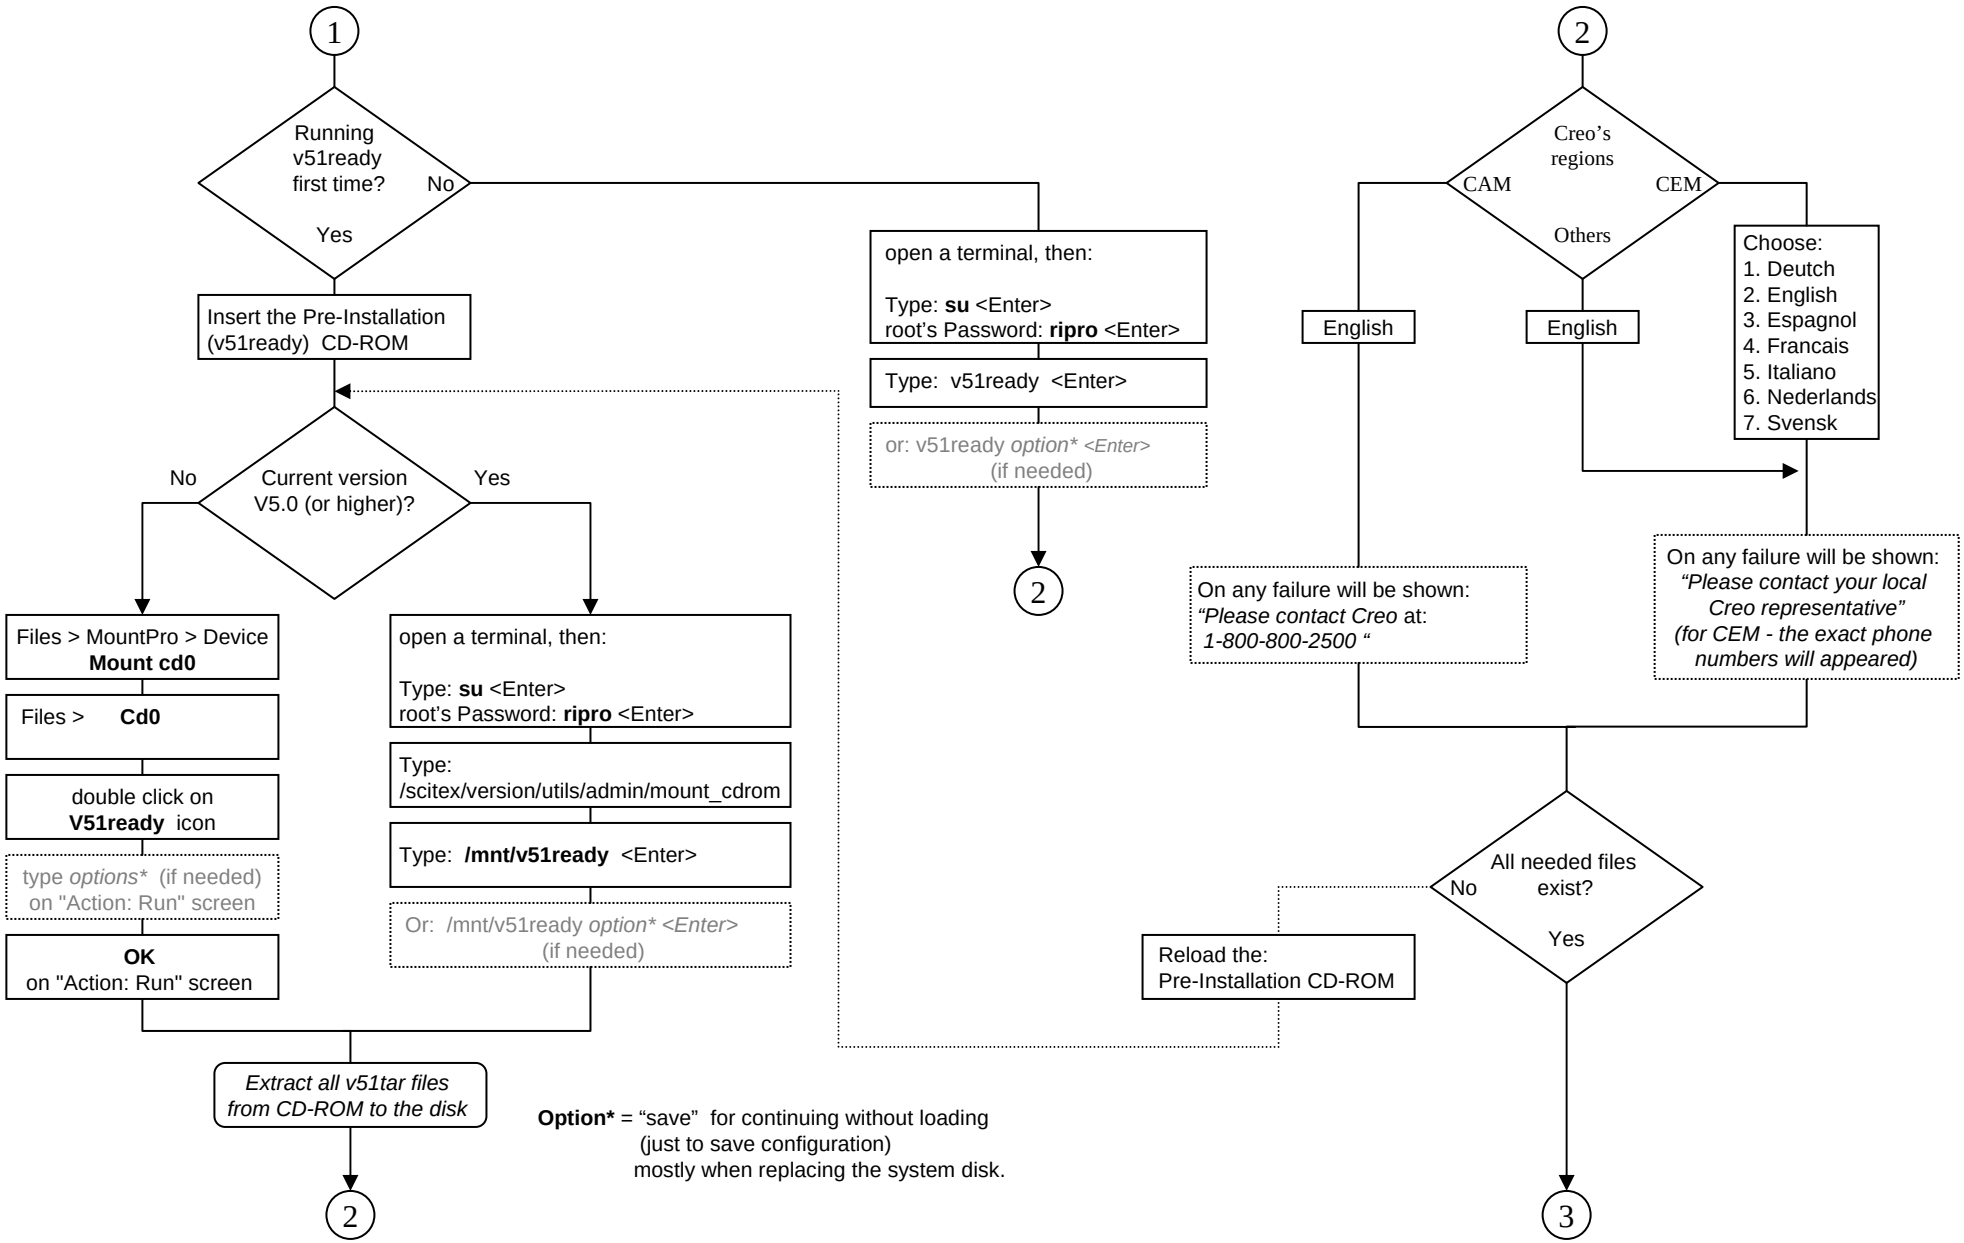


Option* = "save" for continuing without loading (just to save configuration) mostly when replacing the system disk.


Checking phase

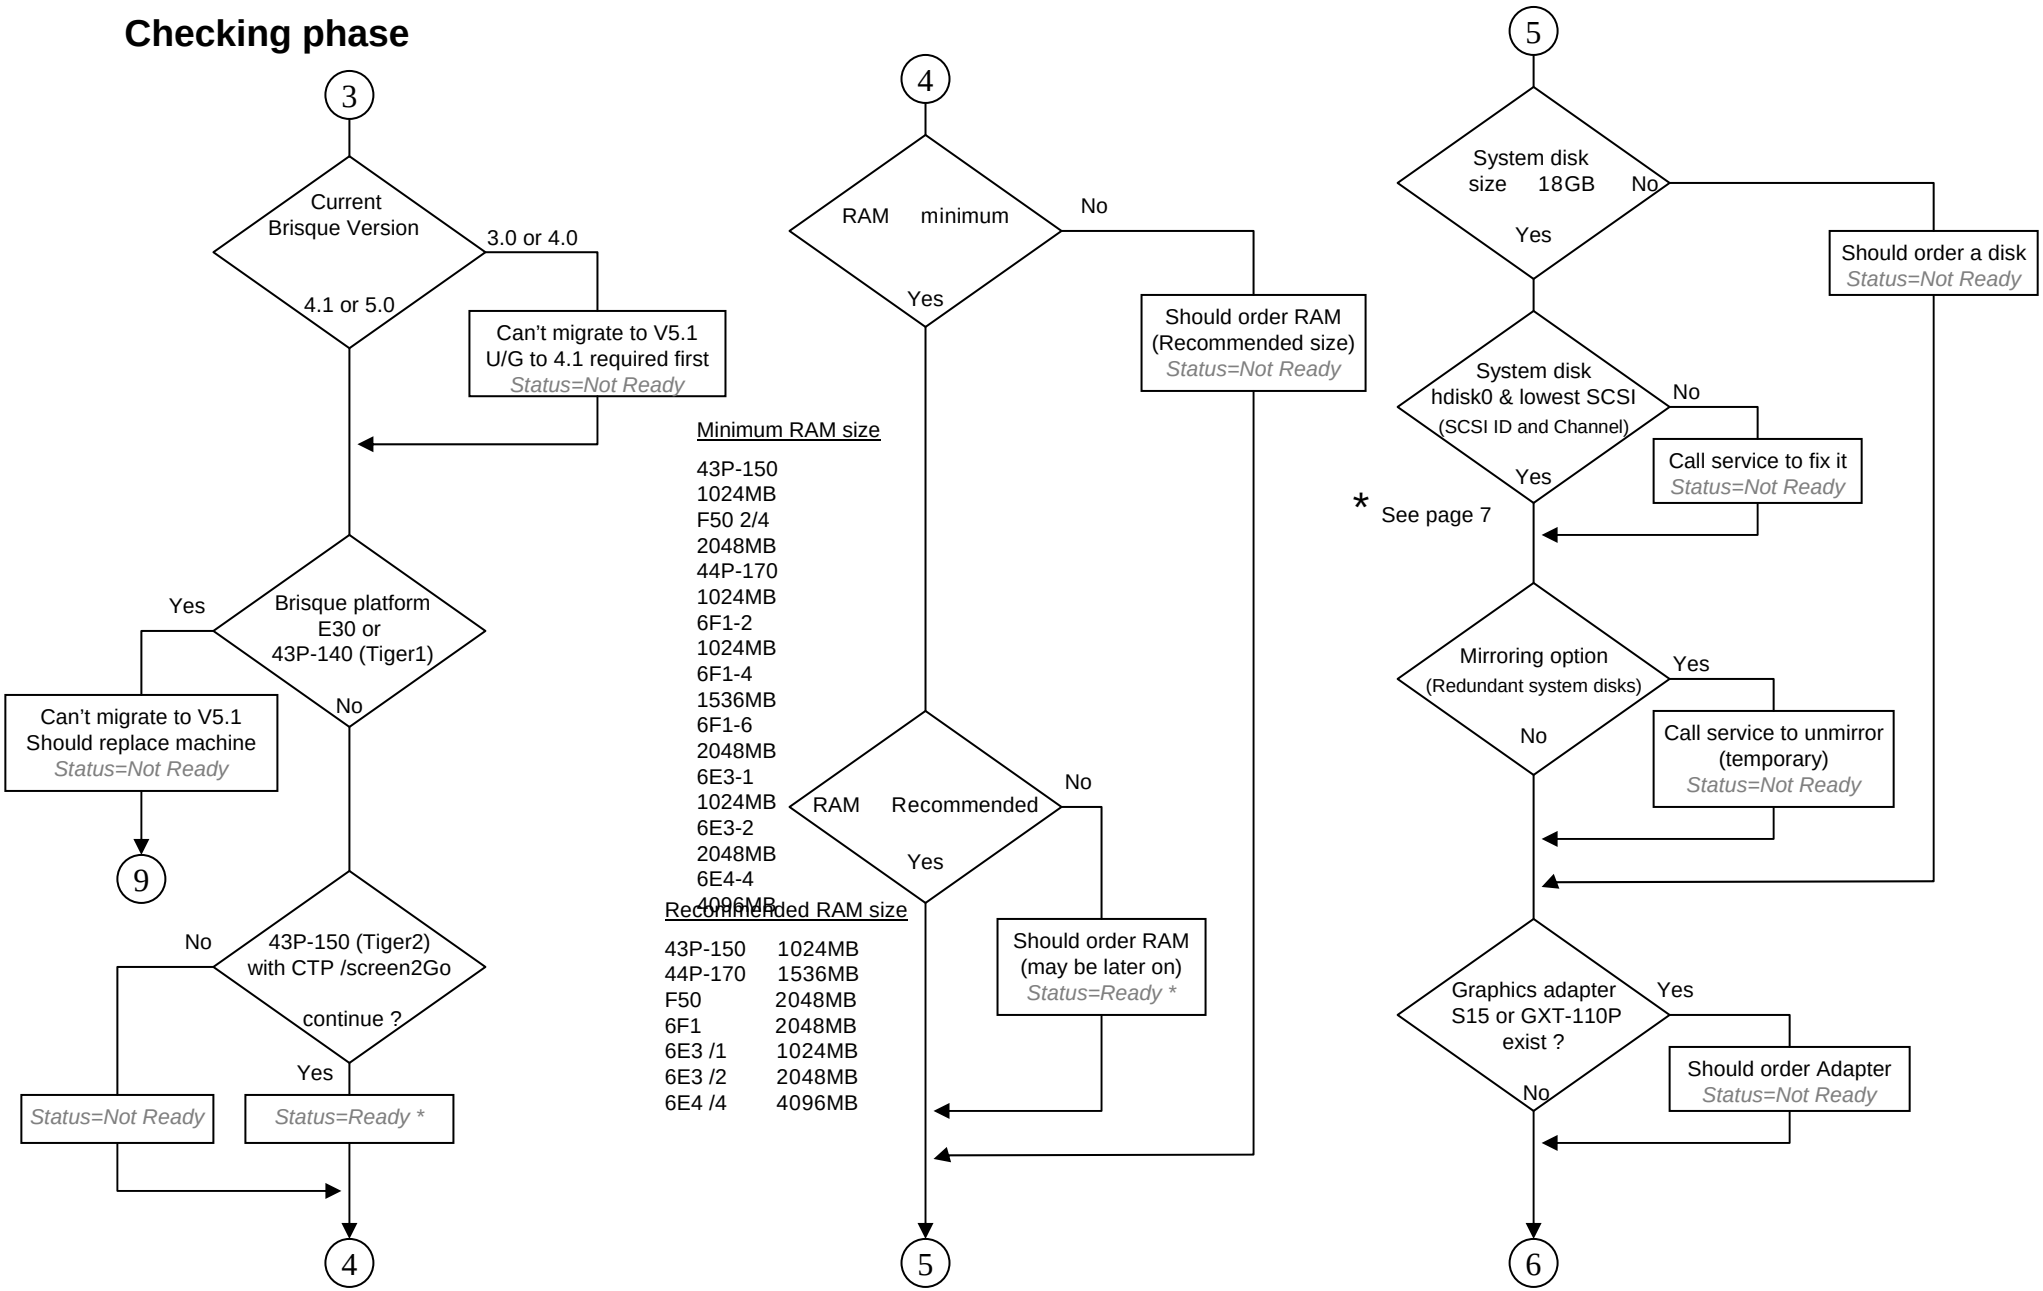


Checking phase

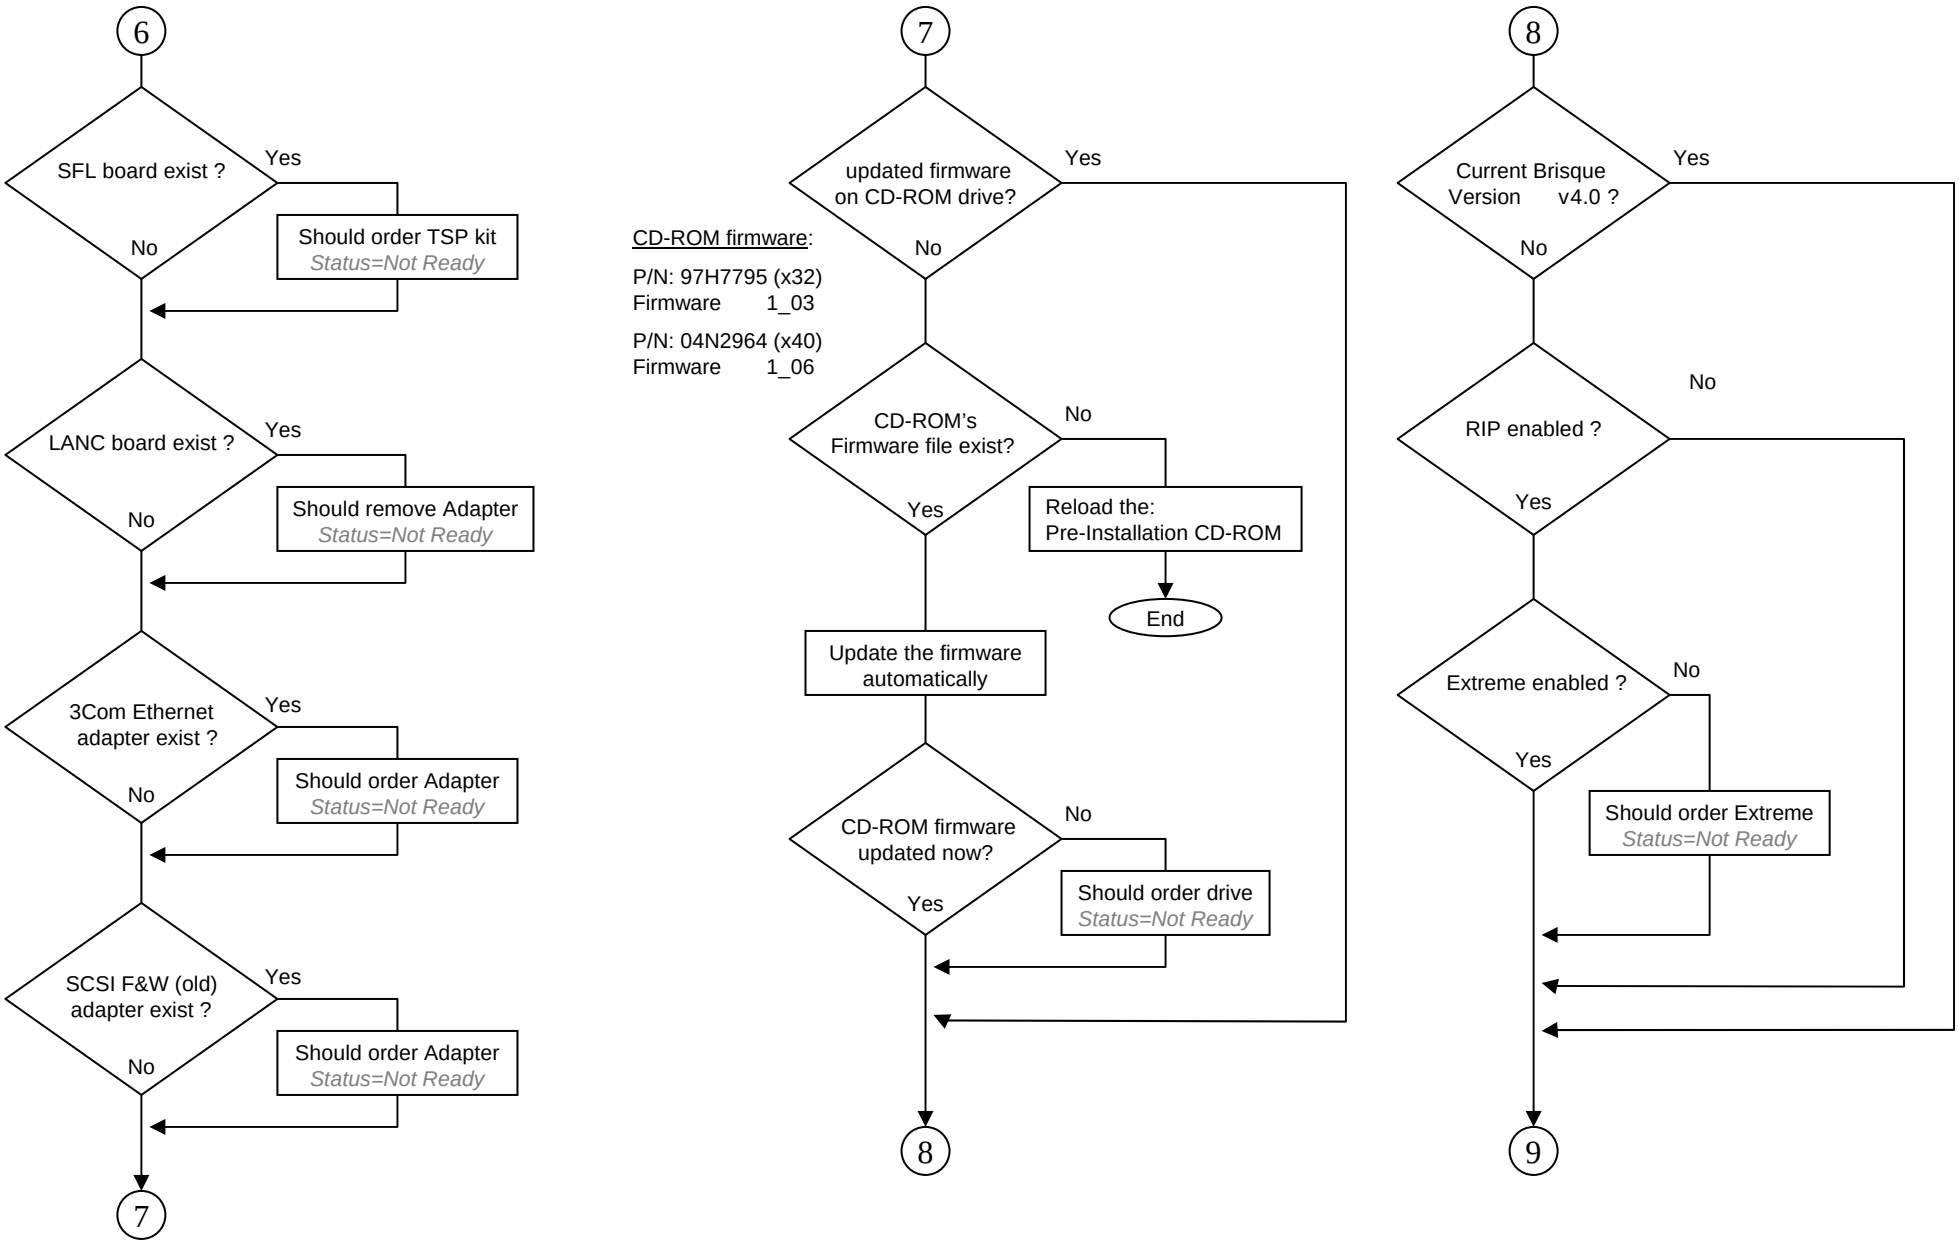

Loading phase

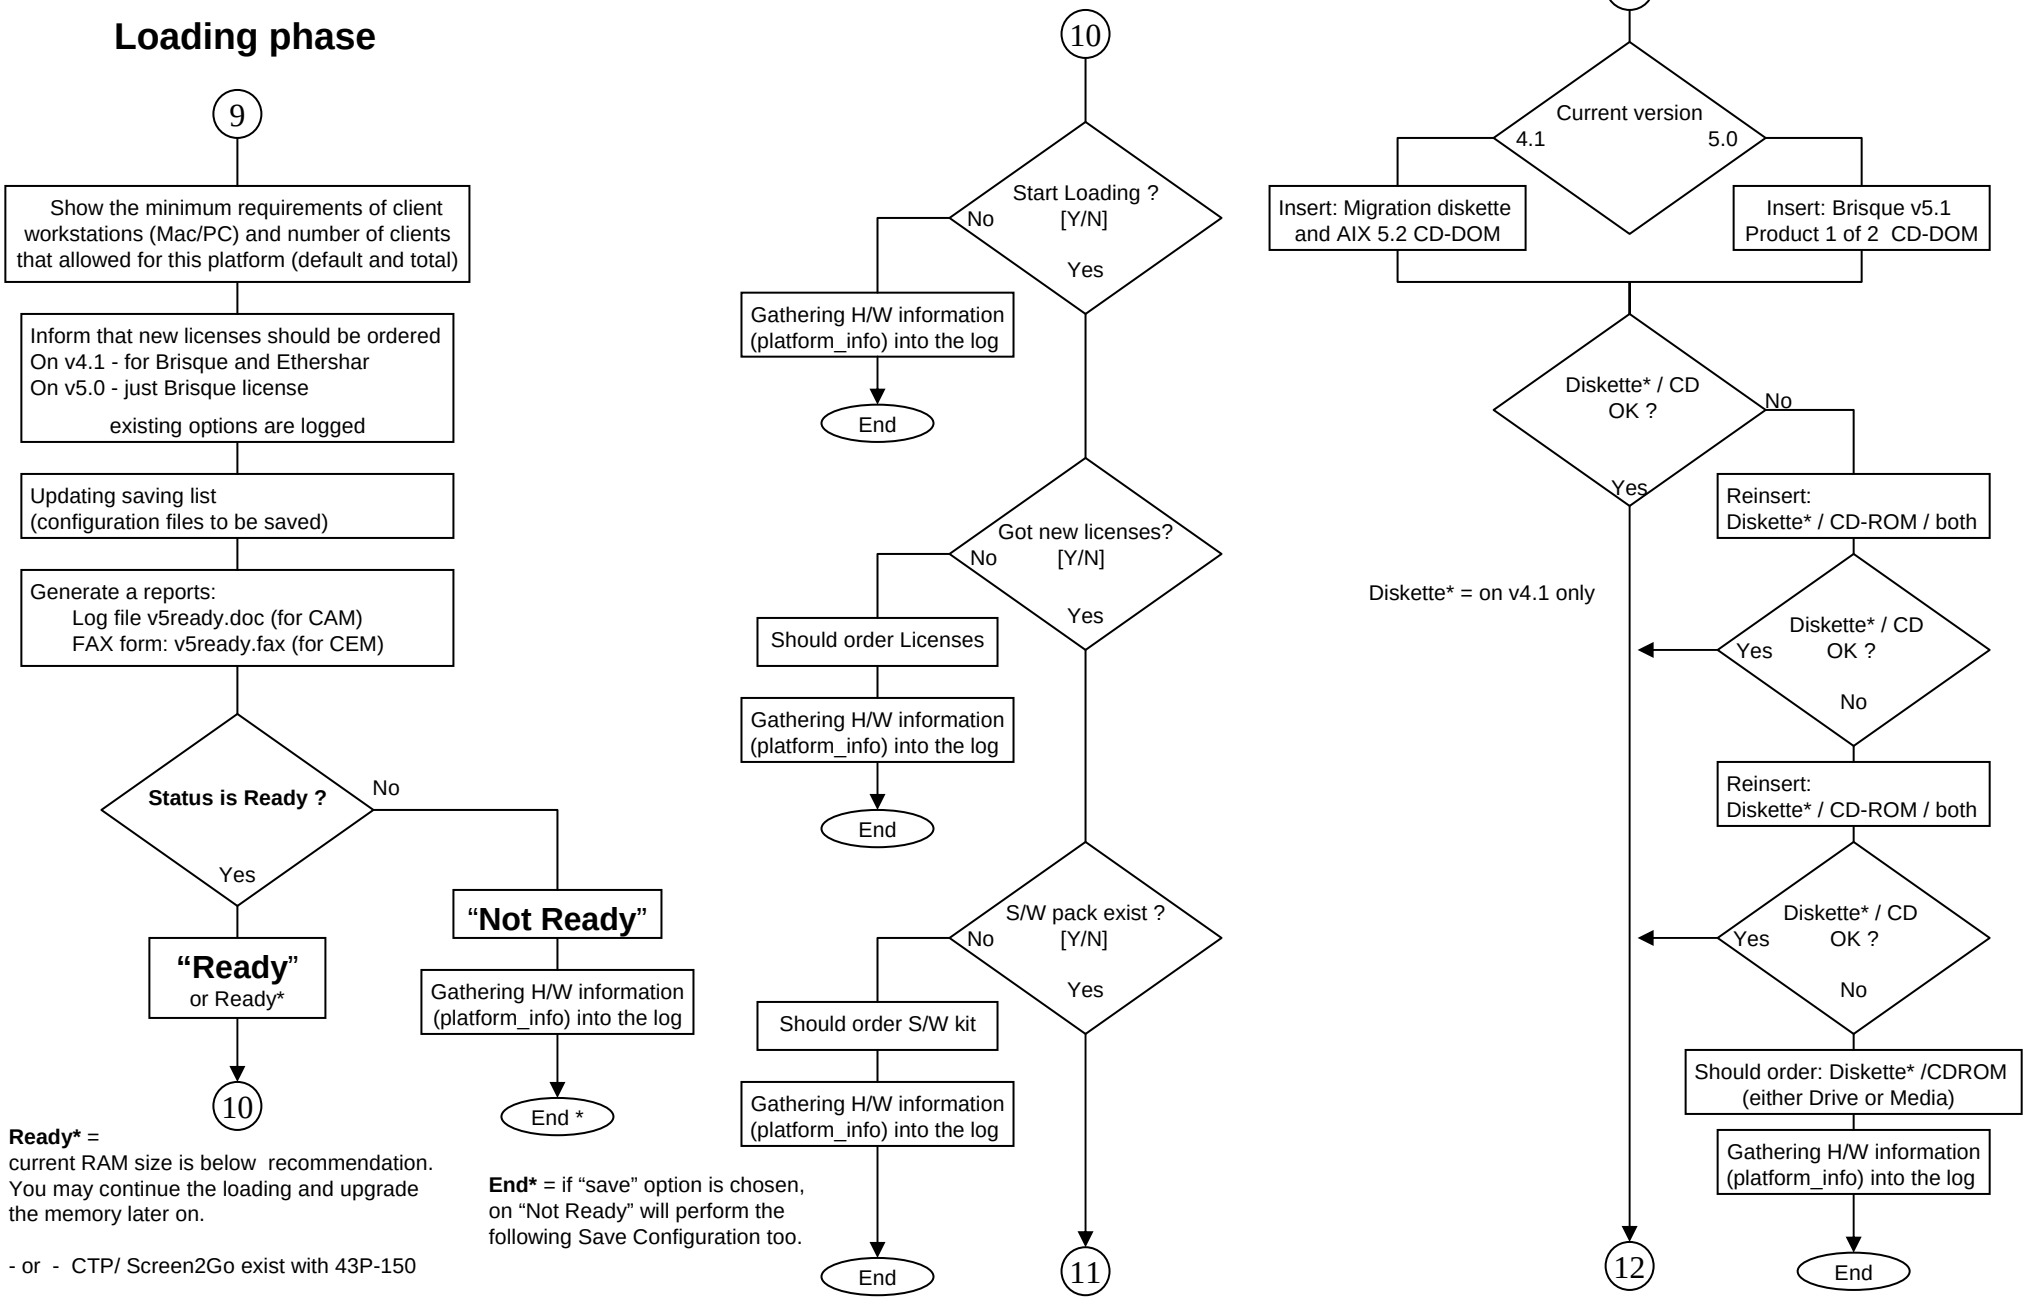

Loading phase

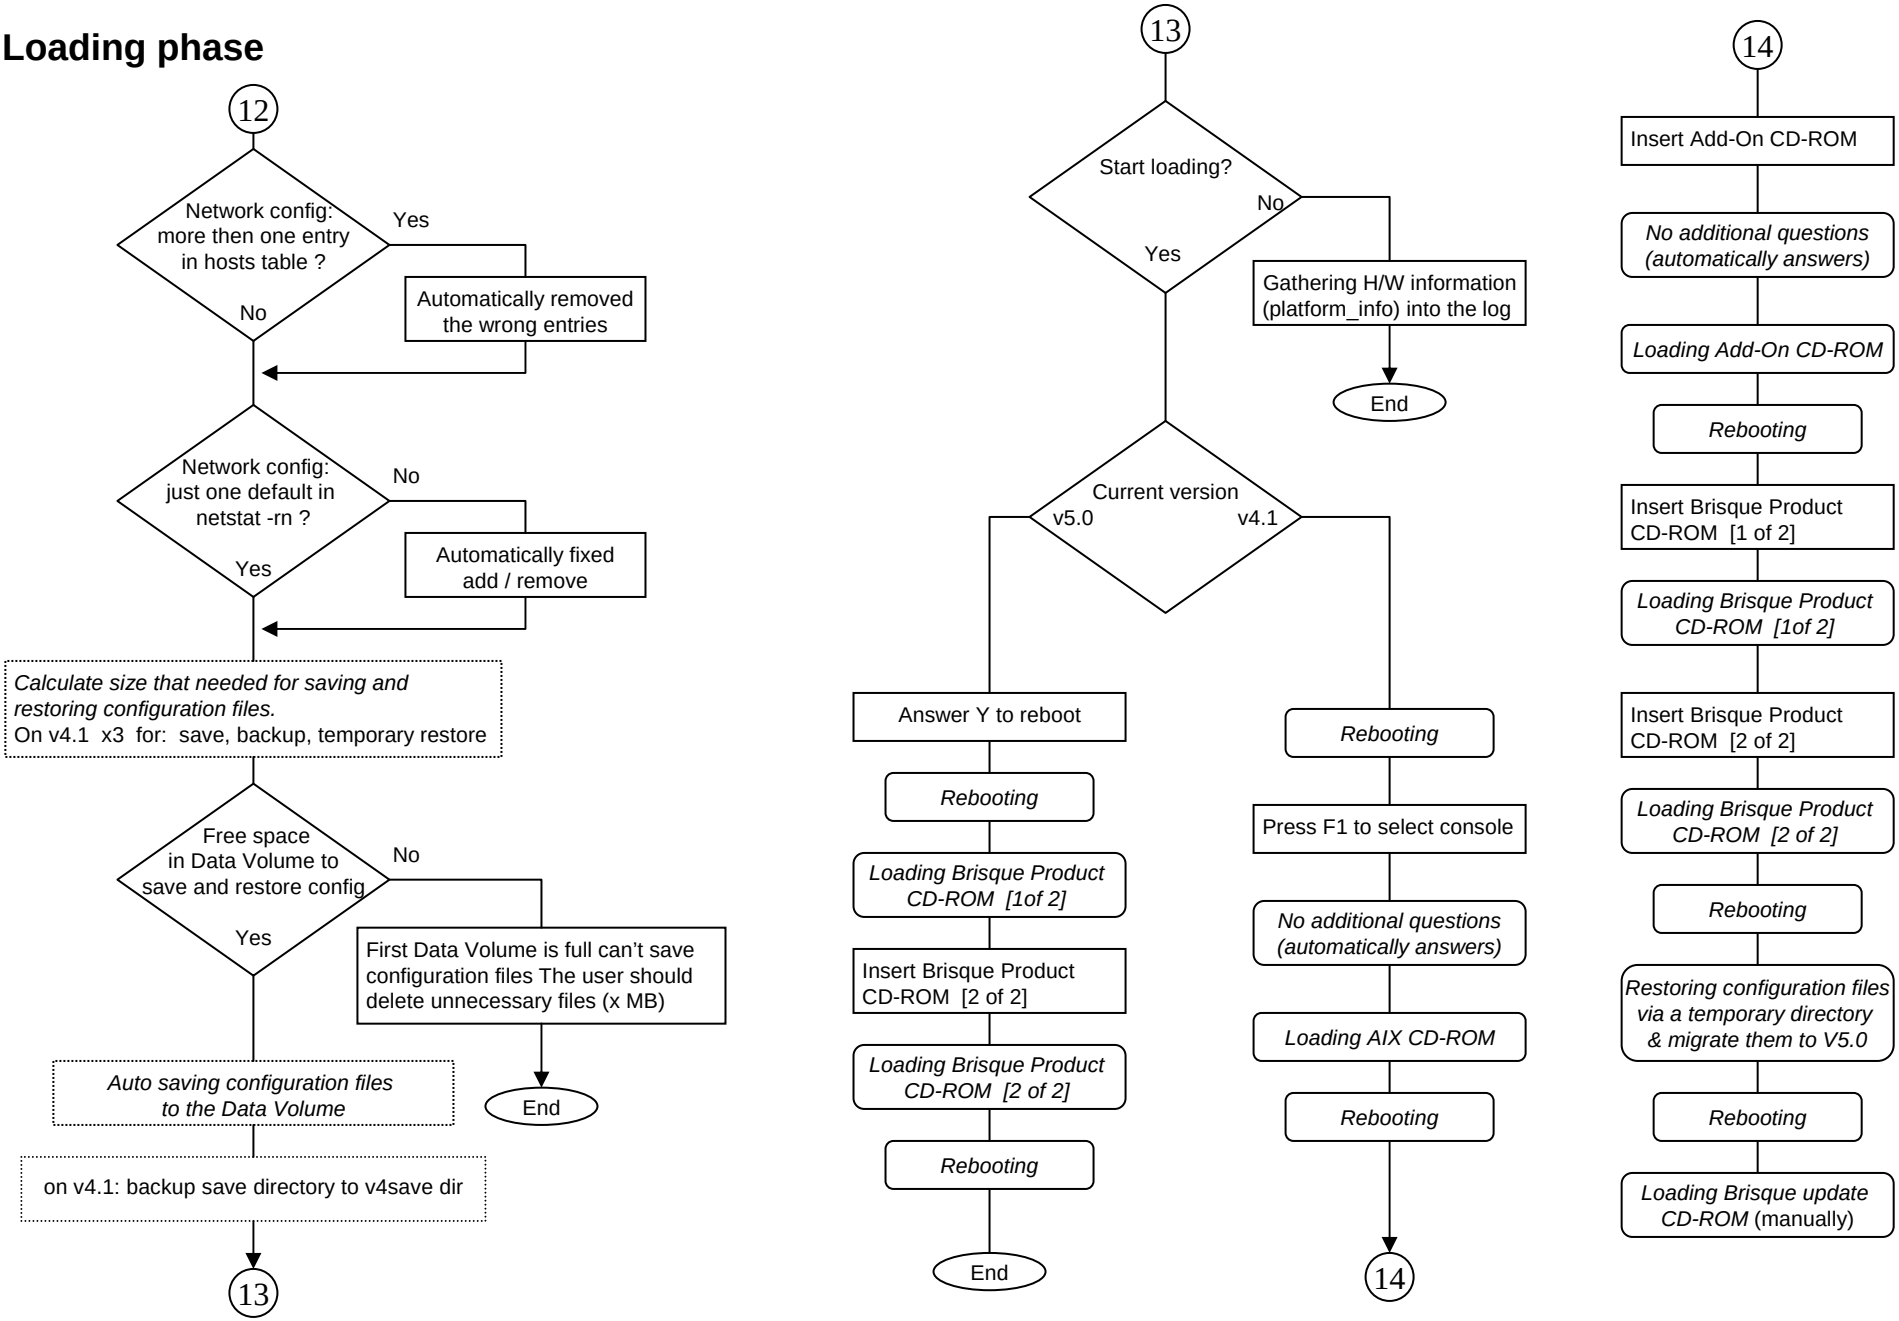

Appendix A: Checking the system disk

