
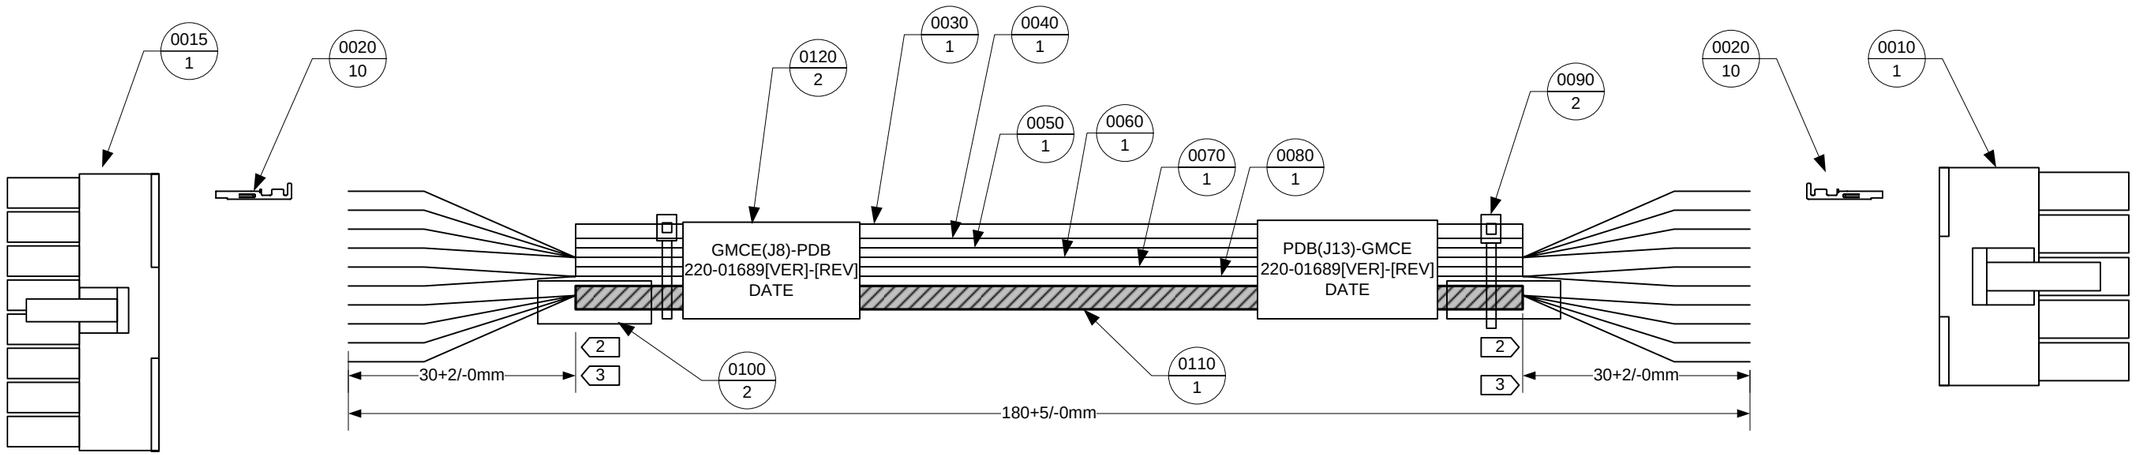



TO MCE (J8)

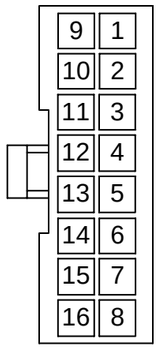

VIEW FROM
WIRE ENTRY

1	BRN 18	+48VSAFE	BRN 18	1
2	BLU 18	+48VSAFERTN	BLU 18	2
3	GRN 18	+24VSAFE	GRN 18	3
4	WHT 18	+24VSAFERTN	WHT 18	4
9	RED 24	CAN_H	RED 24	6
10	BLACK 24	CAN_L	BLACK 24	7
11	GREEN 24	CHASSIS	GREEN 24	8
12	WHITE 24	TERM_DET	WHITE 24	9
		DRAIN WIRE 24		
5	RED 18	+24V	RED 18	5
13	BLK 18	+24VRTN	BLK 18	10

TO PDB (J13)

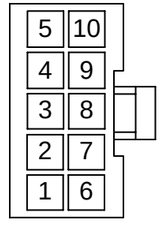

VIEW FROM
WIRE ENTRY

No connections on pin 6, 7, 8, 14,15, & 16

NOTES:

1. 0010 / 1 — ITEM # / QUANTITY #
2. HEAT SHRINK OVER ITEM 0110 ONLY, CRIMP DRAIN WIRE WITH GREEN WIRE TOGETHER TO THE PINS.
3. CUT UNUSED 24 AWG WIRE OFF AT JACKET

© COPYRIGHT KODAK

CAB,ASSY,EXP-BUS,
GMCE-PDB,TSM
ASSEMBLING DRAWING

DESIGNED BY	DRAWN BY			
S. Cheung	S. Cheung			
MILLIMETERS UNLESS SPECIFIED	DATE 2001:SEPT:18	SIZE B	SCALE NTS	
PART NO.	REV	DOC	SHEET	OF
220 - 01689A	- A	AD	1	1

Revised on Monday, May 29, 2006