


Kodak	Dual Strut Upgrade Procedure, NWP, TSM	Assembly: 500-02691C

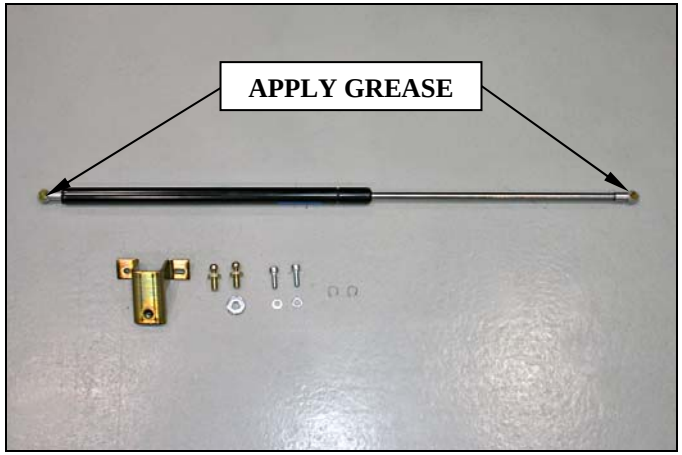

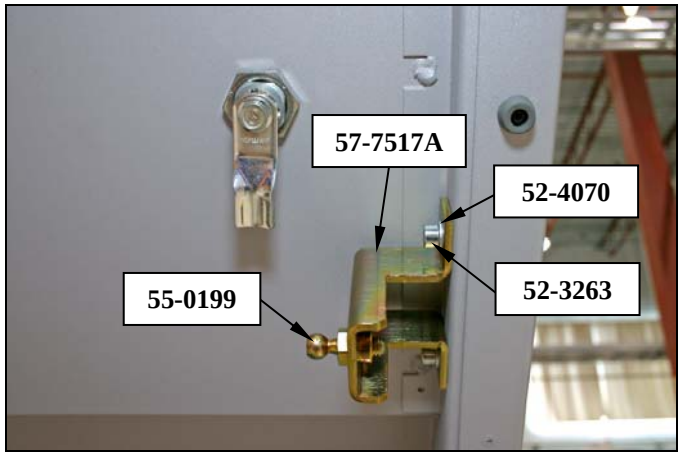

REQUIRED ACTIVITY	PART #
Install **one** bracket	57-7517A
Use **two** M6x18 screws	52-3263
Use **two** M6 flat washers	52-4070
Install **one** gas strut ball stud	55-0199



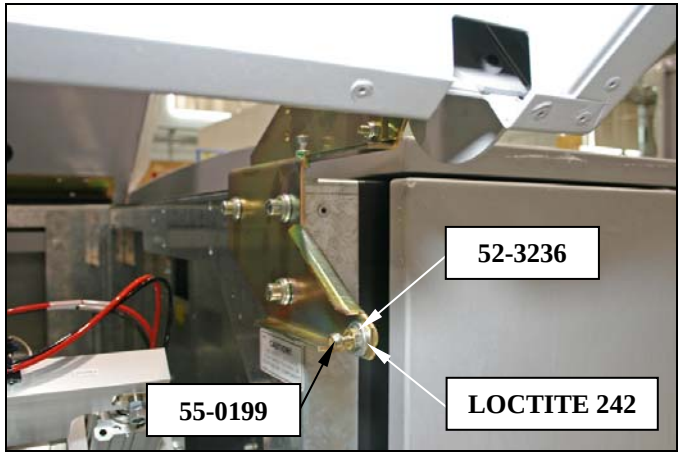

REQUIRED ACTIVITY	PART #
Install **one** gas strut ball stud	**55-0199**
Use **one** M8 heavy washer	**52-3236**
Apply Loctite 242	
Install **one** gas spring strut cylinder	**362-00063**
Install **two** gas strut ball stud mount clips	**55-0202**