
CreoScitex

VLF AUTOLOADER
ADDING GROUND JUMPER TO PDB

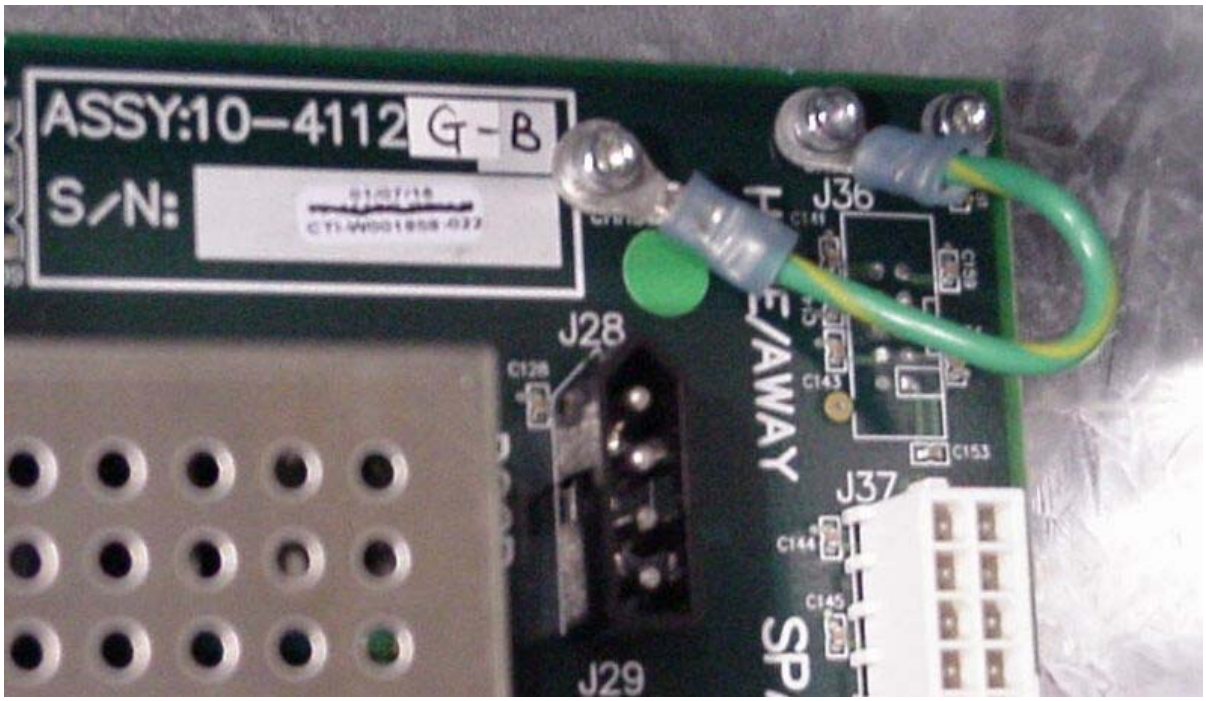

1. 1 ATTACHING GROUND JUMPER TO PDB

1. Item 0010(10-4680A) is to be connected between the PDB Ground terminal and the Chassis Ground terminal. Item 0010 is shown secured to the PDB in the photo above.
2. Ensure that you are properly grounded, using a ground strap, before proceeding. The PDB is sensitive to electric static discharge.
3. Remove power from the Autoloader. Then Remove the cover from the PDV.
4. Loosen the M3 screws which secure the PDB to the powerbox.
5. Connect Item 0010 using two screws items 0040, two flat washers items 0050, and two locking washers items 0030. Secure with two nuts items 0020.
6. Retrofit is complete. Tighten any screws that were loosened and attach the cover back to the powerbox.