

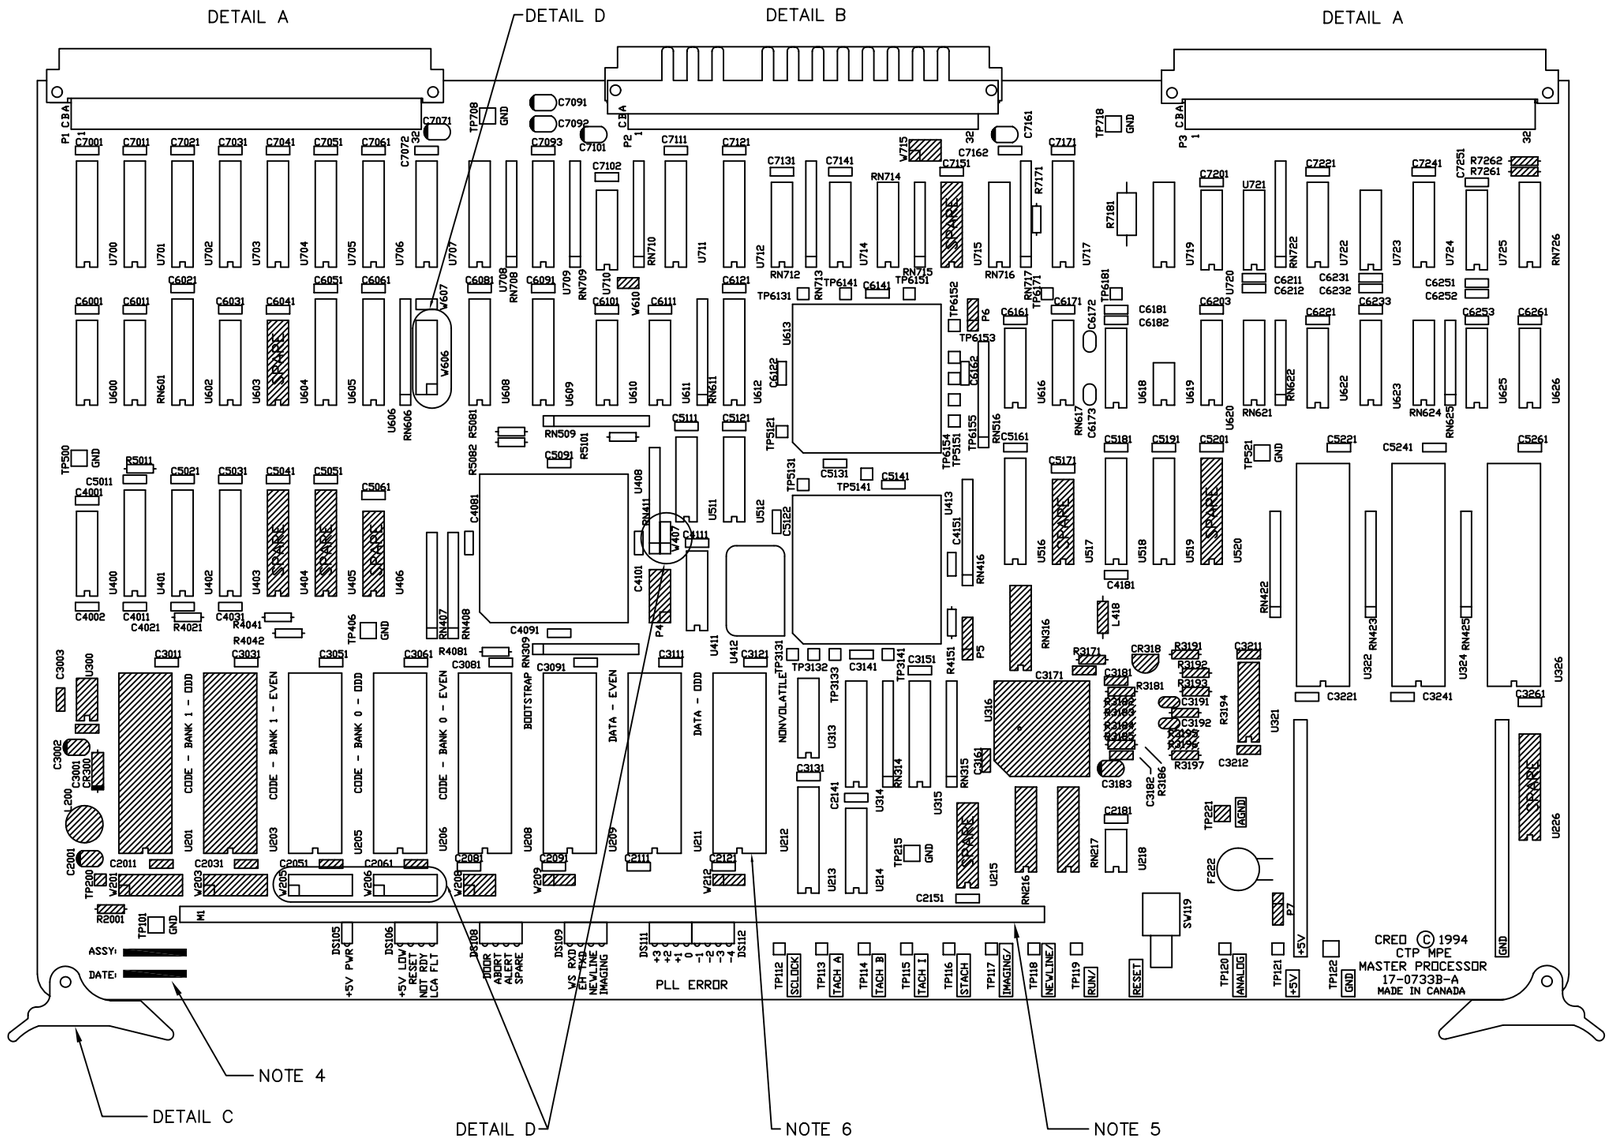
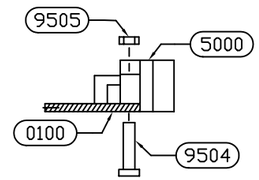



DETAIL A

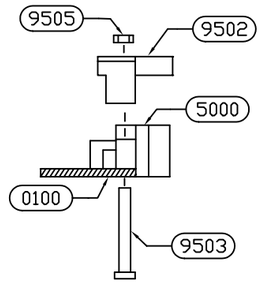



DETAIL B
BREAK OFF KEY
STRIP AT TAB #4

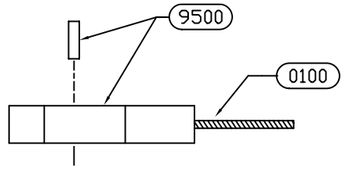


DETAIL C
EJECTOR LATCH DETAIL

NOTES:

1) Install P1 and P3 as shown in detail A
2) Install key strip on P2 as shown in detail B
3) Install ejector latches as shown in detail C
4) Record assembly number and date in permanent ink
   ASSY: 10-3692B-B
   Date: 11/19/97 (example)
5) Install stiffener bar with label facing back of board.
6) Socket for U212 must not be exposed to water.
7) ▨ Denotes components that are not populated..




NOTE: JUMPERS FOR W205 & W206 MUST BE INSULATED.

DETAIL D
JUMPER LOCATIONS FOR
THE COMPONENT SIDE

| | | | | |
|---|---|---|---|---|
| B | E619 | 2002: FEB: 05 | P. IDEN | P. IDEN |
| REV | ECO | DATE | DRAWING CHANGES BY | APPROVED BY |


CREO

BRD,ASSY,MPE,E-SERIES

ASSEMBLY DRAWING


© COPYRIGHT CREO PRODUCTS INC.

| | | | |
|---|---|---|---|
| DESIGNED BY: G PEREGRYM | | DRAWN BY: R LUTHER | |
| MILLIMETERS UNLESS SPECIFIED | DATE: 1997: NOV: 19 | SIZE: B | SCALE: 1: 1.5 |
| PART NO.: 10-3692B-B | REV: AD | DOC | SHEET: 1 OF 2 |

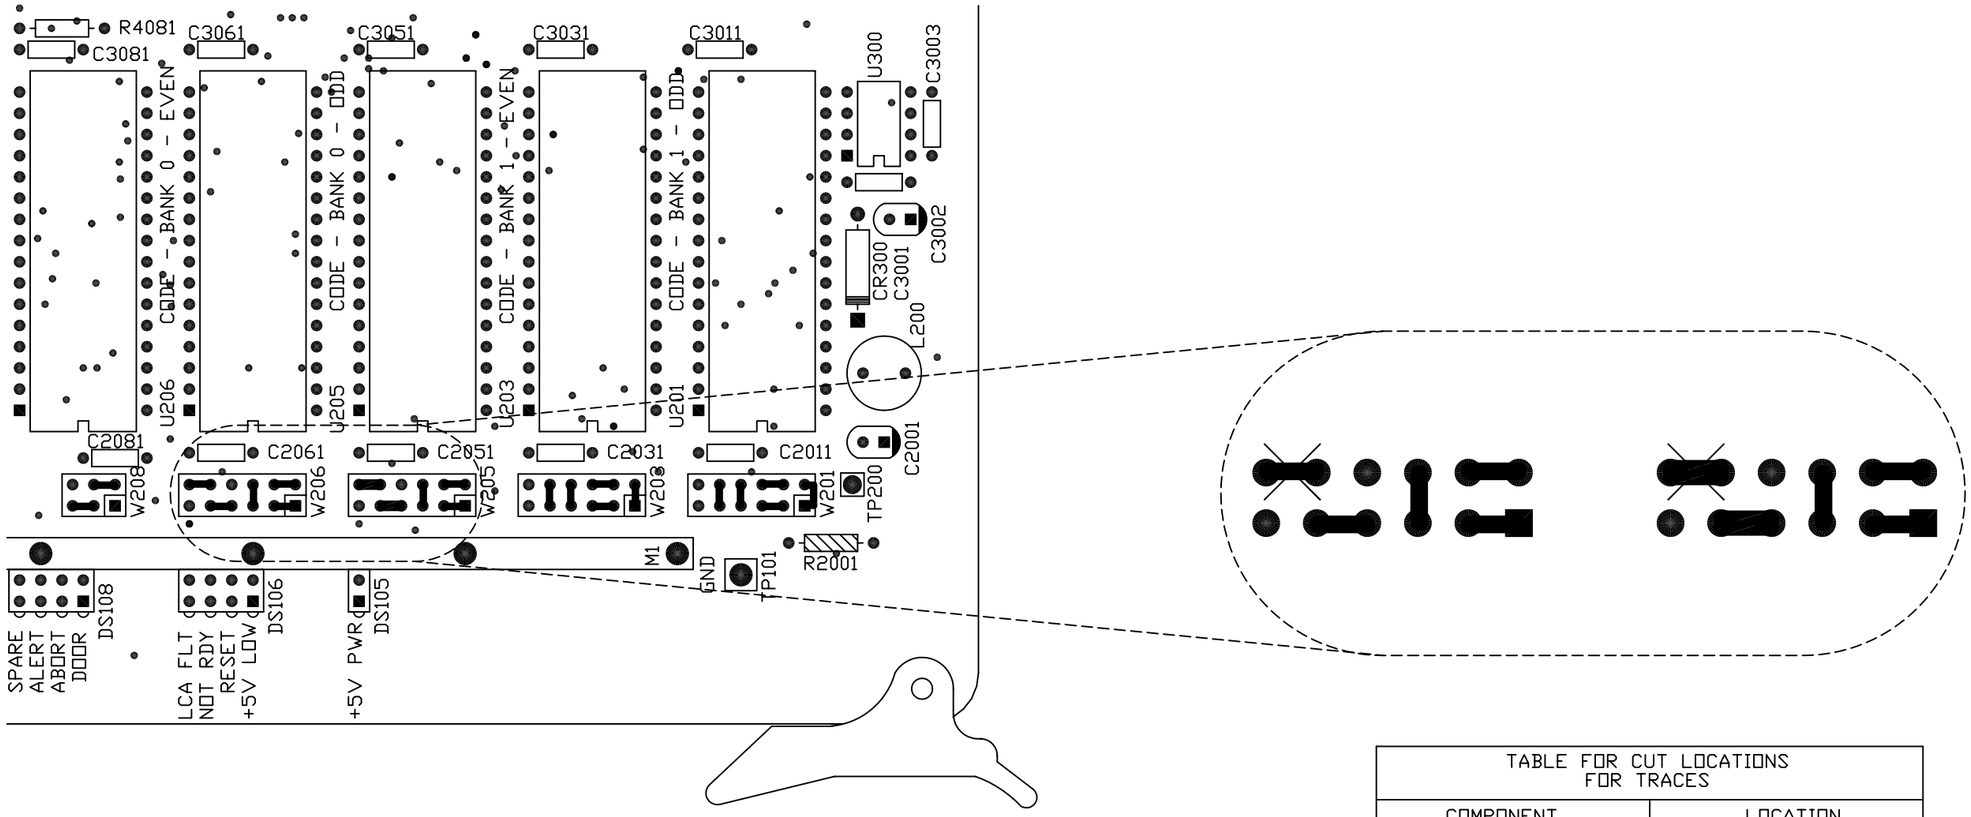


| TABLE FOR CUT LOCATIONS FOR TRACES | |
|---|---|
| COMPONENT | LOCATION |
| W205 | BETWEEN 10 AND 12 |
| W206 | BETWEEN 10 AND 12 |

KEY

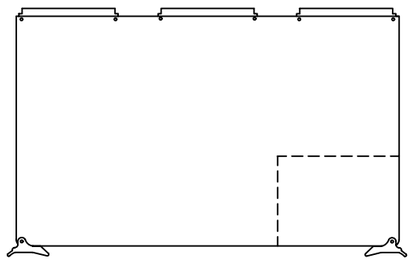

NOTES:

1) THIS VIEW IS FROM THE SOLDER SIDE.

| | | | | |
|---|---|---|---|---|
| B | E619 | 2002:FEB:05 | P. IDEN | P. IDEN |
| REV | ECO | DATE | DRAWING CHANGES BY | APPROVED BY |

CREO

BRD,ASSY,MPE,E-SERIES

ASSEMBLY DRAWING

© COPYRIGHT CREO PRODUCTS INC.

| DESIGNED BY | DRAWN BY | | | |
|---|---|---|---|---|
| G PEREGRYM | R LUTHER | | | |
| MILLIMETERS UNLESS SPECIFIED | DATE 1997:NOV:19 | SIZE B | SCALE 1:.75 | |
| PART NO. 10-3692B-B | REV AD | DOC 2 | SHEET 2 | OF |