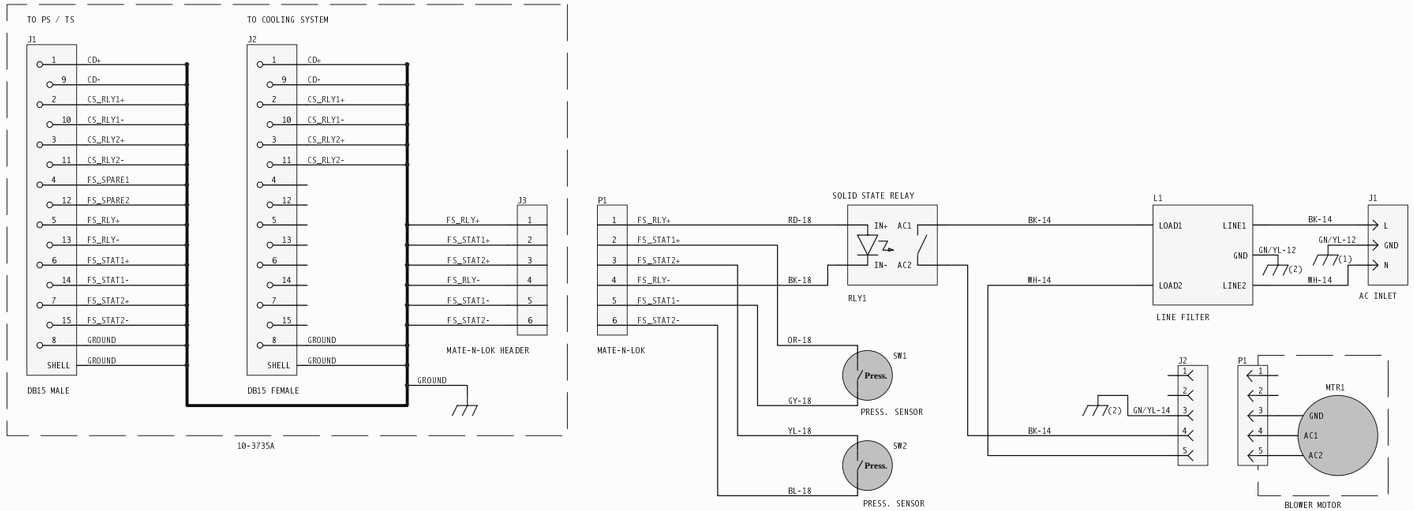


DEBRIS CABINET REMOVAL WIRING
THIS PAGE

NOTES:

WIRING CODES: mm-xx WHERE
mm IS THE COLOR, xx IS THE WIRE GAUGE
e.g. BK-20 FOR BLACK 20 GAUGE

(1) CHASSIS GROUND BOLT #1

(2) CHASSIS GROUND BOLT #2

CREO

WIRING DIAGRAM
DEBRIS FILTERING SYSTEM
THERMOFLEX

DESIGNED BY:	DOCUMENT NUMBER:	LAST ECO:
Yun Lam Li	10-4383A-B-WD01	D306
DRAWN BY:	LAST REVISED BY:	APPROVED BY:
Yun Lam Li	I.SKINNER	I. SKINNER
DESIGN DATE:	LAST MODIFIED DATE:	SHEET:
1998/07/30	1999/12/14	1 of 1