


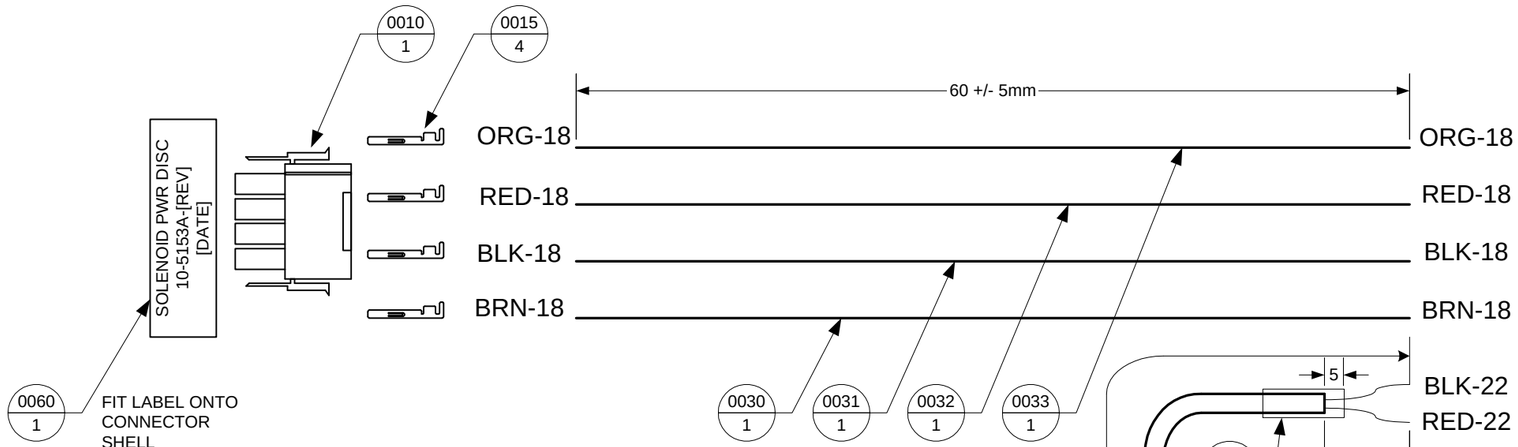


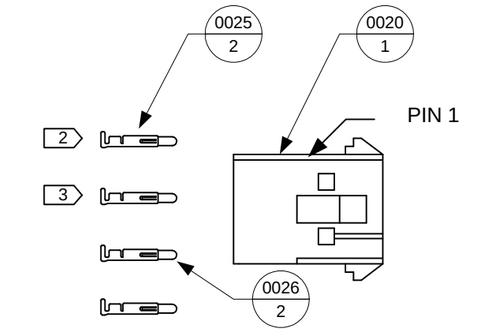


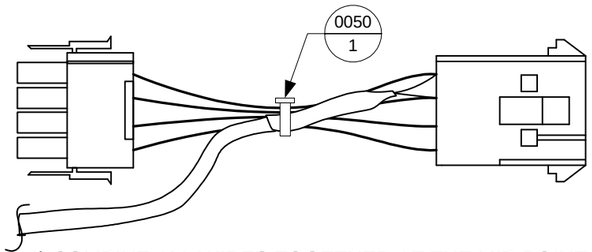

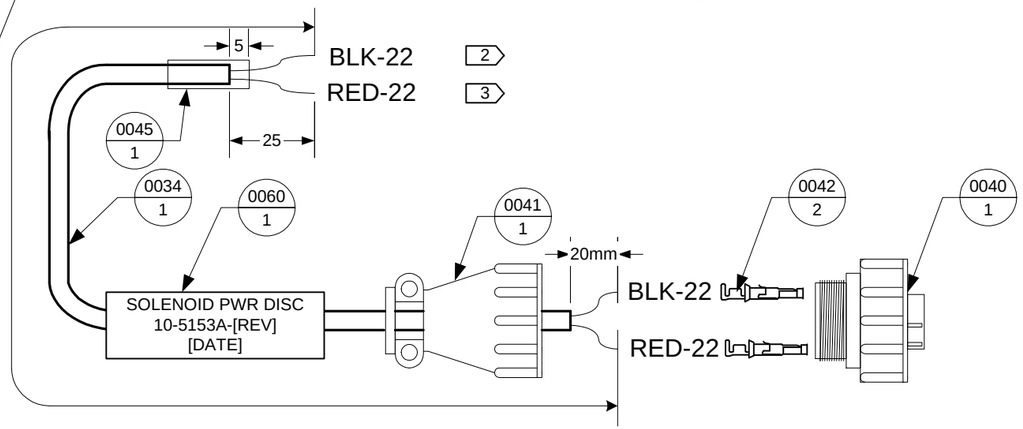

1) COMBINE ALL WIRES TOGETHER AT THE MID POINT BETWEEN 2 MATE-N-LOK CONNECTORS


2) ATTACH TIE WRAP AS A STRAIN RELIEF FOR JACKETED CABLE

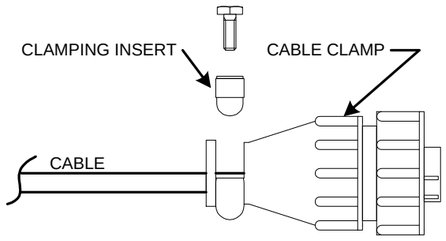



1) TIGHTEN CABLE CLAMP ONTO CONNECTOR HOUSING
2) ATTACH CLAMPING INSERT AS SHOWN IN DRAWING
3) ATTACH BOTH SCREWS TO CLAMP INSERT AND CHECK CABLE FOR SECURE STRAIN RELIEF.


NOTES:

1. 0010 / 1 — ITEM # / QUANTITY #
2. CRIMP 2 WIRES INTO PIN 1
3. CRIMP 2 WIRES INTO PIN 2



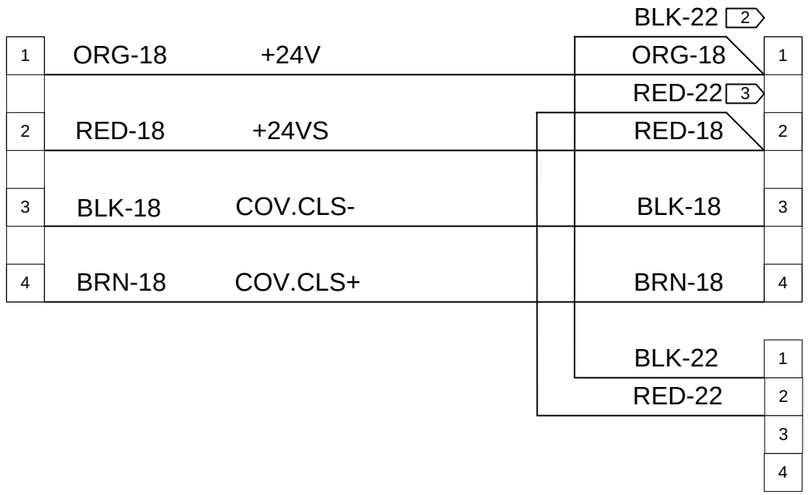



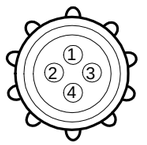

REV	ECO	DATE	DRAWING CHANGES BY	DRAWING APPROVED BY
A	E862	2002:JUN:06	R LEVASSEUR	R LEVASSEUR

creo

CAB,ASSY,SOLENOID PWR DISC,PRELOADER,TS ASSEMBLY DRAWING

© COPYRIGHT CREO

DESIGNED BY	DRAWN BY			
R LEVASSEUR	R LEVASSEUR			
MILLIMETERS UNLESS SPECIFIED	DATE 2002:APR:22	SIZE B	SCALE NTS	
PART NO.	REV	DOC	SHEET	OF
10 - 5153A - A	AD	1	1	