


EACH JUMPER WIRE 40mm LONG.

PUT 2 WIRES INTO EACH PIN FOR PIN 1,3,5


DETAIL "A"

VIEW FROM WIRE ENTRY

TO GENINE (J18)



VIEW FROM WIRE ENTRY

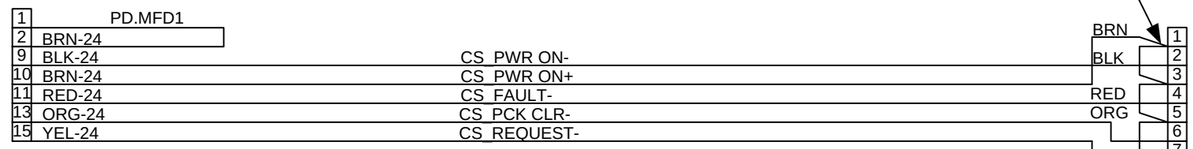

SEE DETAIL "A"

TO PRELOADER INTERFACE (J2)

NOTES:

1. 0010 / 1 — ITEM # / QUANTITY #
2. STRIP WIRE JACKET 50mm FROM END
3. ATTACH HEATSHRINK 10mm OVER END OF JACKET
4. LABEL APPLIED TO BOTH ENDS OF CABLE
5. UNUSED WIRES CUT OFF AT THE JACKET
6. UNUSED CONNECTOR SLOTS NEED CRIMPED PINS INSERTED

REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY
A	E862	2002:JUN:06	R.LEVASSEUR	R.LEVASSEUR

creo

© COPYRIGHT CREO INC.

CAB,ASSY,GEN(J18)-NPIF(J2),TSM
ASSEMBLY DRAWING

DESIGNED BY	DRAWN BY			
R.LEVASSEUR	R.LEVASSEUR			
MILLIMETERS UNLESS SPECIFIED	DATE 2002:MAY:01	SIZE B	SCALE NTS	
PART NO.	REV	DOC	SHEET	OF
10 - 5156A	- A	AD	1	1