

REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY
E	D129	1999: SEP: 3	D PRIEST	D PRIEST
D	D117	199: AUG: 20	S CHEUNG	S CHEUNG


NOTES:
01 LOCTITE 242 ALL FASTENERS ON ALL SHEETS EXCEPT AS NOTED. DO NOT USE LOCTITE WITH GROUND SCREWS, NYLOC NUTS, WHERE LOCK WASHERS ARE USED, WITH PRE-APPLIED SCREWS, OR WITH TEMPERATURE SENSORS.
02 USED FOR PANELS. TIGHTEN AT HIGHER LEVEL ASSEMBLY
03 END MODULES TO BE SQUARE WITH FRAME RAILS IN CLOSED POSITION.
04 MOUNT STUD ON POWER BOX
05 SHIMS BETWEEN SLIDE AND FRAME 4 PLACES
06 AMOUNTS SHOWN ARE FOR 2 ASSEMBLIES, ONE AT EACH END.
07 USE LOCTITE 262 ON STUD AT ENGINE. FASTEN NUTS WHEN LOCTITE DRY. SEE SHEET 2 FOR PRELOAD DETAILS
08 2 EXTRA WASHERS AT EACH CORNER ON BOTH SIDES (2 @ 4 PLCS REF 0385).
09 MOST ITEMS ARE A SIMPLIFIED REPRESENTATION ONLY.
10 USE ENGINE LOCATION JIG. INSTALL JIG IN END PLATE ROLLER SLOTS. POSITION ENGINE WITHIN ±1.0mm FROM INDICATOR LINE, AND PARALLEL WITHIN ±0.5mm

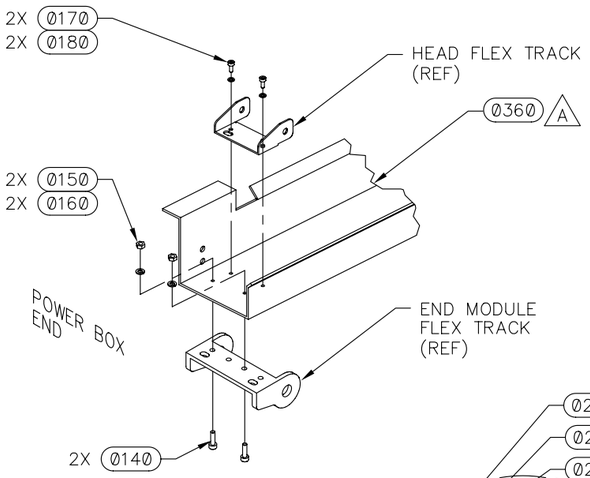


DETAIL 'A'
N.T.S.

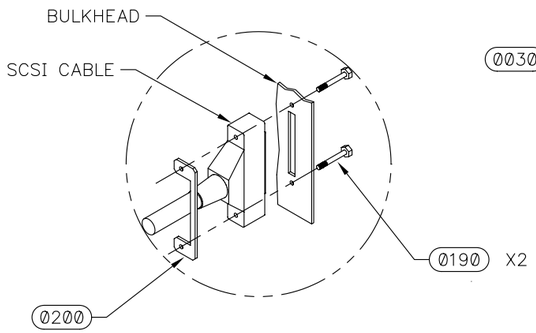


DETAIL 'E'
N.T.S.

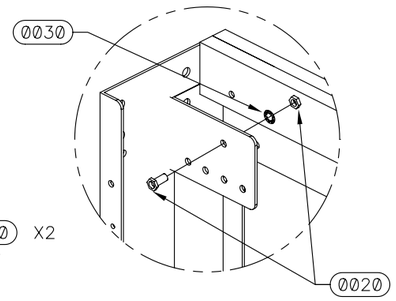


DETAIL 'F'
N.T.S.

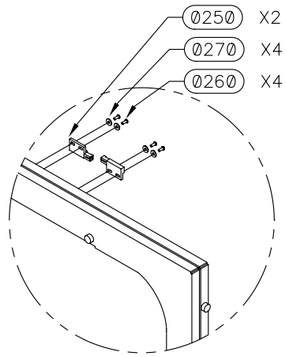


DETAIL 'G'
N.T.S.

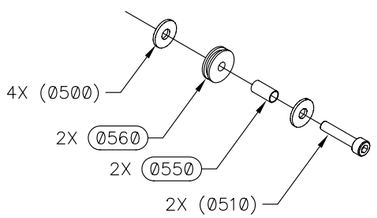


DETAIL 'B' 06
N.T.S.

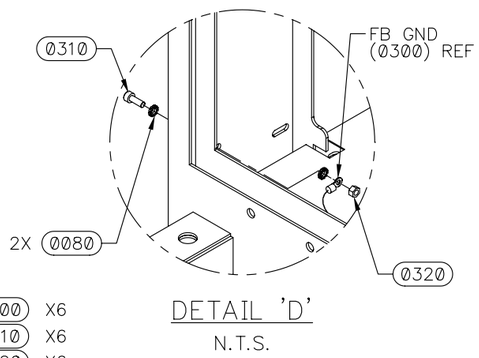

DETAIL 'D'
N.T.S.

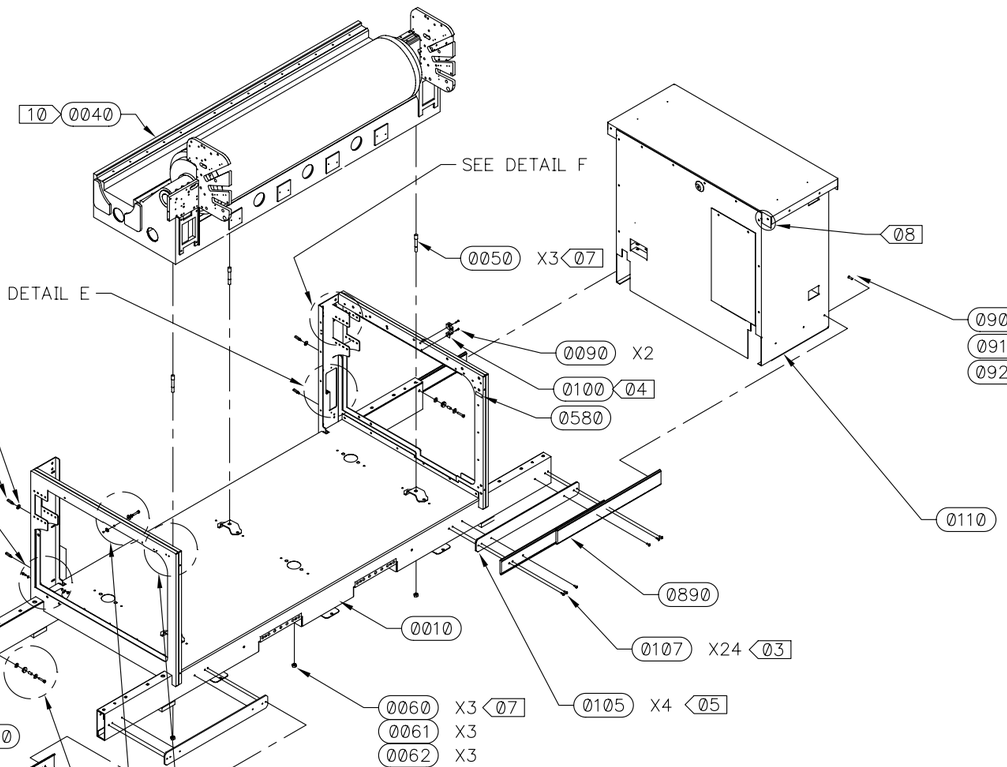

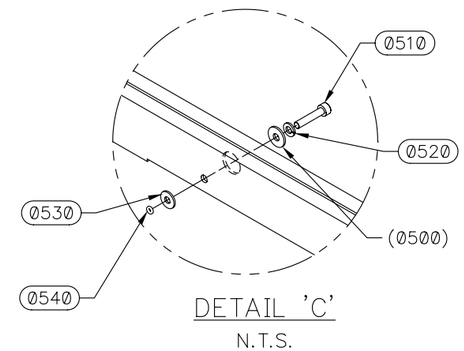

DETAIL 'C'
N.T.S.

D ADD ITEMS 0240, 0250, AND 0260
E NO CHANGES ON THIS SHEET

CREO

ASSY,TS BASE
TRENDSETTER
ASSEMBLY DRAWING

© COPYRIGHT CREO PRODUCTS INC.

DESIGNED BY	DRAWN BY			
C. CUMMINGS	P MOWAT			
MILLIMETERS UNLESS SPECIFIED	DATE 1998: MAR: 15	SIZE B	SCALE 1: 25	
PART NO. 11-0484C-E	REV AD	DOC 1	SHEET 1	OF 3