

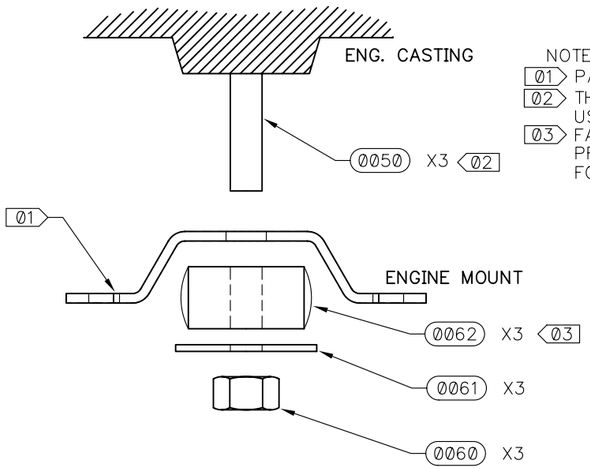


ENGINE MOUNT DETAIL

NOTES:
01 PART OF SUB ASSEMBLY
02 THREAD 25mm [1"] INTO CASTING. USE LOCTITE 262.
03 FASTEN NUTS WHEN DRY. PRELOAD RUBBER SPRING TO A FORCE OF 1.5kN.

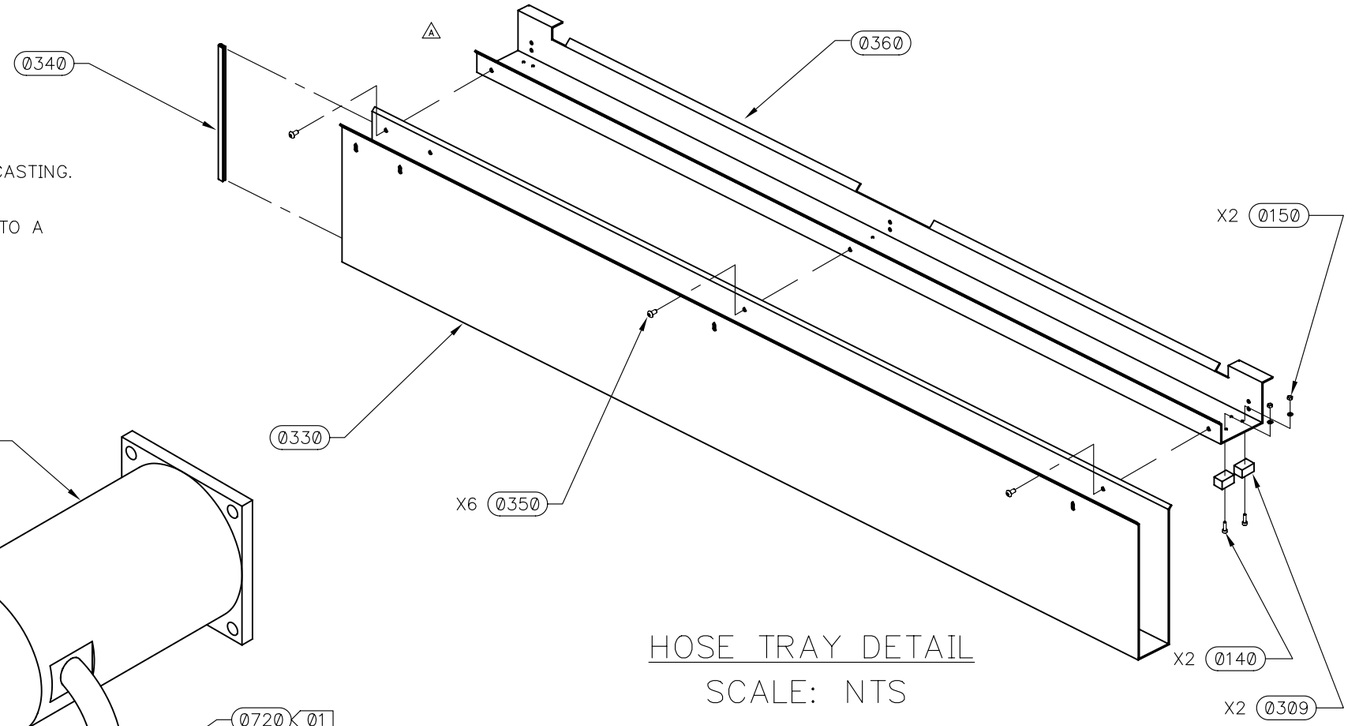


HOSE TRAY DETAIL
SCALE: NTS

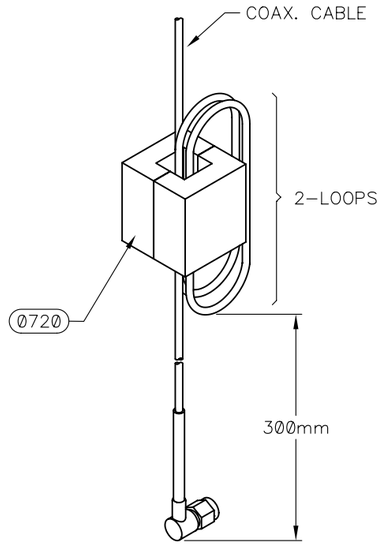

FERRITE CLAMP DETAIL

NOTE:
01 PLACE FERRITE CLAMP AT MOTOR.

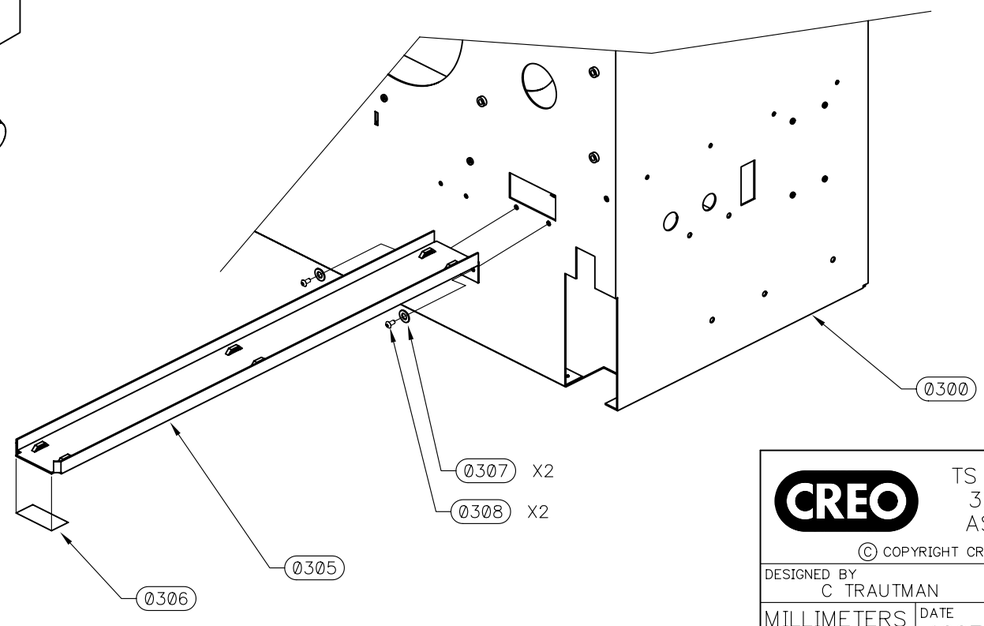

D NO CHANGES ON THIS SHEET

E NO CHANGES ON THIS SHEET

REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY
E	D129	1999: SEP: 3	D PRIEST	D PRIEST
D	D117	1999: AUG: 20	S CHEUNG	S CHEUNG

CREO

TS BASE (NO OPTION)
3244 TRENDSETTER
ASSEMBLY DRAWING

© COPYRIGHT CREO PRODUCTS INC.

DESIGNED BY	DRAWN BY		
C TRAUTMAN	P MOWAT		
MILLIMETERS UNLESS SPECIFIED	DATE: 1997: APR: 16	SIZE: B	SCALE: NTS
PART NO.	REV	DOC	SHEET / OF
11-0484C-E	AD	2	3