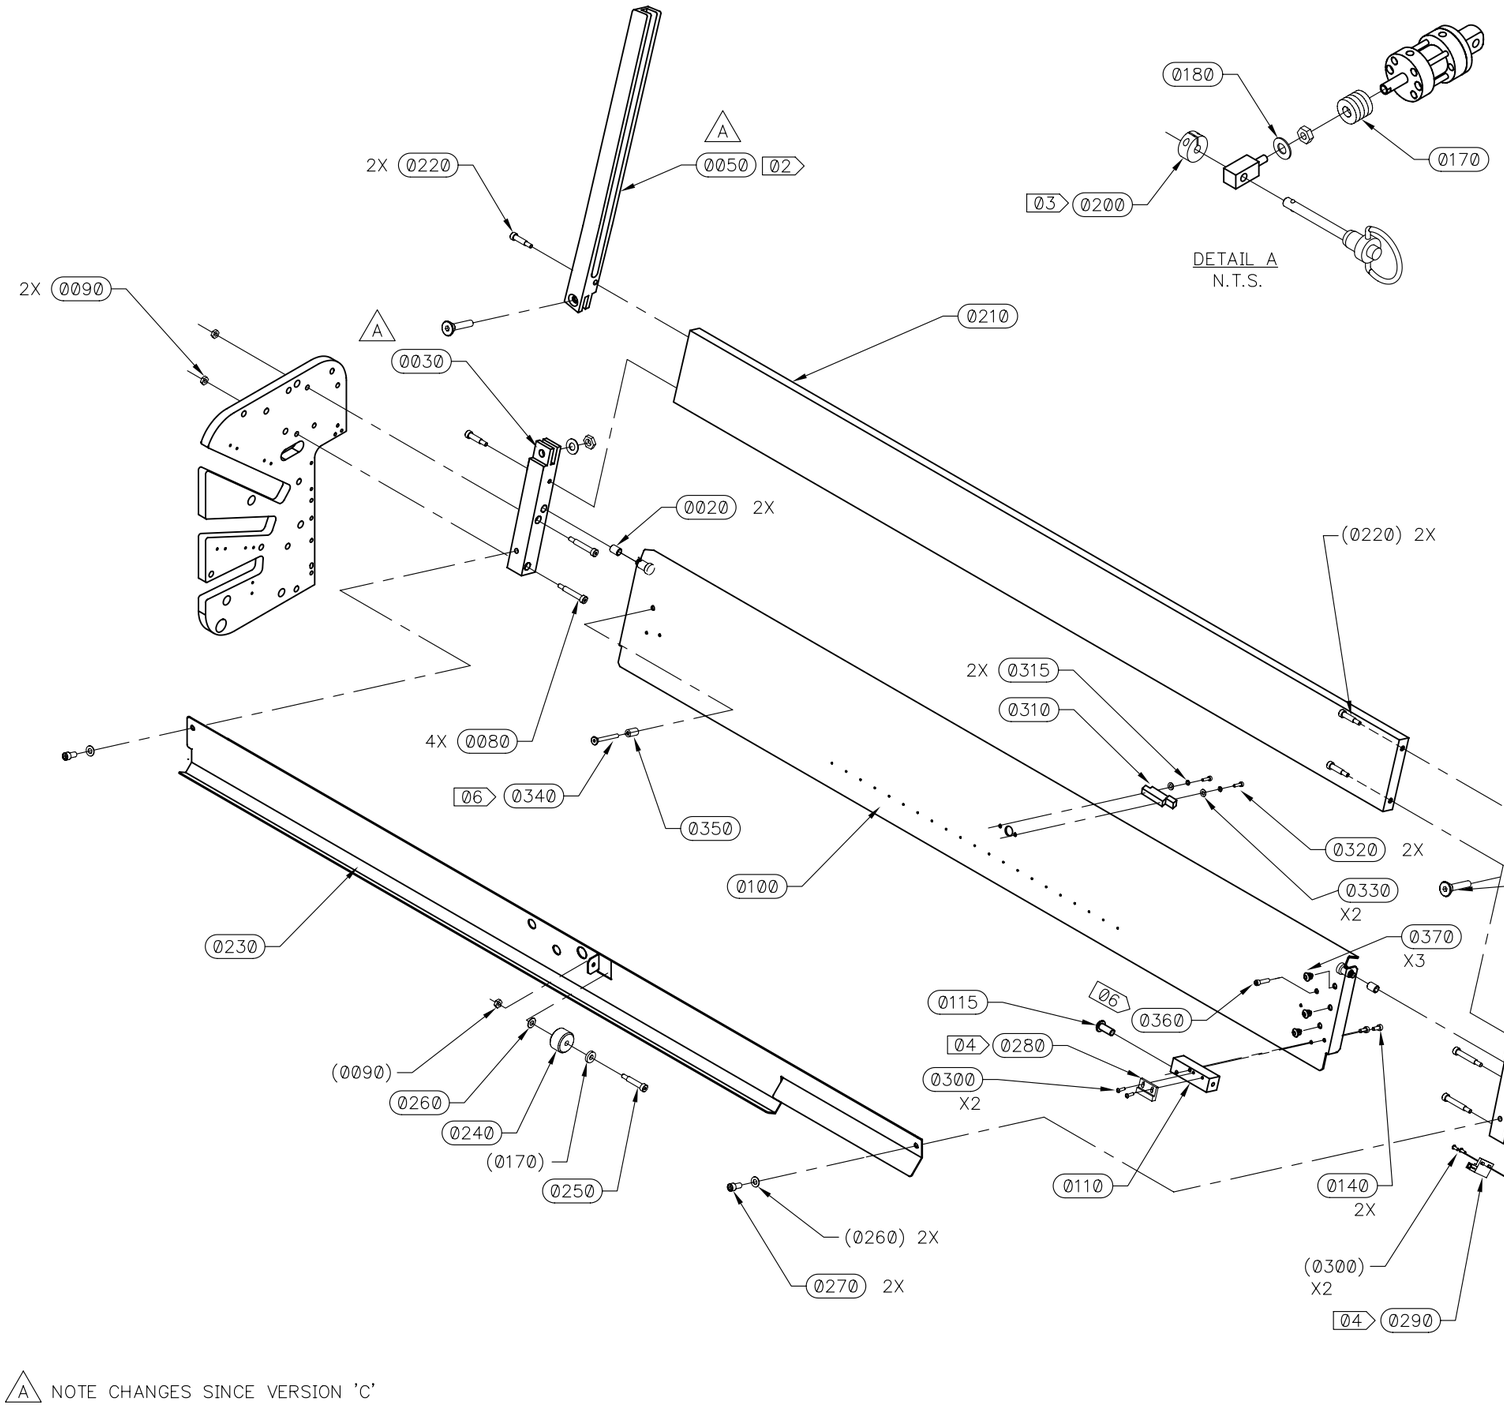


DETAIL A
N.T.S.

NOTES

01 ENDPLATES AND CYLINDER FROM EXISTING ASSEMBLIES.

02 ALIGN UPPER AND LOWER SECTIONS WITH A STRAIGHT EDGE.

03 USE LOCTITE 242 ON ALL SCREWS EXCEPT THOSE WITH NYLOC NUTS, LOCKWASHERS, OR AS NOTED OTHERWISE.

04 ADJUST SO THAT 'UP' IS INDICATED BETWEEN LAST 3–5mm OF TRAVEL, AND UNTIL END OF TRAVEL.

05 TIGHTEN ITEM #0340 TO FLARE AND BECOME FLUSH WITH ITEM #0350.

06 NO LOCTITE.

NOTE:
ALL PARTS NOT HAVING AN ITEM#
ARE ALREADY EXISTING ON THE ENGINE.

A NOTE CHANGES SINCE VERSION 'C'

REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY
A	C000	1997:DEC:09	PAUL MOWAT	PAUL MOWAT

CREO

ASSY, MECHANICAL
PLATE ALIGNMENT TS3
ASSEMBLY DRAWING

© COPYRIGHT CREO PRODUCTS INC.

DESIGNED BY	DRAWN BY		
M. PRENTICE	NICOLE WILSON		
MILLIMETERS UNLESS SPECIFIED	DATE 1996:OCT:12	SIZE B	SCALE 2:15

PART NO.	REV	DOC	SHEET	OF
50–1298D–A	AD	1	1	