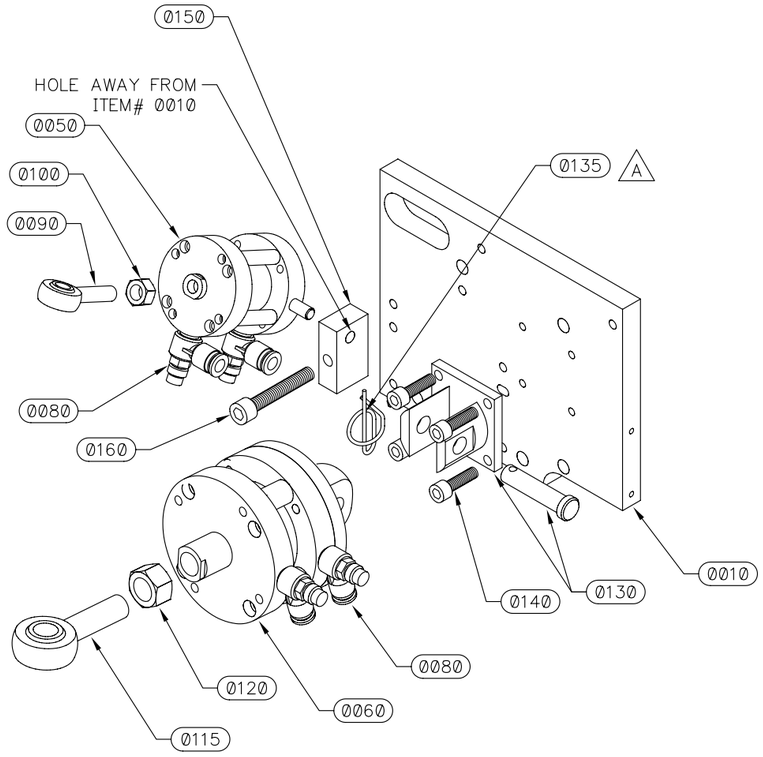
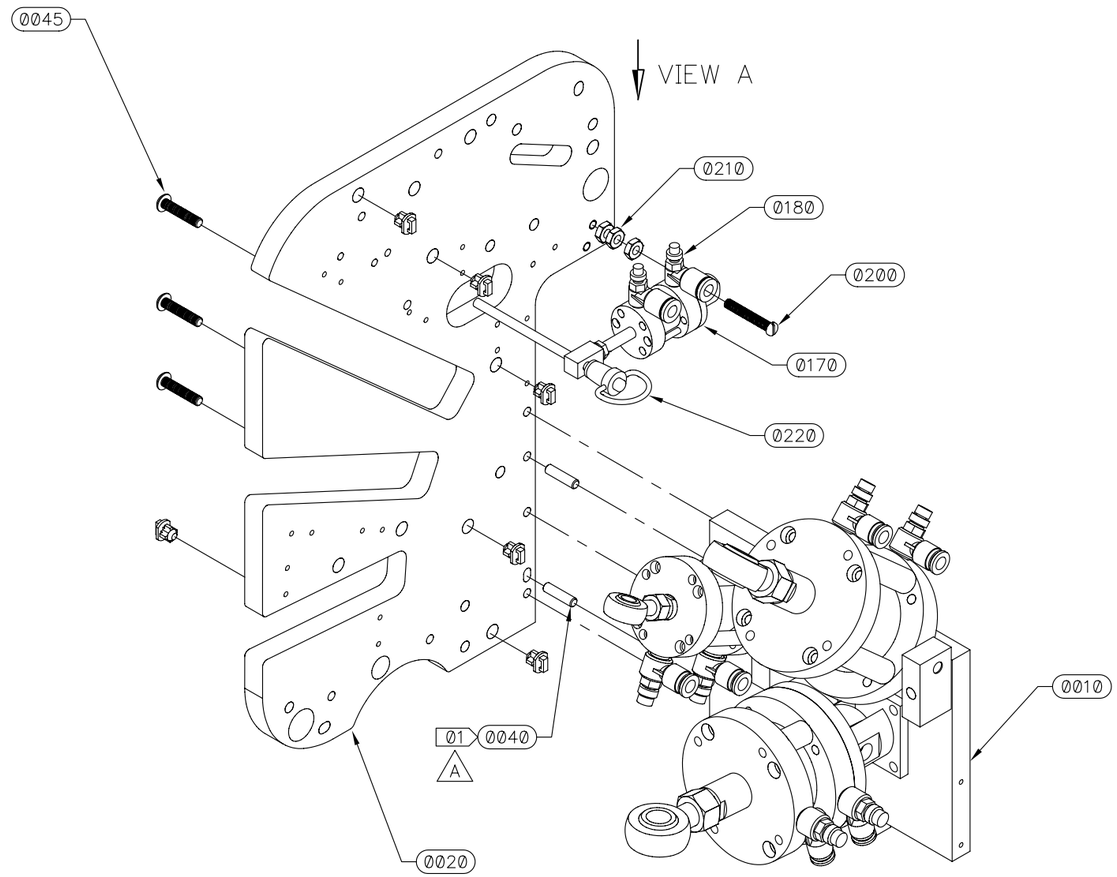
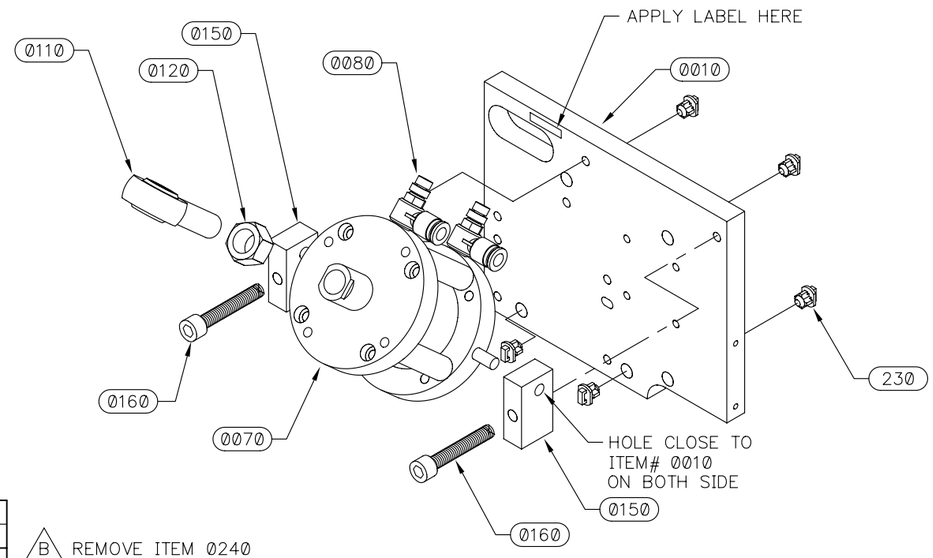
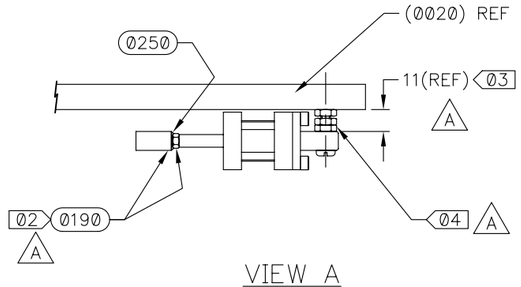



VIEW A
(PARTS PARTIALLY REMOVED FOR CLARIFICATION)

NOTES:

01 INSTALL INTO ITEM 0010 USING LOCTITE 271 UNTIL HALF OF DOWEL IS PROTRUDING.

02 DO NOT LOCTITE ITEM 0190 TO THE CYLINDER. FURTHER ADJUSTMENT WILL BE MADE AT NEXT LEVEL ASSEMBLIES.

03 ADJUST IT SO THAT THE CYLINDER DO NOT TOUCH THE CLAMP PLATE.

04 ADJUST THE TWO JAM NUT SO THAT THE CYLINDER CAN PIVOT FREELY.

| REV | ECO | DATE | DRAWING CHANGES BY | APPROVED BY |
|---|---|---|---|---|
| B | D172 | 1999: SEP: 29 | D PRIEST | D PRIEST |
| A | C041 | 1998: JUN: 05 | DFENG | PMOWAT |

B REMOVE ITEM 0240

CREO

# CLAMP CYLINDER ASSY ENCODER END DETAILED DRAWING – CTP

© COPYRIGHT CREO PRODUCTS INC.

| DESIGNED BY | DRAWN BY | | |
|---|---|---|---|
| | D TO | | |
| MILLIMETERS UNLESS SPECIFIED | DATE: 1997: JUN: 11 | SIZE: B | SCALE: 1: 3 |

| PART NO. | REV | DOC | SHEET | OF |
|---|---|---|---|---|
| 50–1486C–B | AD | 1 | 1 | |