
CONFIDENTIAL: PROPERTY OF CREO PRODUCTS INC.

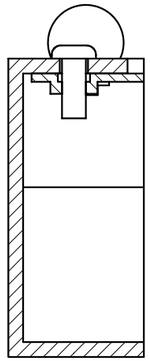

SECTION A
SCALE 1 : 1

NOTES:

1.0) ROUTE THE CABLE TO MAKE BOTH CABLE ANCOR BRACKETS MOVE IN THE SAME DIRECTION.
2.0) LOCATE THE ROLLON T-RAIL TRAK TO THE CORRESPONDING FLASH COVER ROLLER ASSEMBLY.
3.0) ADJUST THE POSITIONS OF MAGNETS BY LOCATING THE SCREWS IN THE CENTER OF SLOT.
4.0) TIGHTEN CABLE TO 30Hz. CHECK WITH BRECOFLEX METER.

REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY
H	E713	2002:MAY:24	I.PRESS	P.LAGODZKI
G	E488	2001:DEC:04	I.PRESS	D.HUBER

CREO


FLASH COVER, FX1

ASSEMBLY DRAWING

© COPYRIGHT CREO PRODUCTS INC.

DESIGNED BY	DRAWN BY			
W.YUEN	I.PRESS			
MILLIMETERS UNLESS SPECIFIED	DATE 1998:OCT:16	SIZE B	SCALE 1:7	
PART NO.	REV	DOC	SHEET	OF
50-1626A	— H	AD	1	2

CONFIDENTIAL: PROPERTY OF CREO PRODUCTS INC.

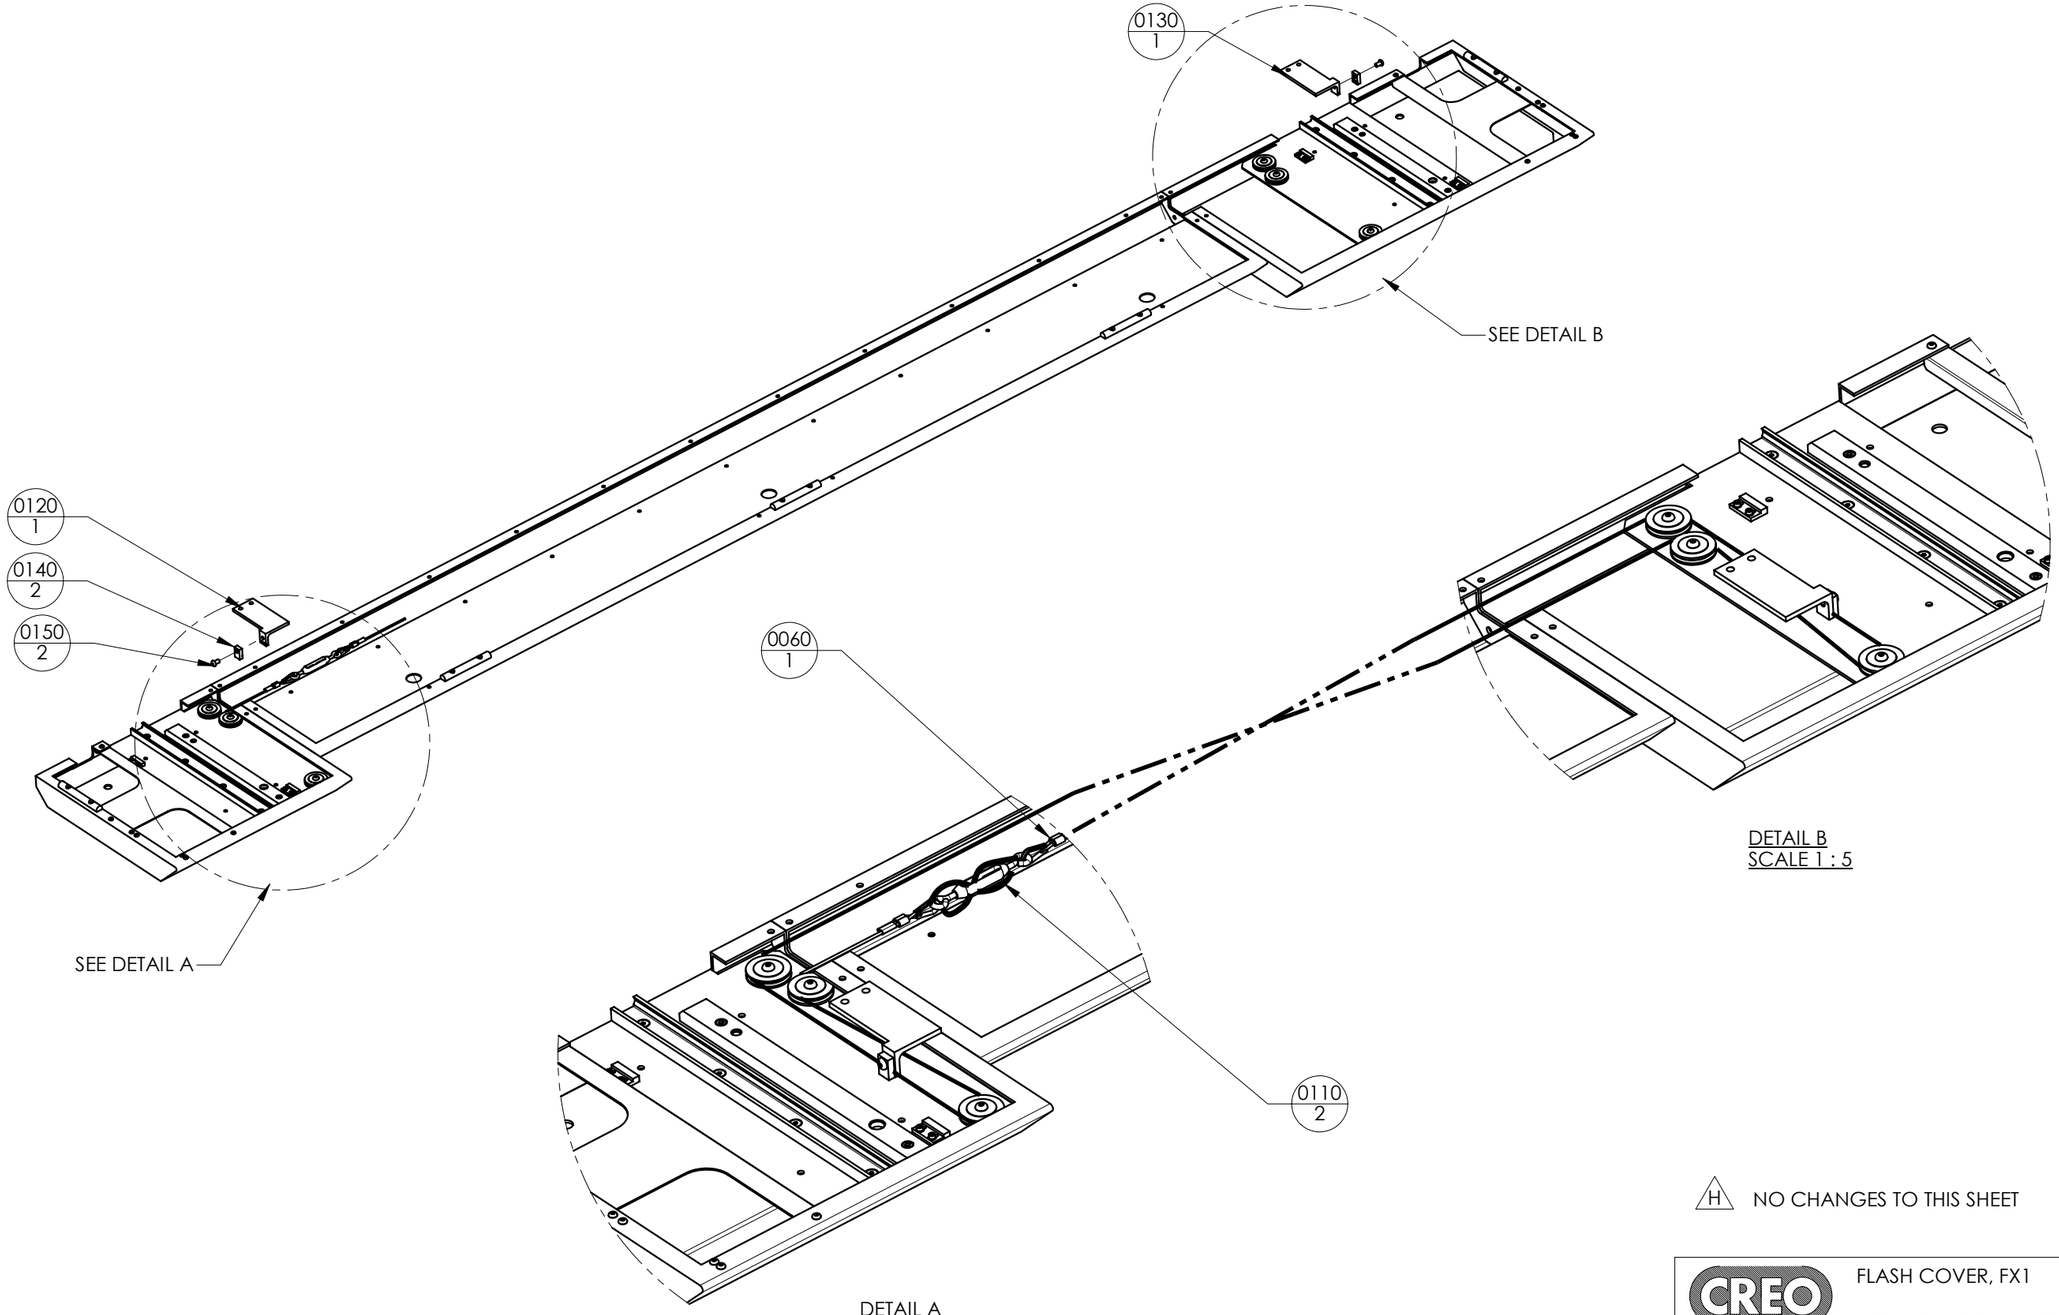

DETAIL A
SCALE 1 : 5

DETAIL B
SCALE 1 : 5

H NO CHANGES TO THIS SHEET

REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY
H	E713	2002:MAY:24	I.PRESS	P.LAGODZKI
G	E488	2001:DEC:04	I.PRESS	D.HUBER

CREO

FLASH COVER, FX1

ASSEMBLY DRAWING

© COPYRIGHT CREO PRODUCTS INC.

DESIGNED BY	DRAWN BY			
W.YUEN	I.PRESS			
MILLIMETERS UNLESS SPECIFIED	DATE 1998:OCT:16	SIZE B	SCALE 1:10	
PART NO.	REV	DOC	SHEET	OF
50-1626A	— H	AD	2	2