
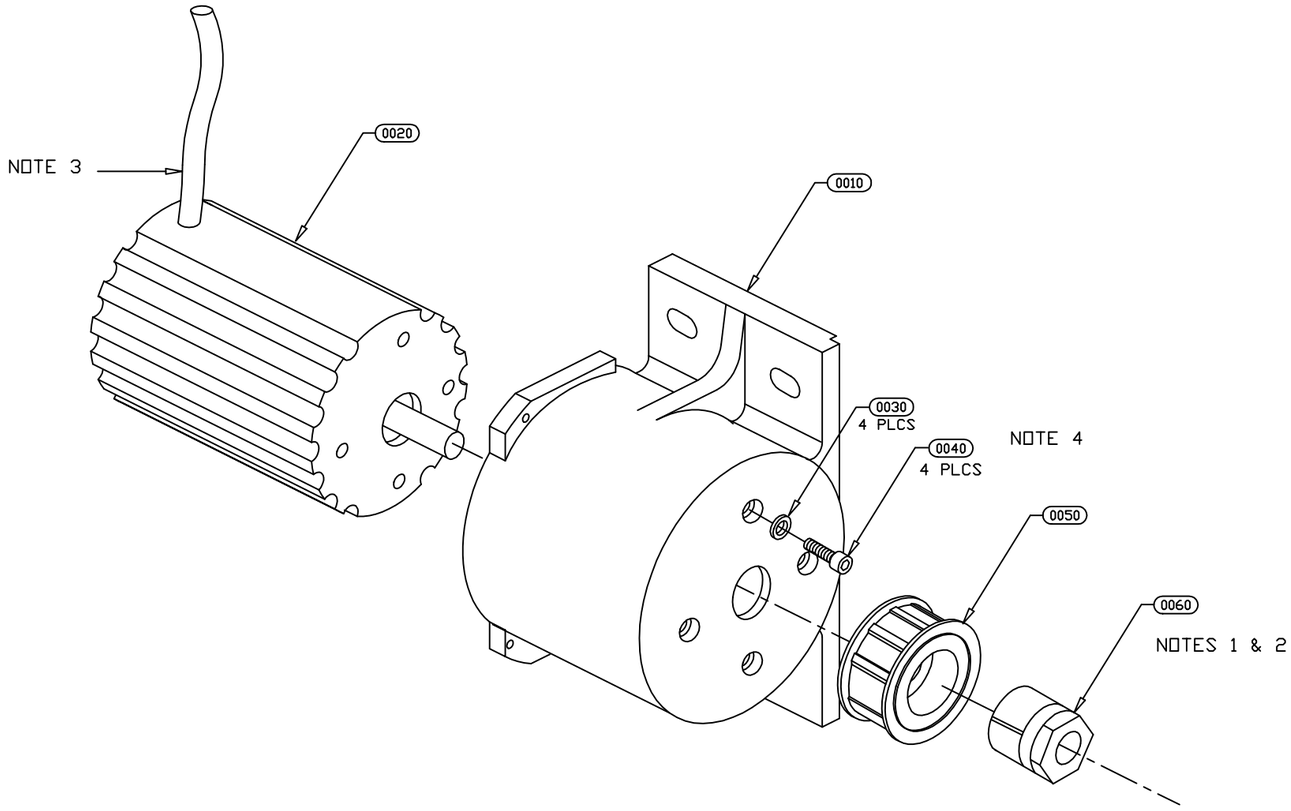


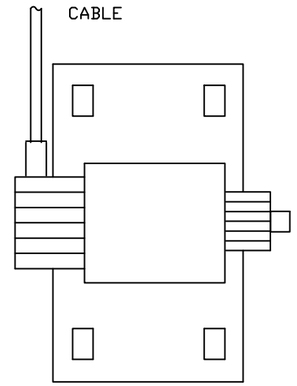

FRONT VIEW
NTS

NOTES:

1. PUSH INTO PULLEY UNTIL IT BOTTOMS OUT, IF NEED BE ROTATE THE BUSHING LOCKNUT (0060). TORQUE TO 19.8 N.M.
2. CHECK PACKAGE FOR ADDITIONAL DETAILED INSTRUCTIONS.
3. CABLE MUST BE FACING UP AND REARWARD
4. NOTE FOR APPLYING LOCTITE ON THE SCREWS REMOVED


A	D293	2000: FEB: 21	S CHEUNG	S CHEUNG
REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY

CREO

TS8 MECHANICAL UNIT
MAIN MOTOR
ASSEMBLY DRAWING

© COPYRIGHT CREO PRODUCTS INC.

DESIGNED BY	DRAWN BY			
S CHEUNG	S CHEUNG			
MILLIMETERS UNLESS SPECIFIED	DATE 2000: FEB: 21	SIZE B	SCALE 1: 1	
PART NO.	REV	DOC	SHEET	OF
50–1978A–A	AD	1	2	

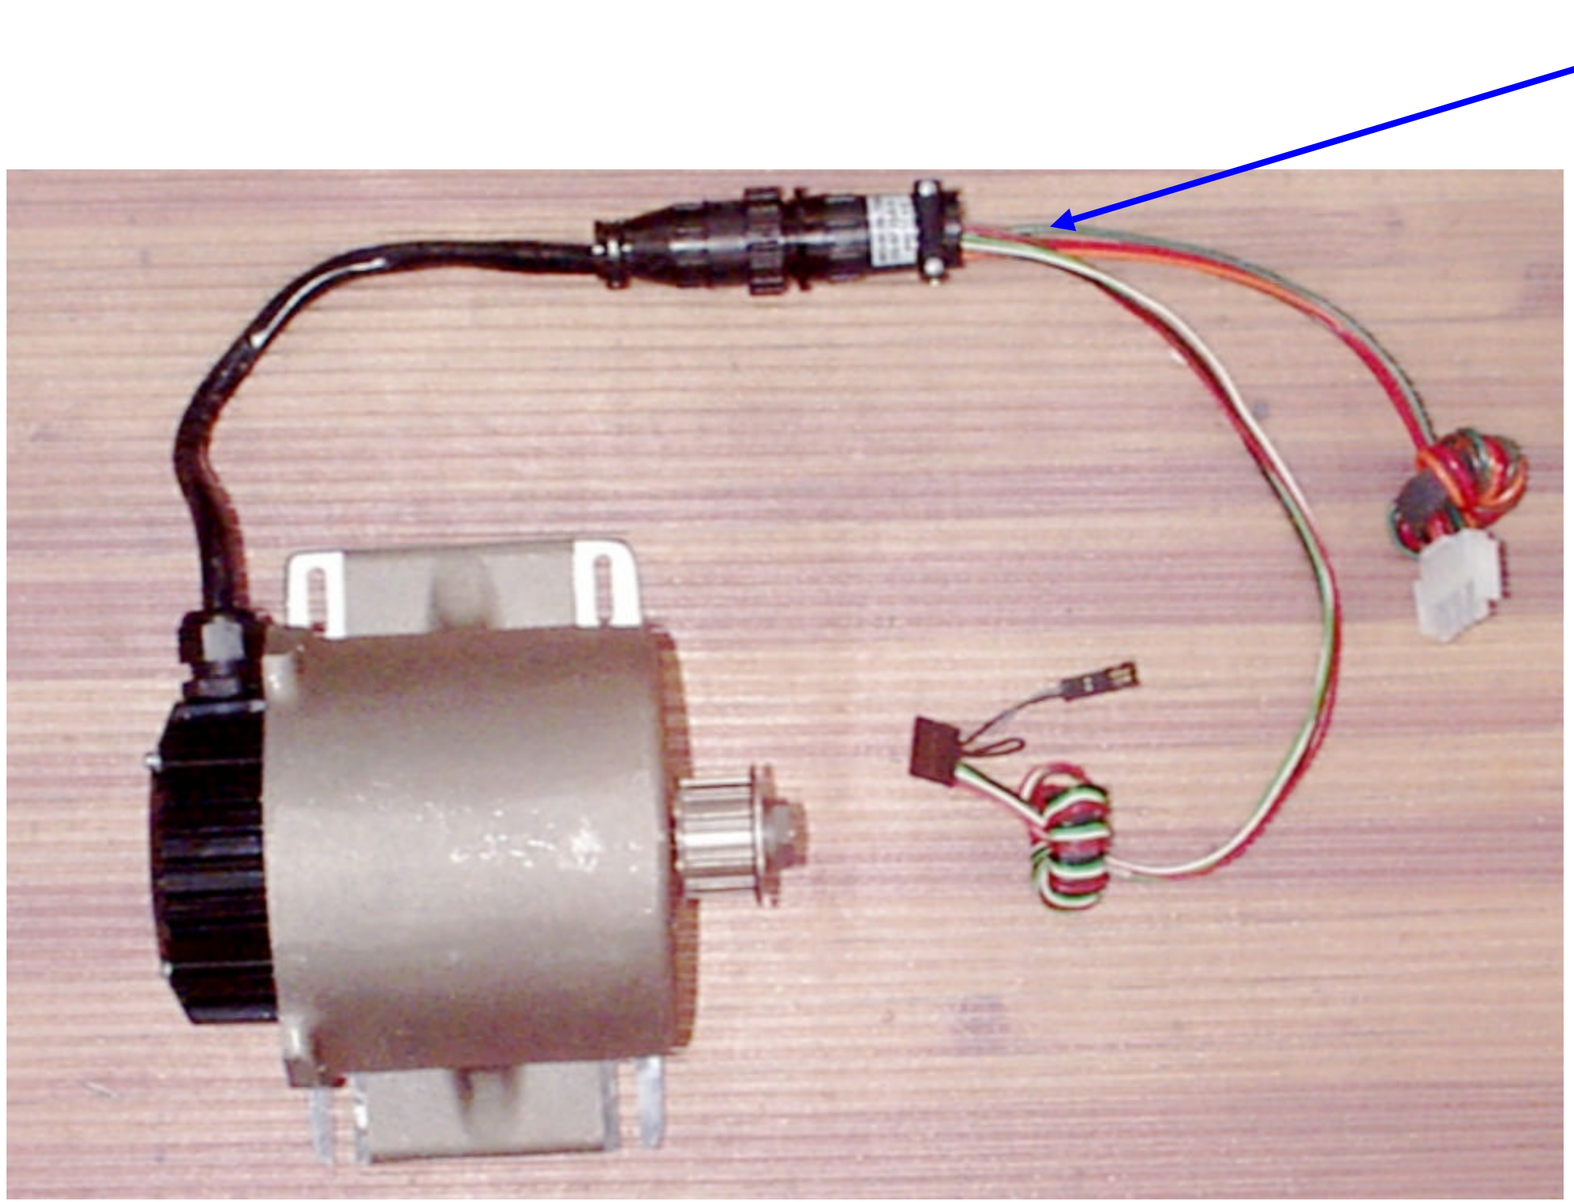

A	D293	2000:FEB:21	SIMON CHEUNG	SIMON CHEUNG
REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY

TS8 MECHANICAL INIT
MAIN MOTOR
ASSEMBLY DRAWING

© COPYRIGHT CREO PRODUCTS INC.

DESIGNED BY	DRAWN BY			
SIMON CHEUNG	SIMON CHEUNG			
MILLIMETERS UNLESS SPECIFIED	DATE 2000:FEB:21	SIZE B	SCALE NTS	
PART NO.	REV	DOC	SHEET	OF
50 - 1978A	- A	AD	2	2