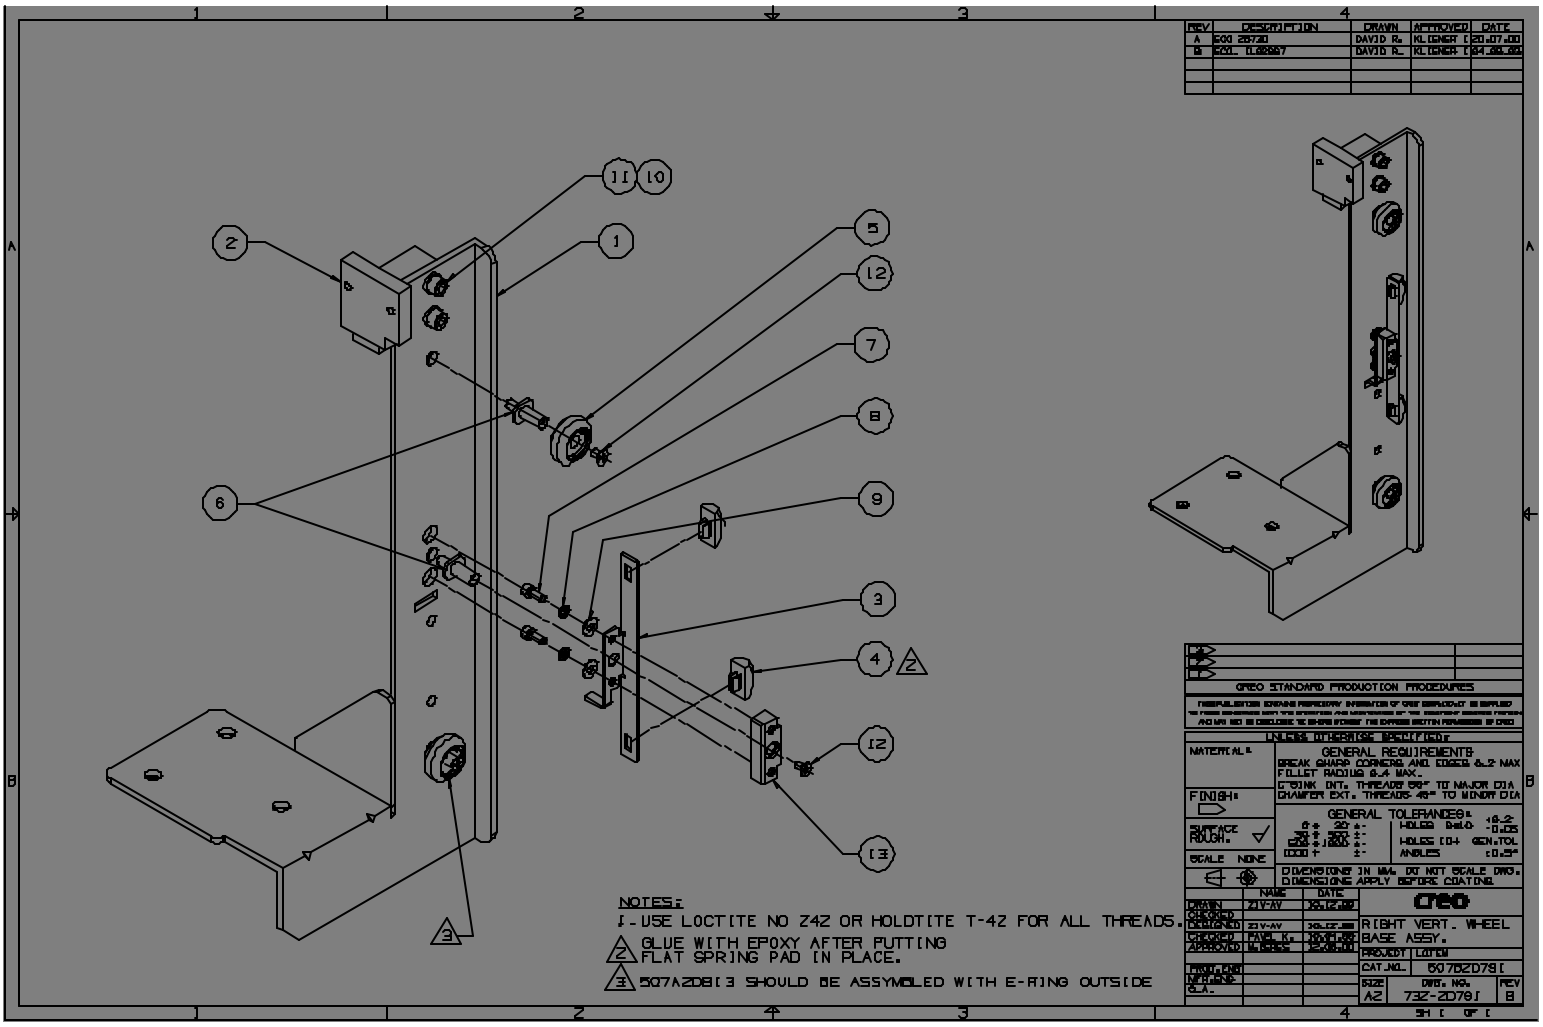

NOTES:
1. USE LOCTITE NO 242 OR HOLDTITE T-42 FOR ALL THREADS.
2 GLUE WITH EPOXY AFTER PUTTING FLAT SPRING PAD IN PLACE.
3 507A2D813 SHOULD BE ASSYMBLED WITH E-RING OUTSIDE
creo
RIGHT VERT. WHEEL BASE ASSY.
507D2D791
A2
732-2D791
B