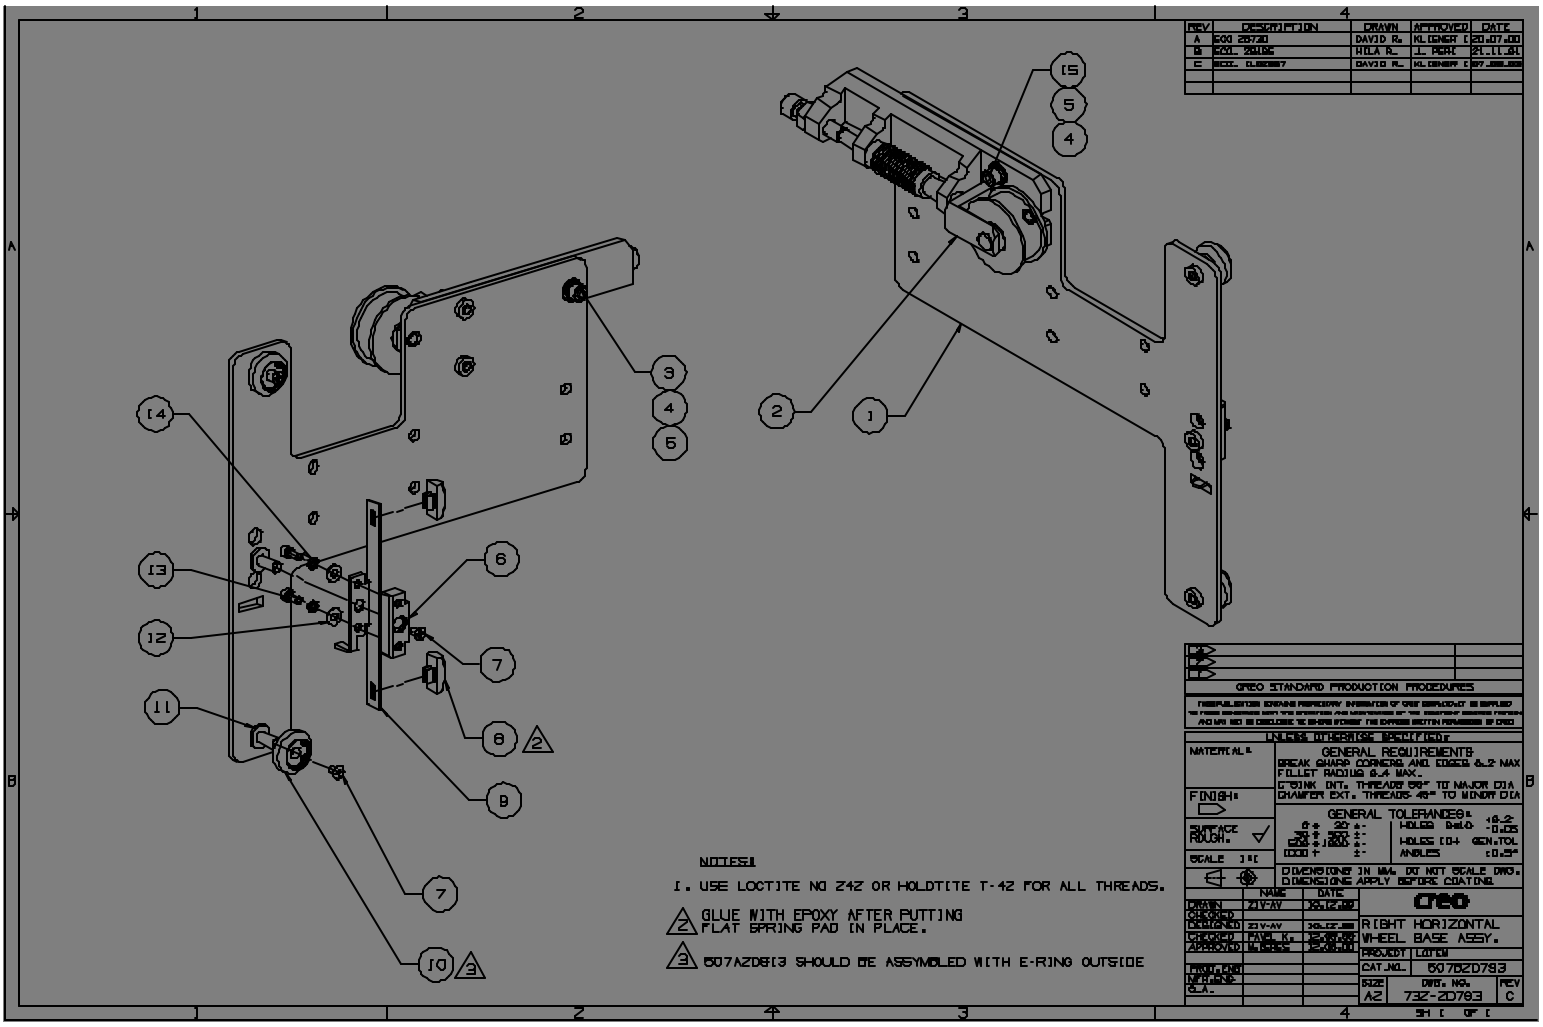

NOTES:
1. USE LOCTITE NO 242 OR HOLDTITE T-42 FOR ALL THREADS.
2 GLUE WITH EPOXY AFTER PUTTING FLAT SPRING PAD IN PLACE.
3 507AZD813 SHOULD BE ASSYMBLED WITH E-RING OUTSIDE
creo
RIGHT HORIZONTAL WHEEL BASE ASSY.
507DZD793
732-2D793
A2
C