
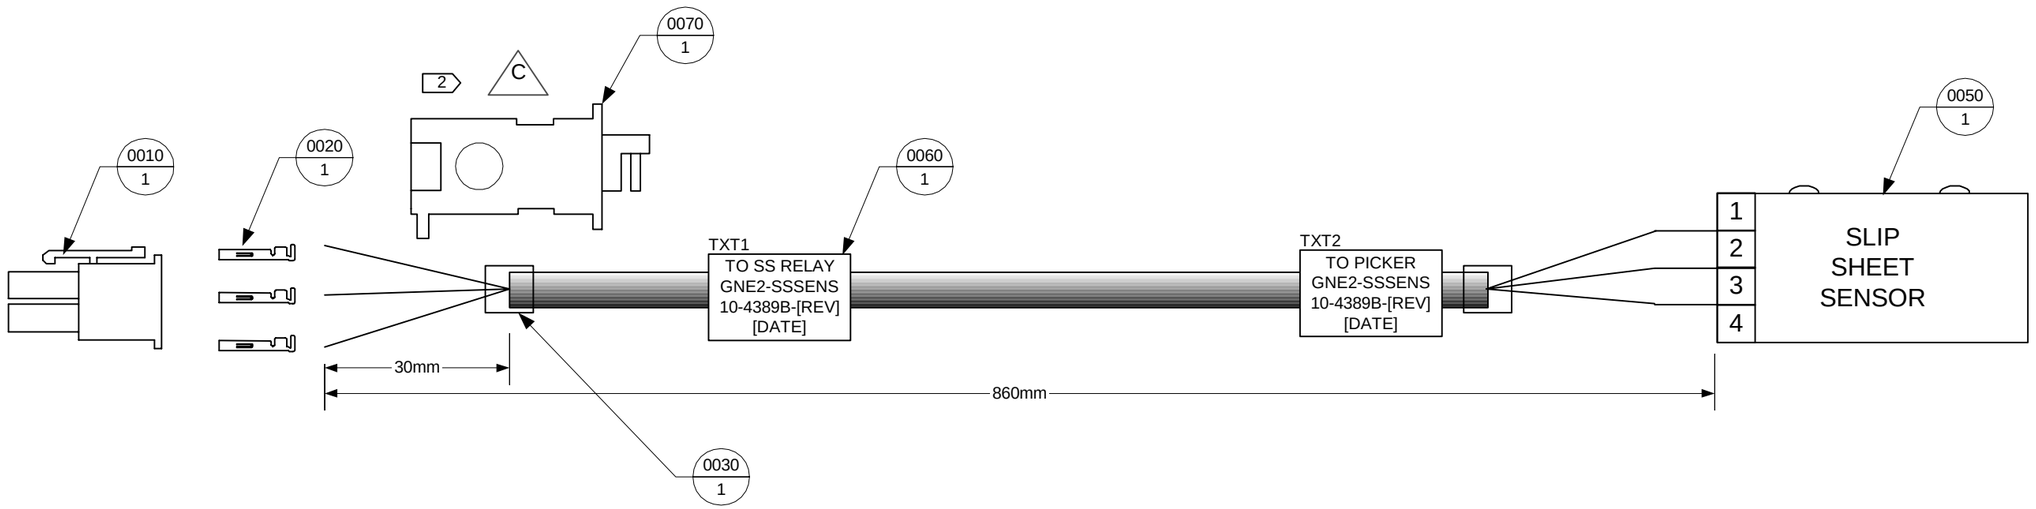


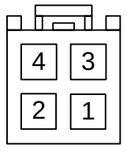

1	BROWN	BROWN 1
2	WHITE	WHITE 2
3	BLUE	BLUE 3
		4

SLIP
SHEET
SENSOR

NOTES:

1. 0010/1 — ITEM # / QUANTITY #
2. Attach strain relief to connector and cable after inserting crimp contacts into connector shell.

C STRAIN RELIEF ADDED

REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY
C	CA01212	2003:MAY:14	DWAYNE BRANDT	DWAYNE BRANDT
B	E324	2001:AUG:27	P YUEN	P.YUEN
A	E008	2001:MAR:20	A.SZALONTAI	P.YUEN

creo™

© COPYRIGHT CREO

CAB,ASSY,SLIP
SHEET SENSOR,VAL

DESIGNED BY	DRAWN BY		
W.COETZEE	A.SZALONTAI		
MILLIMETERS UNLESS SPECIFIED	DATE	SIZE	SCALE
	2001:MAR:22	B	NTS

PART NO.	REV	DOC	SHEET	OF
10-4389B	C	AD	1	1