


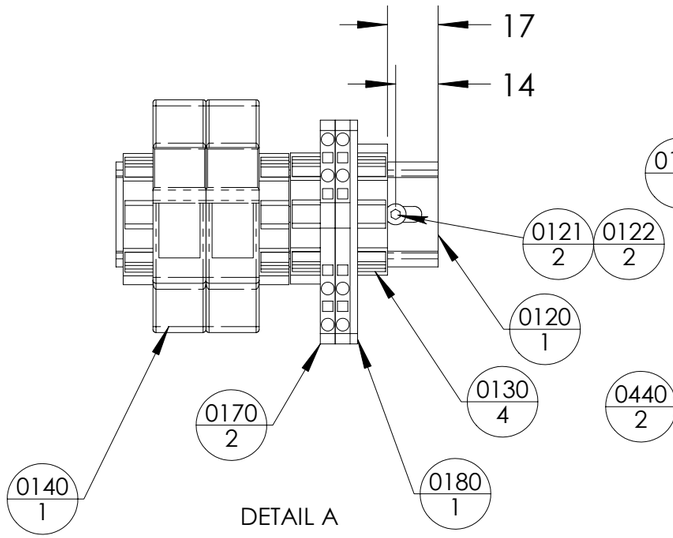


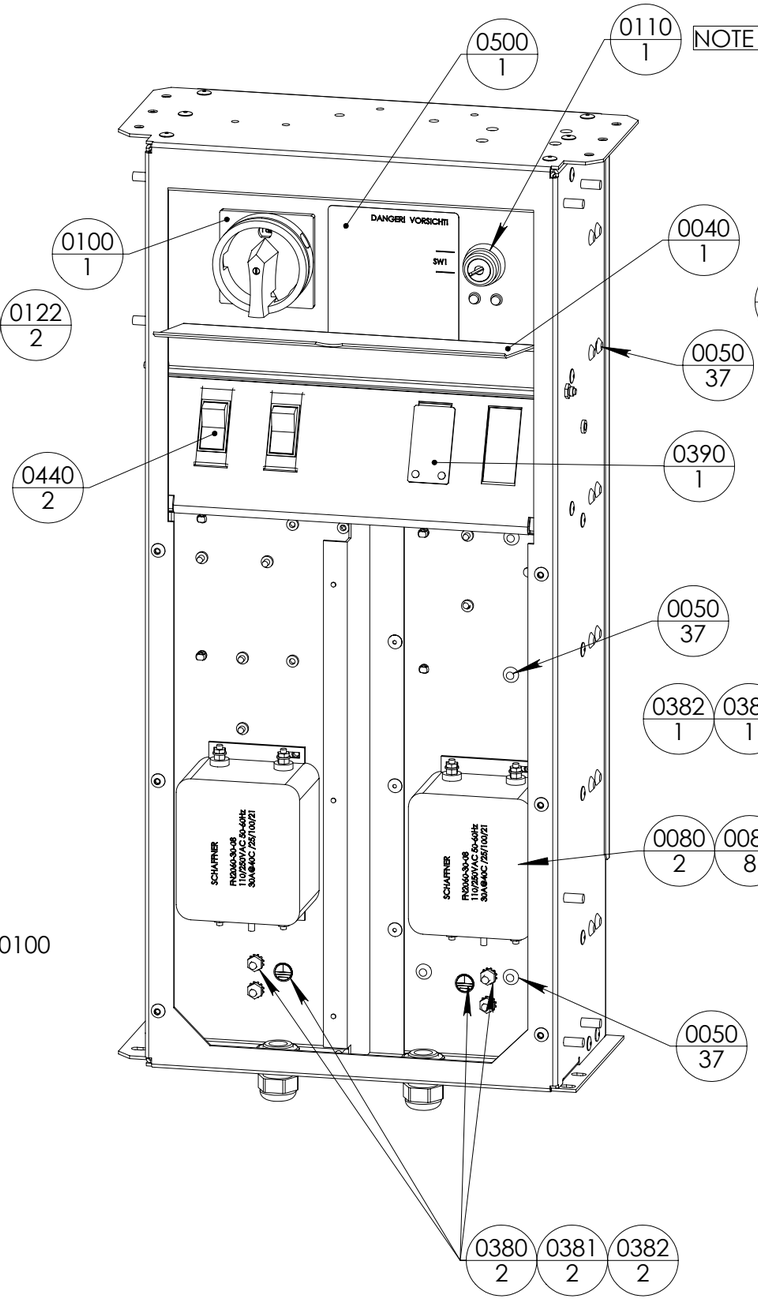

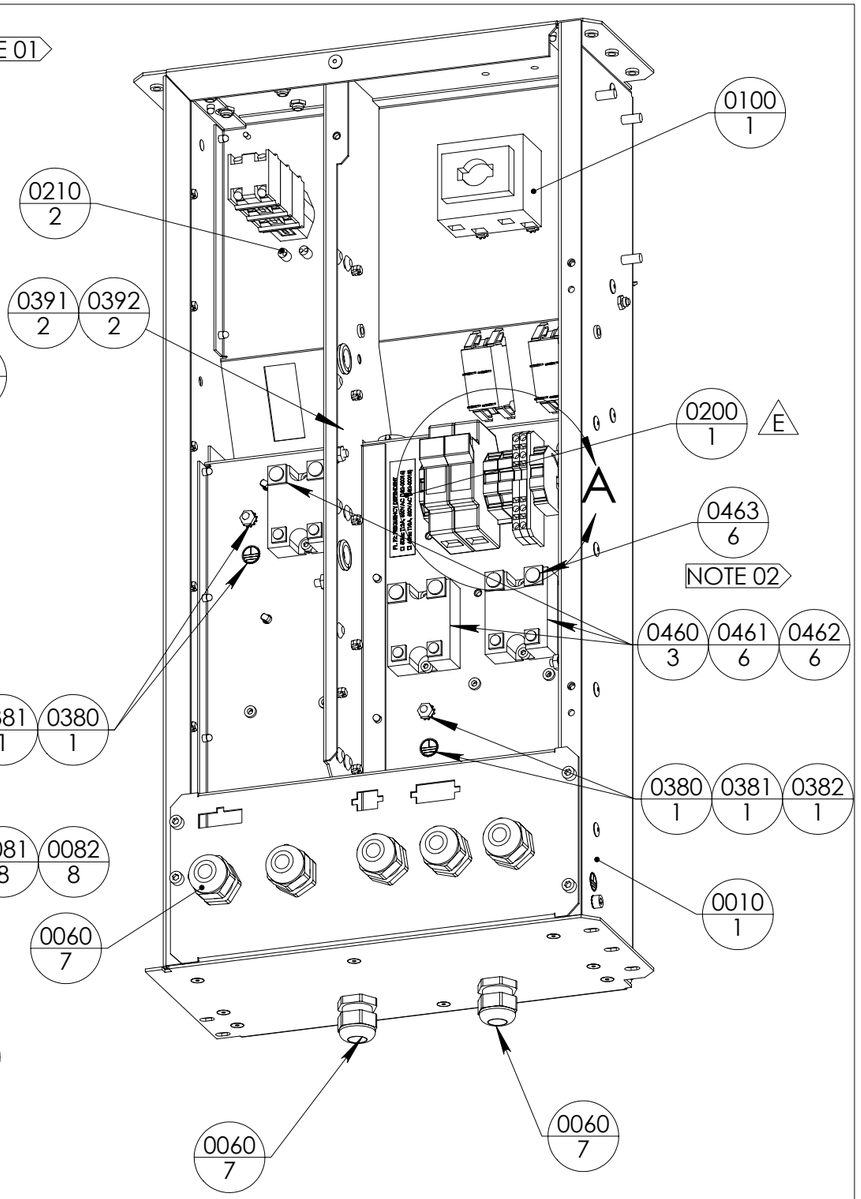

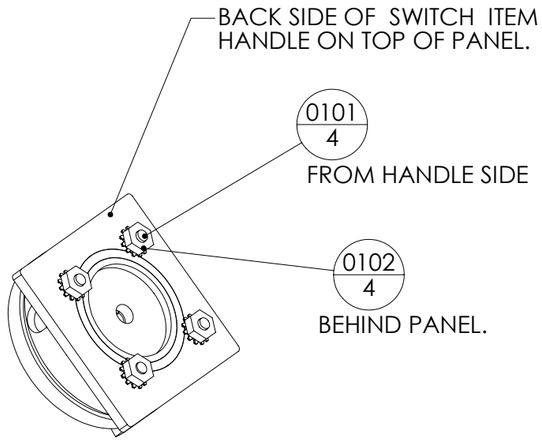

SWITCH HANDLE INSTALLATION:
FOLLOW PICTURE, DISCARD (4) TAPPING SCREWS PROVIDED BY SWITCH MANUFACTURER.

NOTES:
1. SCRAP KEYS IN THE BOX WITH THE LOCK (THE KEYS ARE PART 15-3241 AND CAN BE RESTOCKED IF THERE ARE LESS THAN 300 PARTS IN STOCK).
2. REPLACE EXISTING SQUARE WASHERS WITH ITEM 0463 ON UPPER SIDE OF RELAY.

creo


ASSY, POWER ENTRY BOX


© Creo Inc.


DESIGNED BY	DRAWN BY
2003-Sep-17 K.LAM	2003-Sep-17 K.LAM


MILLIMETERS UNLESS SPECIFIED	CHANGED	SIZE	SCALE	SHEET
	2005-Jan-04 R.DYCK	B	1:1	1

CATEGORY	PART NUMBER	VER	REV	DOC TYPE	OF
11 -	1064A -		E	DD	2

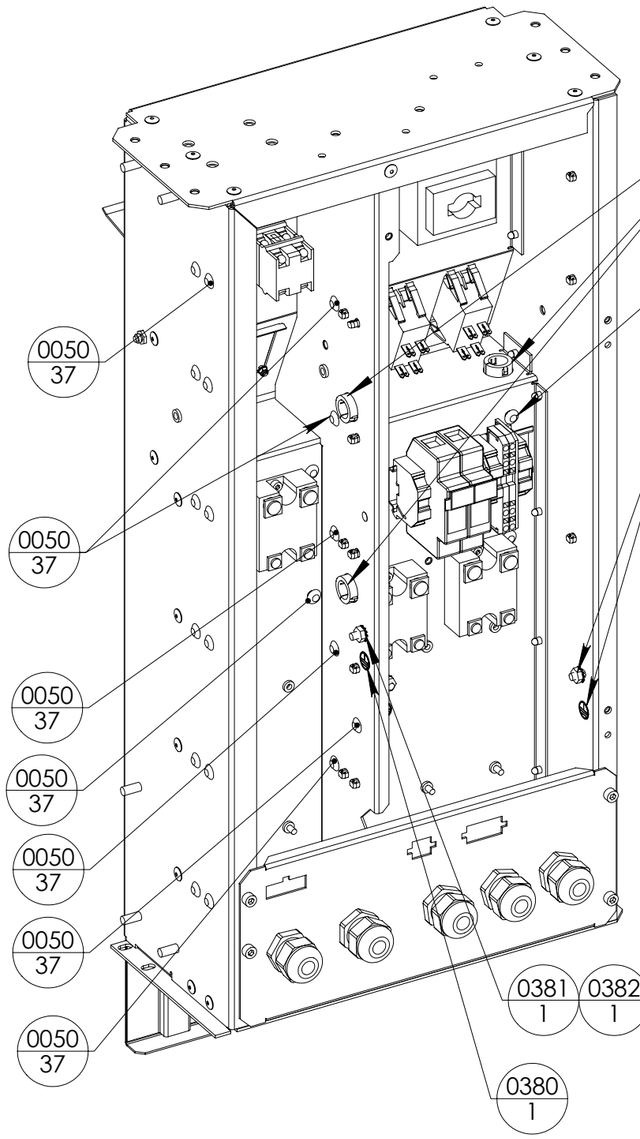

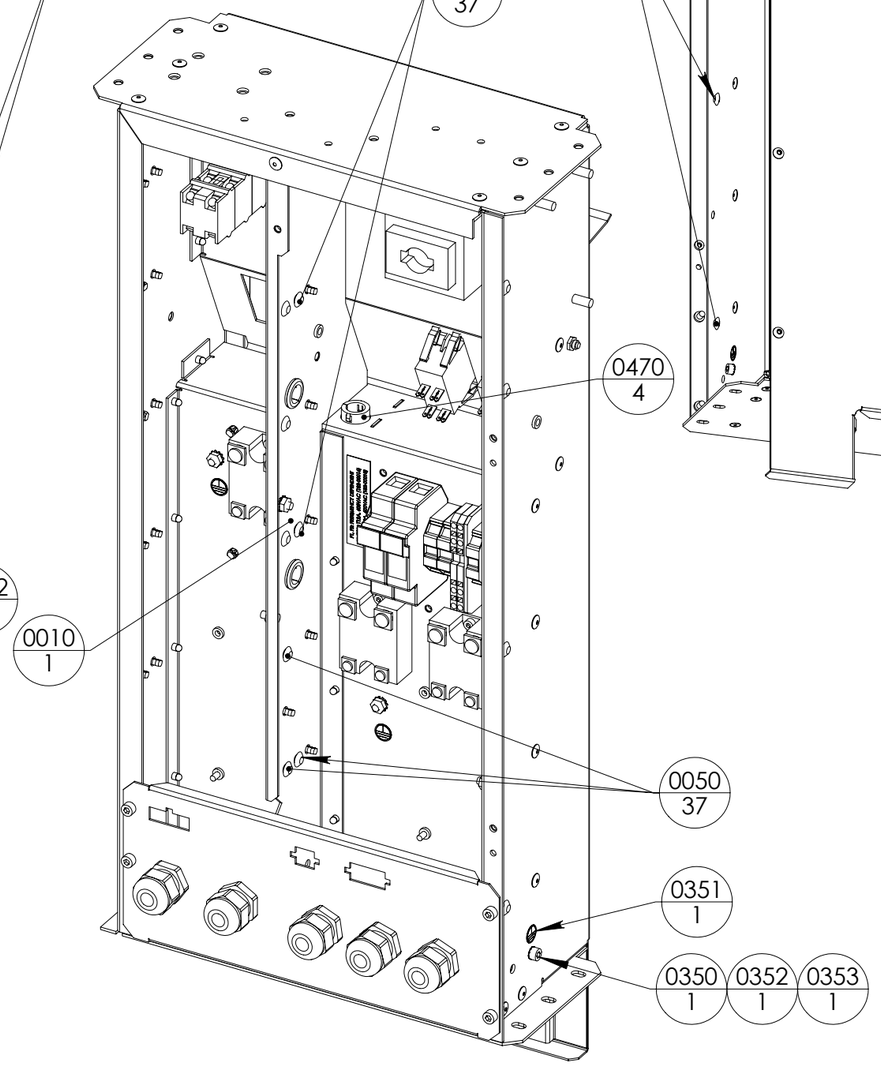

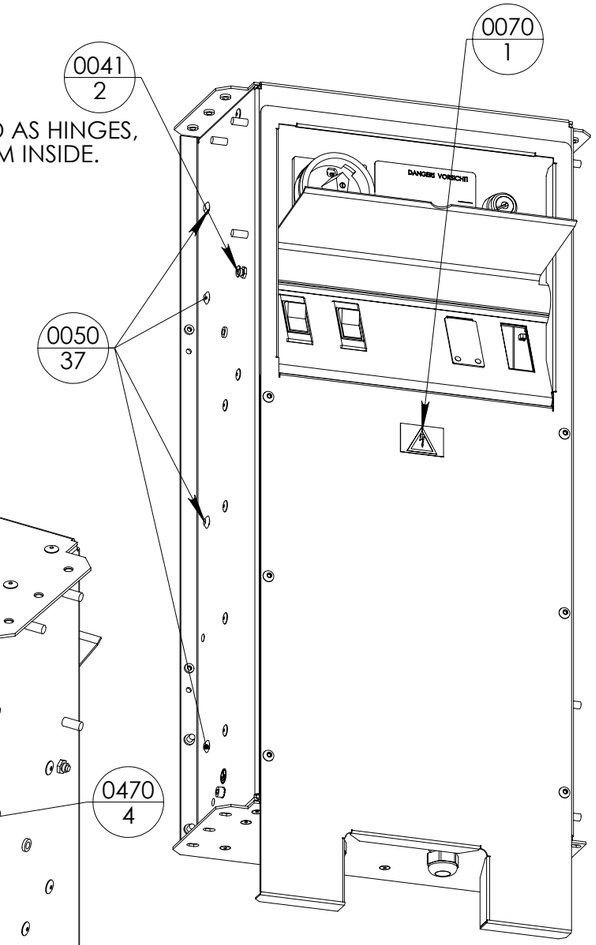

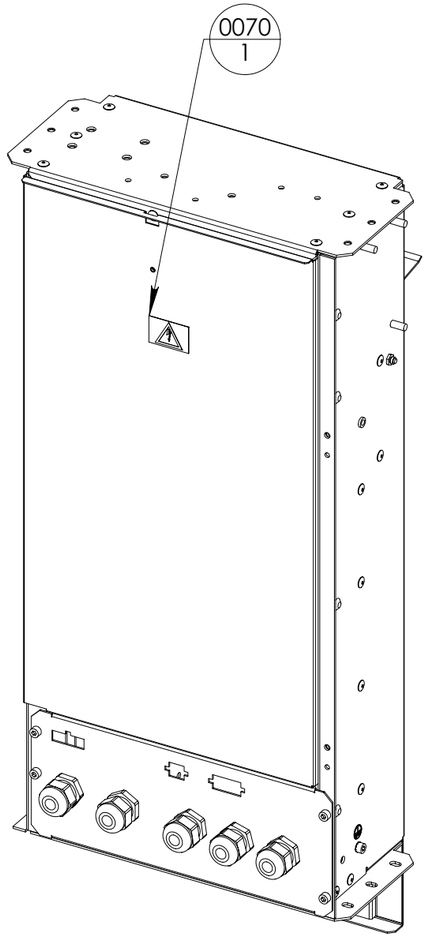

creo

ASSY, POWER ENTRY BOX

© Creo Inc.

DESIGNED BY	DRAWN BY
2003-Sep-17 K.LAM	2003-Sep-17 K.LAM

MILLIMETERS UNLESS SPECIFIED	CHANGED	SIZE	SCALE	SHEET
	2005-Jan-04 R.DYCK	B	1:1	2

CATEGORY	PART NUMBER	VER	REV	DOC TYPE	OF
11 -	1064A -	E		DD	2