

CONFIDENTIAL: PROPERTY OF CREO INC..

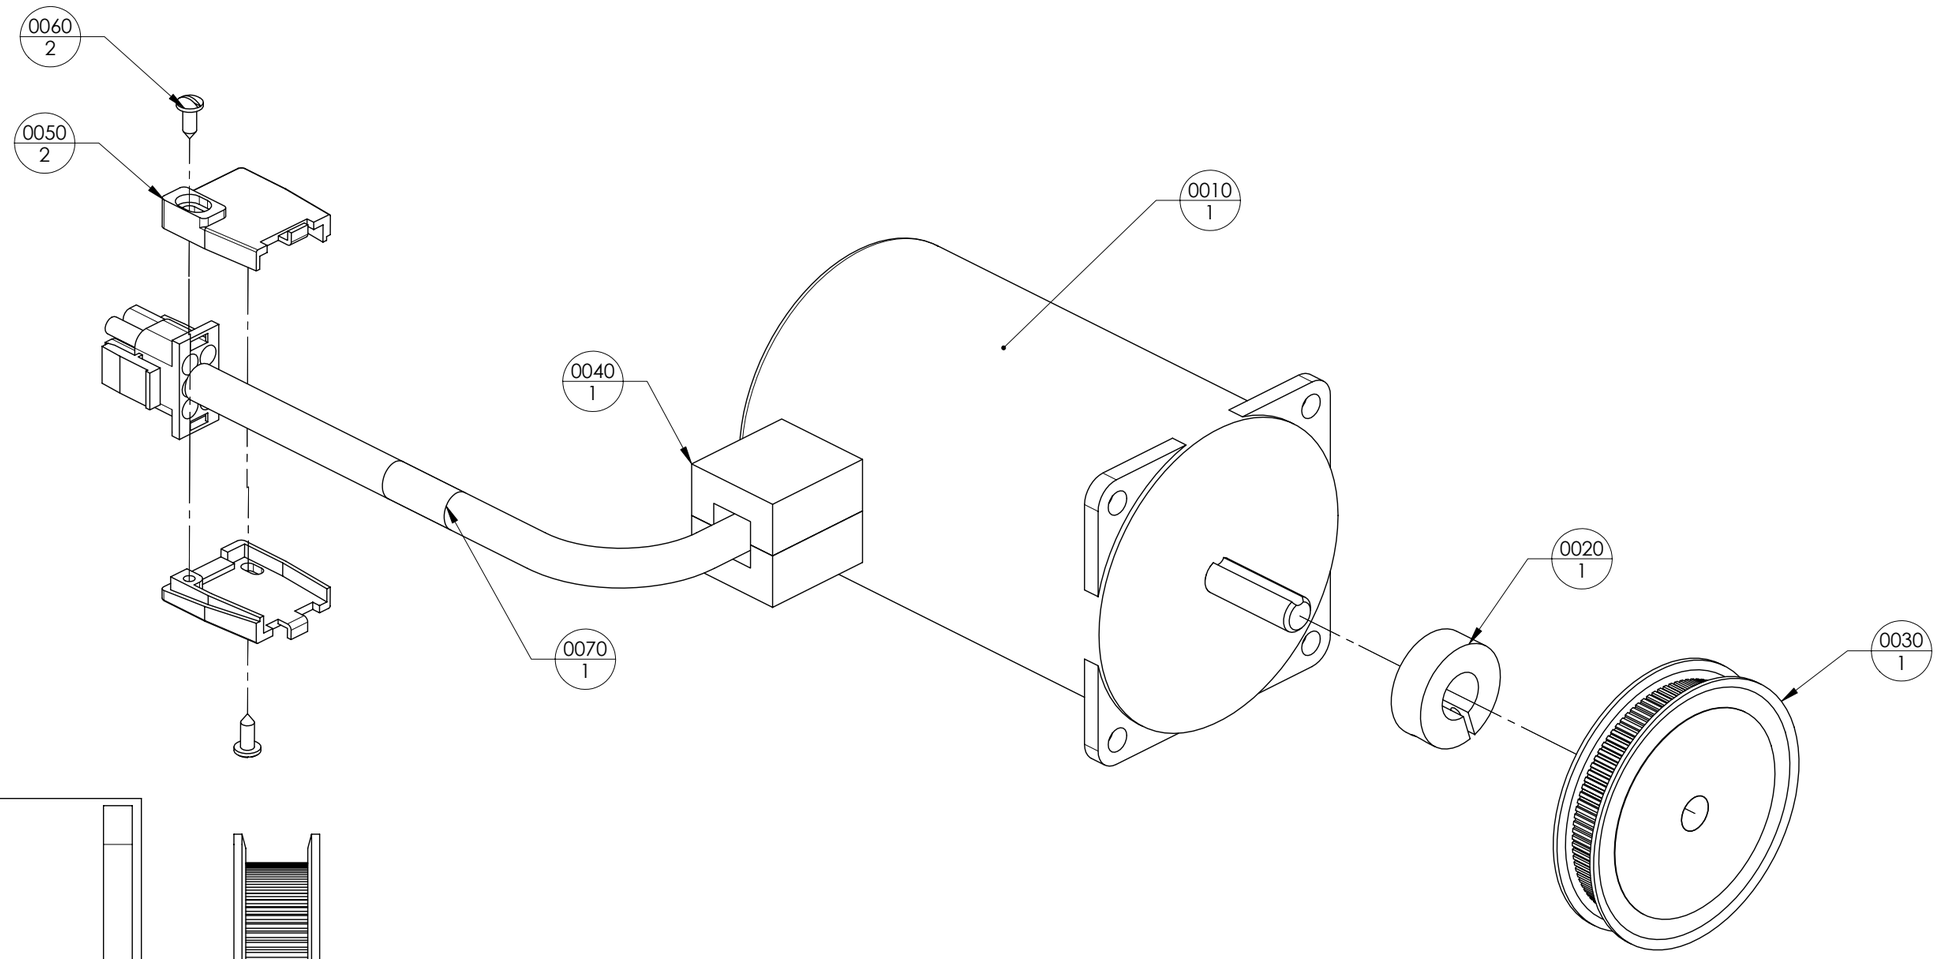

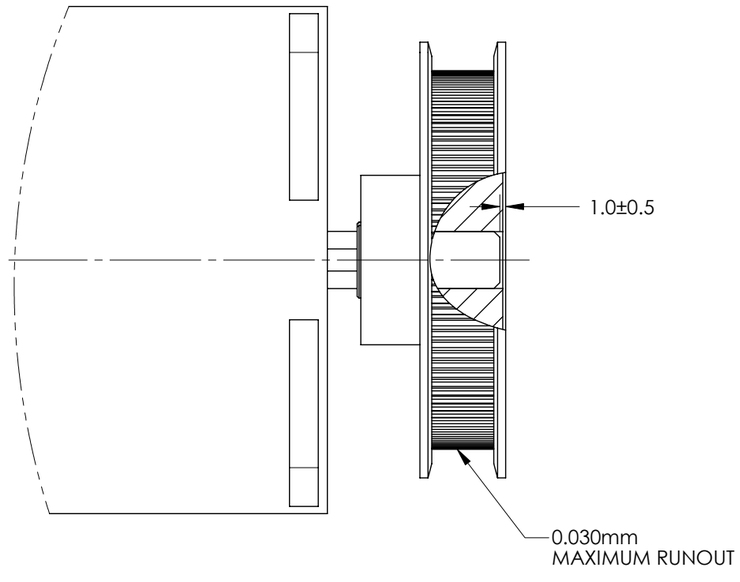

NONES:
1). CLEAN MOTOR SHAFT WITH ACETON.
2). APPLY LOCTITE PRIMER "N" TO MOTOR SHAFT.
3). USE LOCTITE 242 ON CLAMP SCREW.
4). USE LOCTITE 609 BETWEEN SHAFT AND PULLEY.
5). REMOVE ALL EXCESS LOCTITE 609 AFTER PULLEY INSTALLATION.

creo

© Creo Inc.

STEPPER MOTOR PULLEY
MTA

DESIGNED BY		DRAWN BY	
G.TANG	2004-Sep-16	I.PRESS	2003-Sep-17

MILLIMETERS UNLESS SPECIFIED	CHANGED		SIZE	SCALE	SHEET
	I.PRESS	2004-Sep-17	B	1:1.5	1

CATEGORY	PART NUMBER	VER	REV	DOC TYPE	OF
11 -	1108A -	A		AD	1