



CONFIDENTIAL: PROPERTY OF CREO INC..

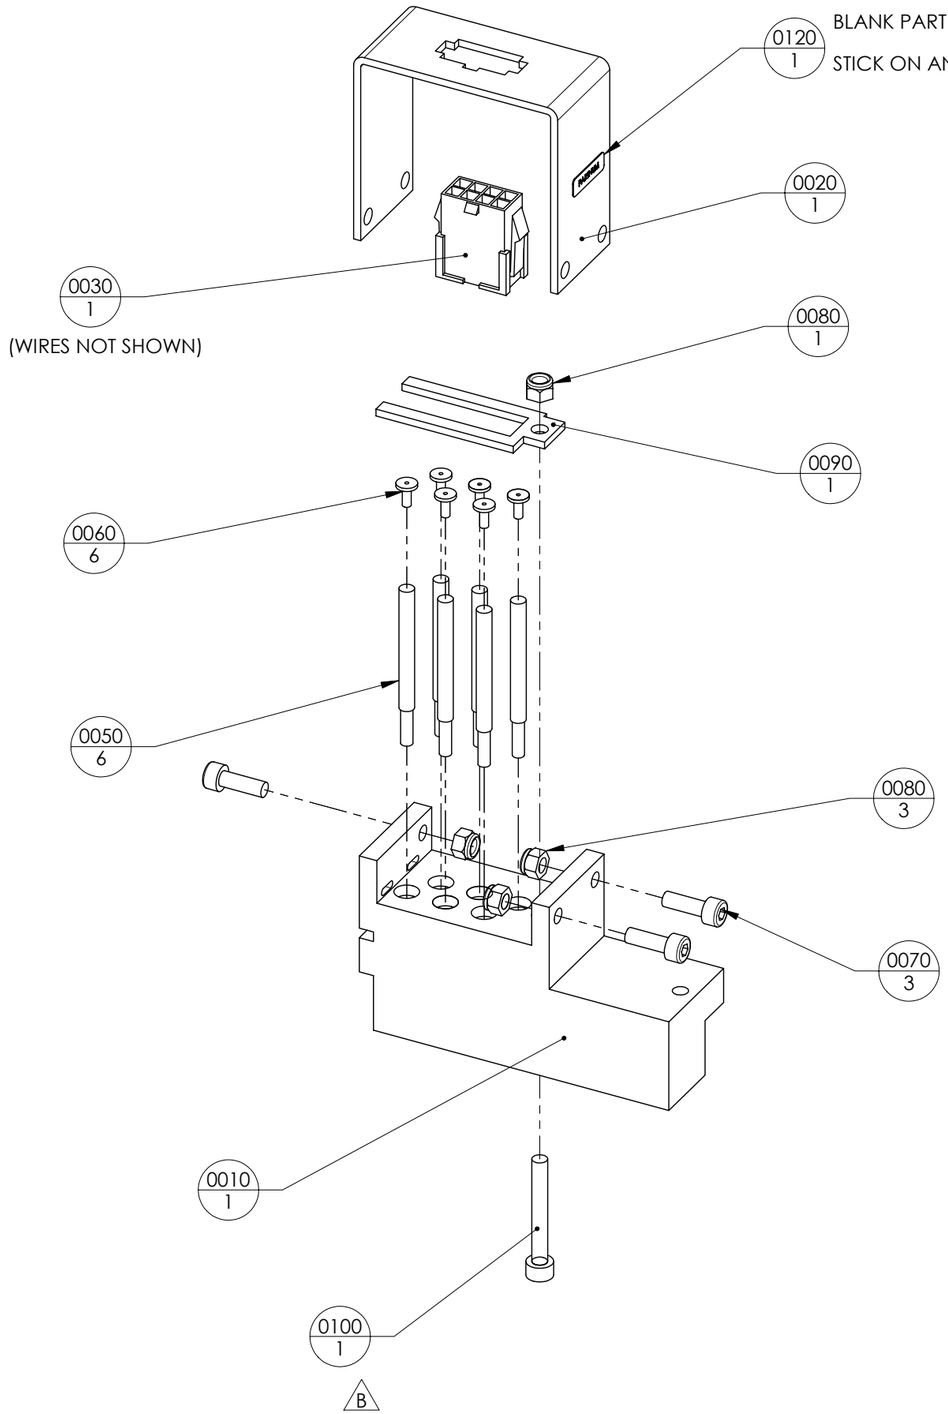

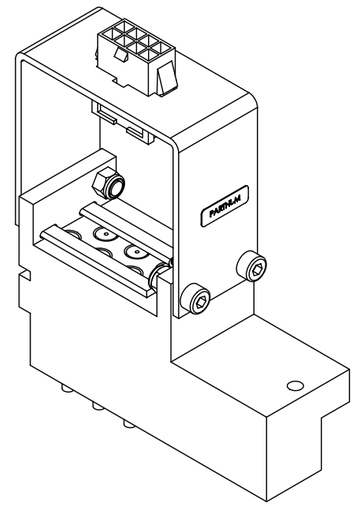

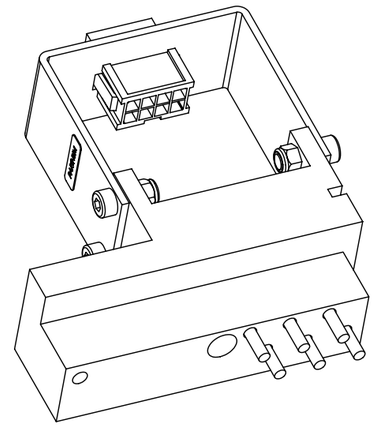

creo © Creo Inc.	ASSEMBLY REGISTRATION PROBE BACKBONE,MANTA				
DESIGNED BY JON DAHLGREN	2003-Mar-04	DRAWN BY JON DAHLGREN	2003-May-05		
MILLIMETERS UNLESS SPECIFIED	CHANGED I.PRESS	2005-Apr-12	SIZE B	SCALE 1:1.5	SHEET 1
CATEGORY 11 -	PART NUMBER 1122C -	VER B	REV	DOC TYPE AD	OF 2

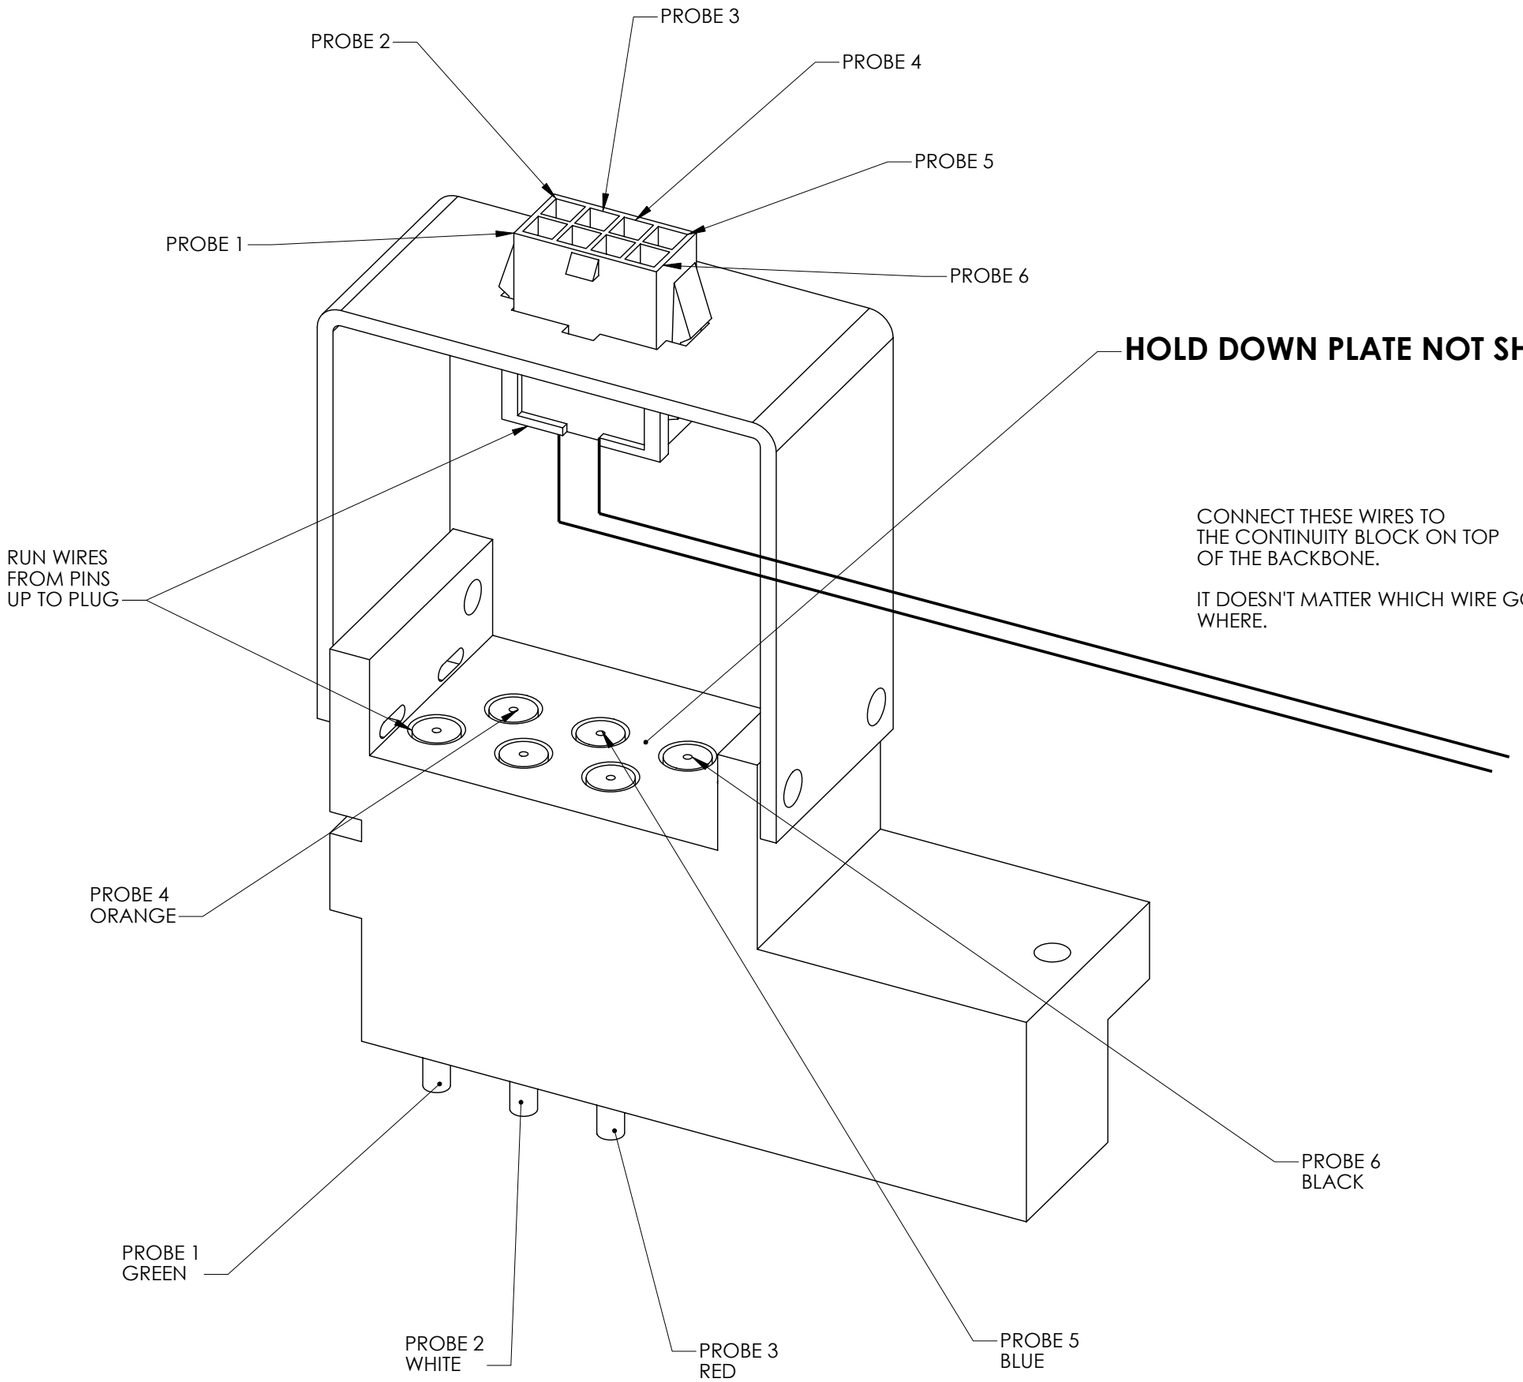

CONNECT THESE WIRES TO
THE CONTINUITY BLOCK ON TOP
OF THE BACKBONE.

IT DOESN'T MATTER WHICH WIRE GOES
WHERE.



TO INSTALL WIRE INTO SPRING PROBES
FOLLOW THE ABOVE SKETCH.

STRIP OFF A BIT OF WIRE AND FEED IT DOWN THRU
THE PLASTIC PLUG.

THEN BEND THE WIRE AROUND AS SHOWN AND
PRESS IT DOWN ALL AS FAR AS POSSIBLE INTO
THE SPRING PROBE.

creo
© Creo Inc.

ASSEMBLY
REGISTRATION PROBE
BACKBONE,MANTA

DESIGNED BY	DRAWN BY			
JON DAHLGREN 2003-Mar-04	JON DAHLGREN 2003-May-05			
MILLIMETERS UNLESS SPECIFIED	CHANGED 2005-Apr-12 I.PRESS	SIZE B	SCALE 1:1	SHEET 2
CATEGORY	PART NUMBER VER REV	DOC TYPE	OF	
11 -	1122C - B	AD	2	