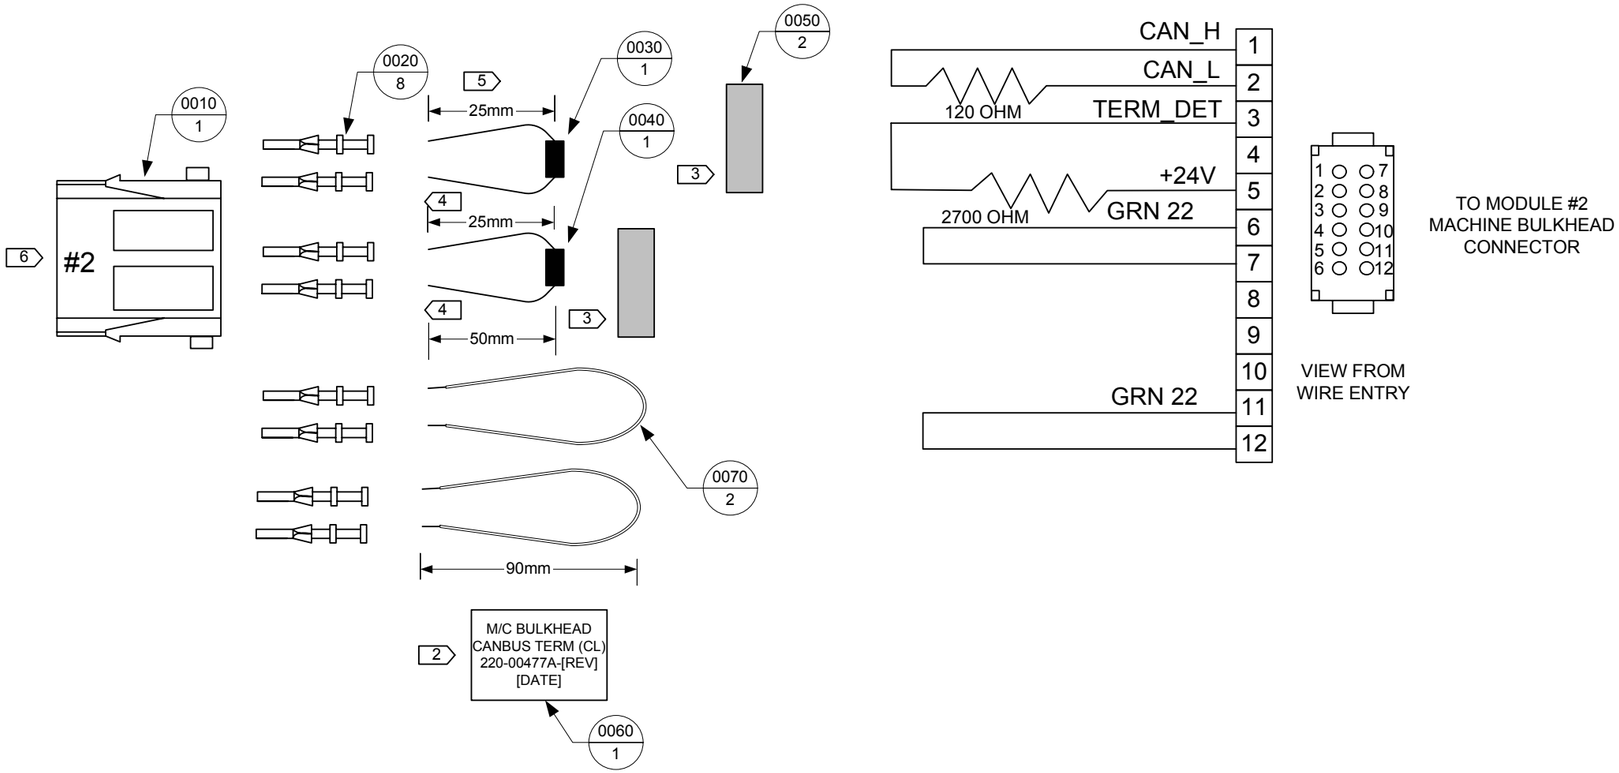


NOTES:

1. 0010 / 1 — ITEM # / QUANTITY #
2. PLACE LABEL ON TO THE WIRE
3. AFTER RESISTOR HAS BEEN CRIMPED TO PINS BUT BEFORE INSERTING INTO CONNECTOR, PUT HEAT-SHRINK TUBE ON RESISTOR BODY AND LEADS
4. TRIM RESISTOR LEADS TO 16mm.
5. ALL DIMENSIONS REPRESENT CABLE LENGTH NOT DISTANCE. CABLE LENGTH TOLERANCE IS +10/-0 mm
6. MARK THE CONNECTOR WITH BLACK PERMANENT INK PEN

REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY

creo

© COPYRIGHT CREO

CAB,ASSY,CL PLUG,MTA
ASSEMBLING DRAWING

DESIGNED BY	DRAWN BY			
S.FOUDIMOV	K.CHENG			
MILLIMETERS UNLESS SPECIFIED	DATE 2003:NOV:26	SIZE B	SCALE NTS	
PART NO.	REV	DOC	SHEET	OF
220 - 00477A -	A	AD	1	1