



FRONT VIEW

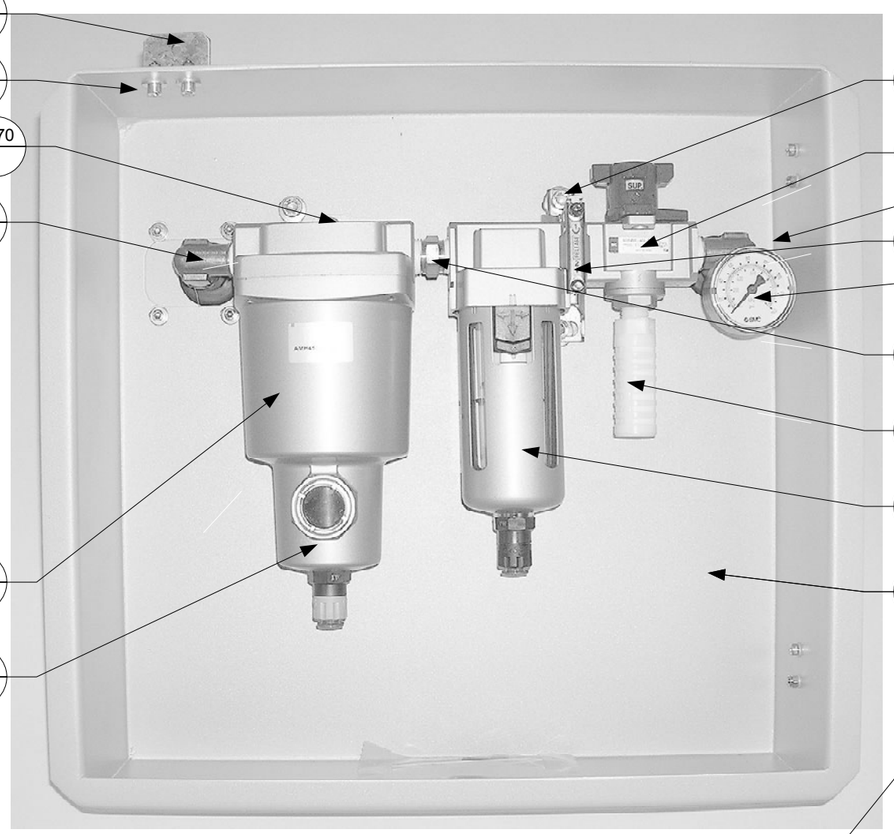

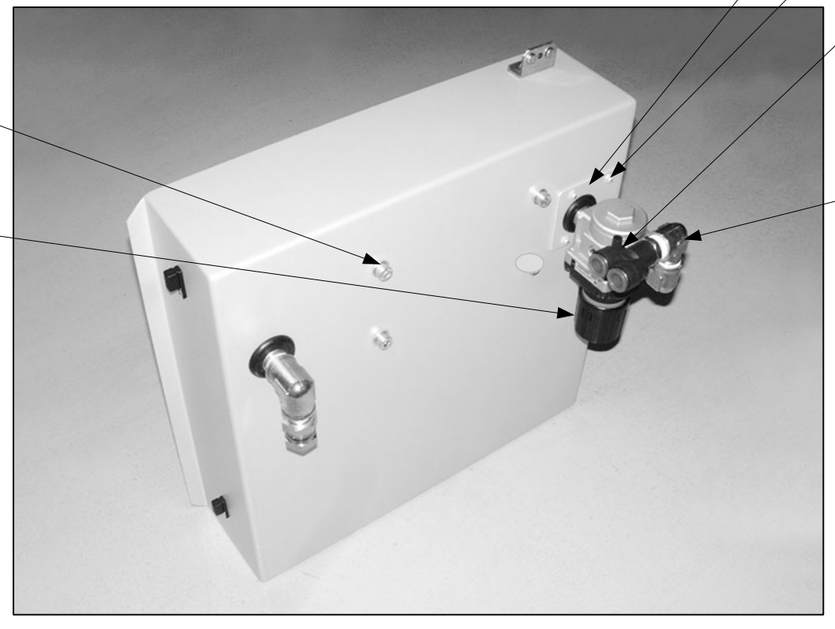

INSTALL THE FASTENERS FROM THE OTHER SIDE

NOTES:
1. APPLY A MINIMUM OF 5 WRAPS OF TEFLON TAPE TO ALL THREADED PIPE JOINTS.


© COPYRIGHT CREO INC.

creo

ASSY, FILTER/REGULATOR ENCLOSURE, TH2.X, MTA

DESIGNED BY	DRAWN BY			
D. MacKay	R. Baggett			
MILLIMETERS UNLESS SPECIFIED	DATE OCT13,2005	SIZE B	SCALE NTS	
PART NO.	REV	DOC	SHEET	OF
500 - 02469B	- A	AD	1	2

300	290	280	270	260
2	4	2	2	2

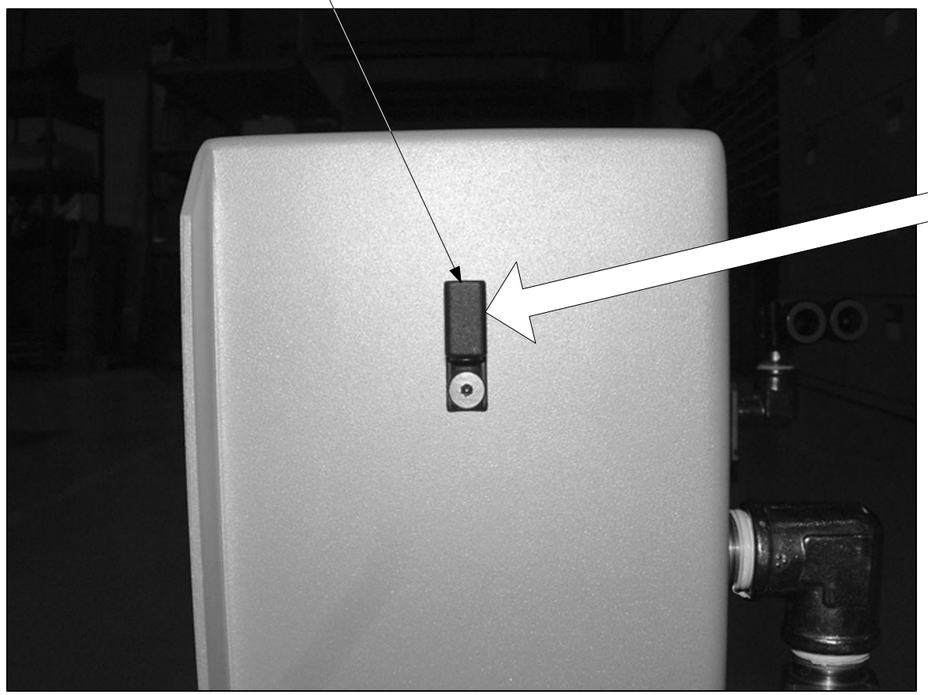

HINGE RECEPTACLE HALF MOUNTED
ON ENCLOSURE BOX.
TYPICAL TOP AND BOTTOM HINGES.



ATTACH HINGE PIN HALF WITH TIE-WRAPS, ELASTIC BANDS OR OTHER SUITABLE MEANS TO BOTH HINGE RECEPTACLES.
(NOT SHOWN IN THIS VIEW)

creo

© COPYRIGHT CREO

ASSY, FILTER/REGULATOR
ENCLOSURE, TH2.X, MTA

DESIGNED BY	DRAWN BY		
D. MacKay	R. Baggett		
MILLIMETERS UNLESS SPECIFIED	DATE Oct13,2005	SIZE B	SCALE NTS

PART NO.	REV	DOC	SHEET	OF
500 - 02469B	- A	AD	2	2