
CONFIDENTIAL: PROPERTY OF CREO INC.

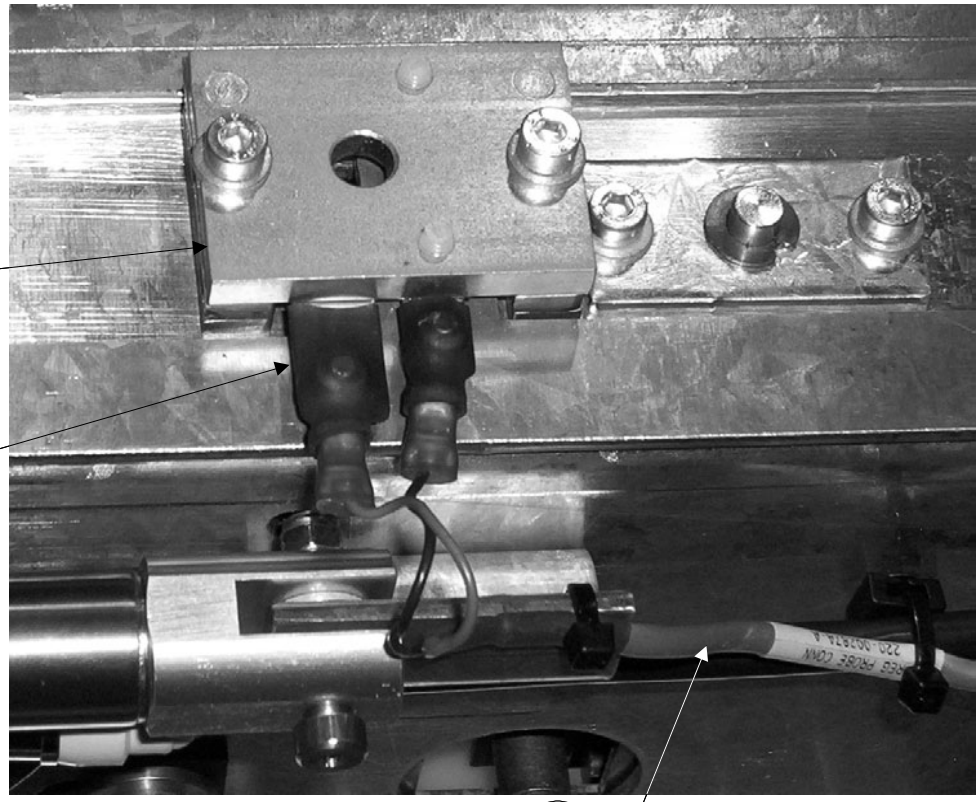

NOTES:
1. ASSEMBLY IS SHOWN INSTALLED ON BACKBONE FOR REFERENCE ONLY.
2. WIRES FROM 11-1122 ARE CONNECTED TO THE CONTACT SWITCH LEADS. IT DOES NOT MATTER WHICH WIRE GOES WHERE.
3. APPLY HEAT SHRINK TUBING AROUND THE CONNECTIONS TO PREVENT THEM FROM SHORTING OUT ON THE BACKBONE SHEET METAL. COVERING THE ENTIRE LEAD IS PREFERRED.

creo

REGISTRATION PROBE ASSY, BACKBONE, MTA

© Creo Inc.

DESIGNED BY	DRAWN BY
2005-Apr-07 R.DYCK	2005-Apr-07 R.DYCK

MILLIMETERS UNLESS SPECIFIED	CHANGED	SIZE	SCALE	SHEET
	2005-Apr-07 R.DYCK	A	NTS	1

CATEGORY	PART NUMBER	VER	REV	DOC TYPE	OF
500	-02855A	-	A	AD	1