
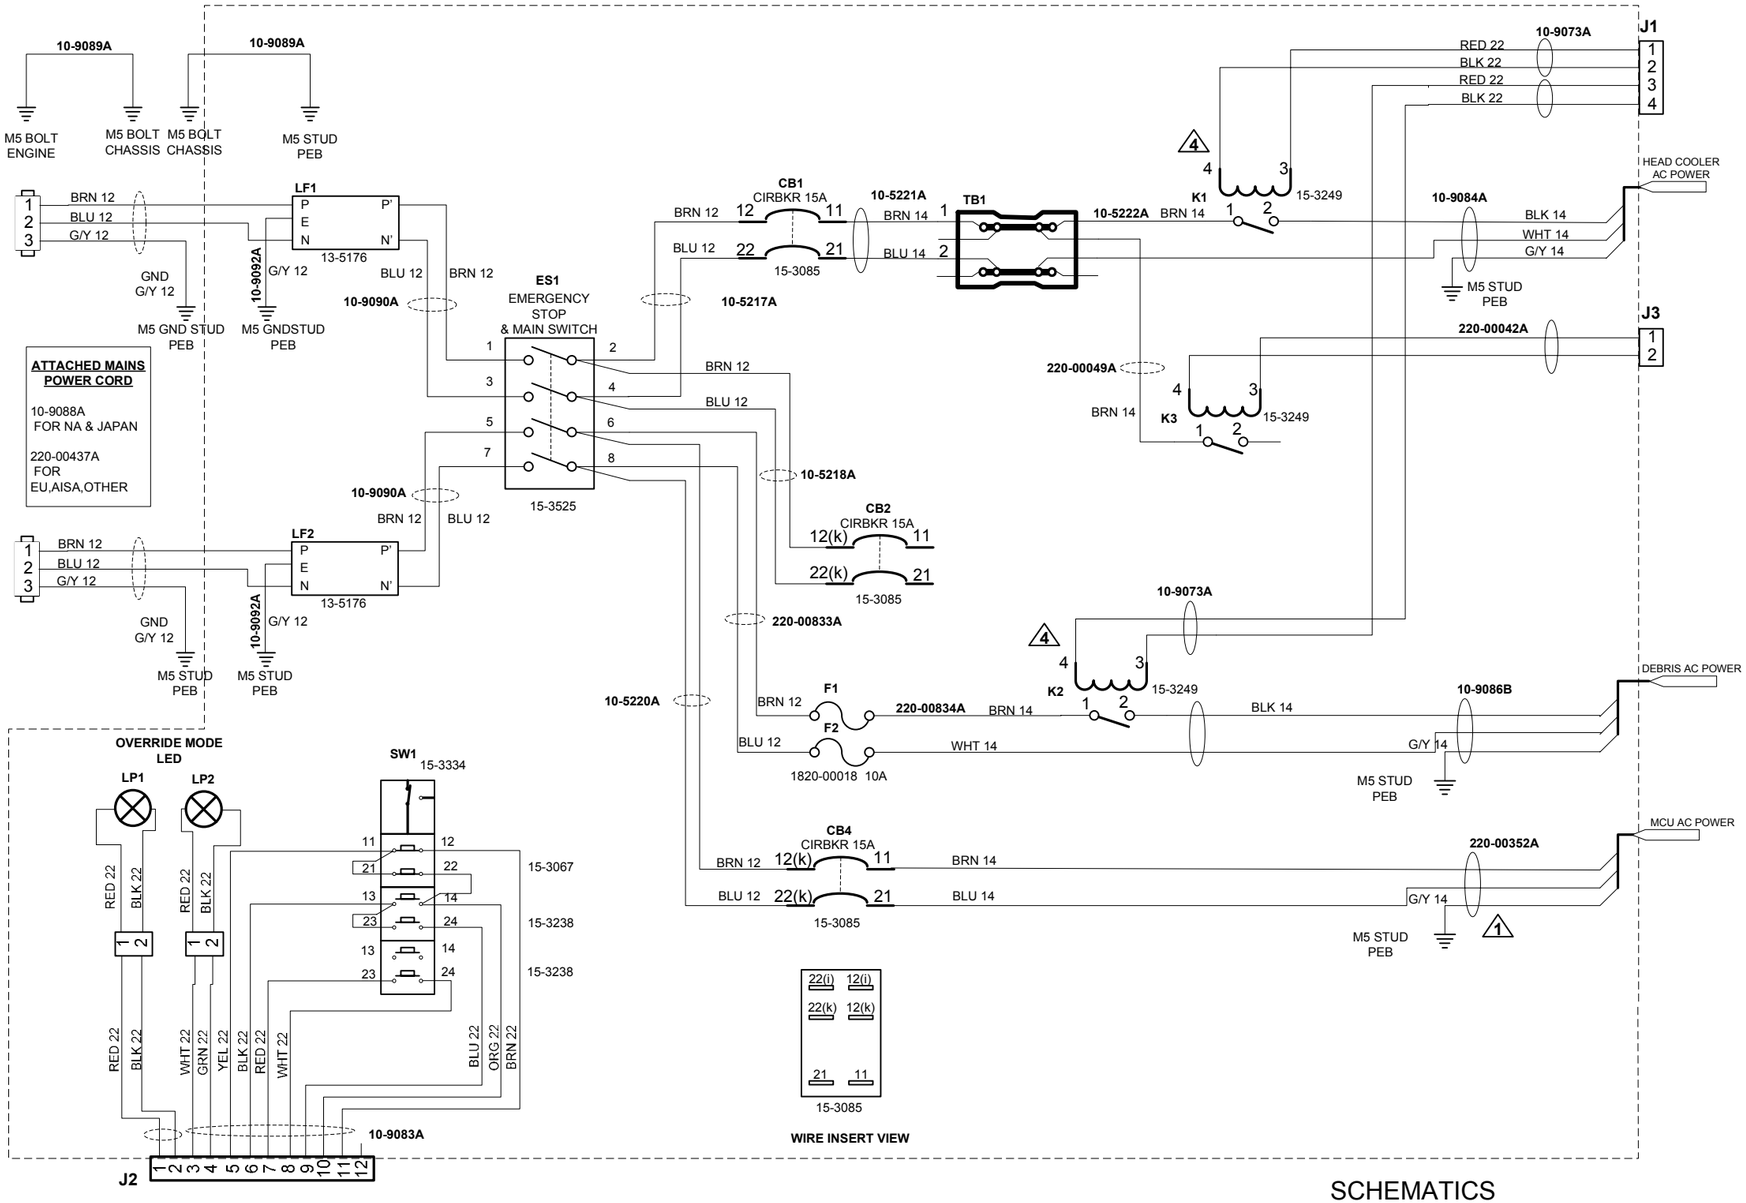



SCHEMATICS

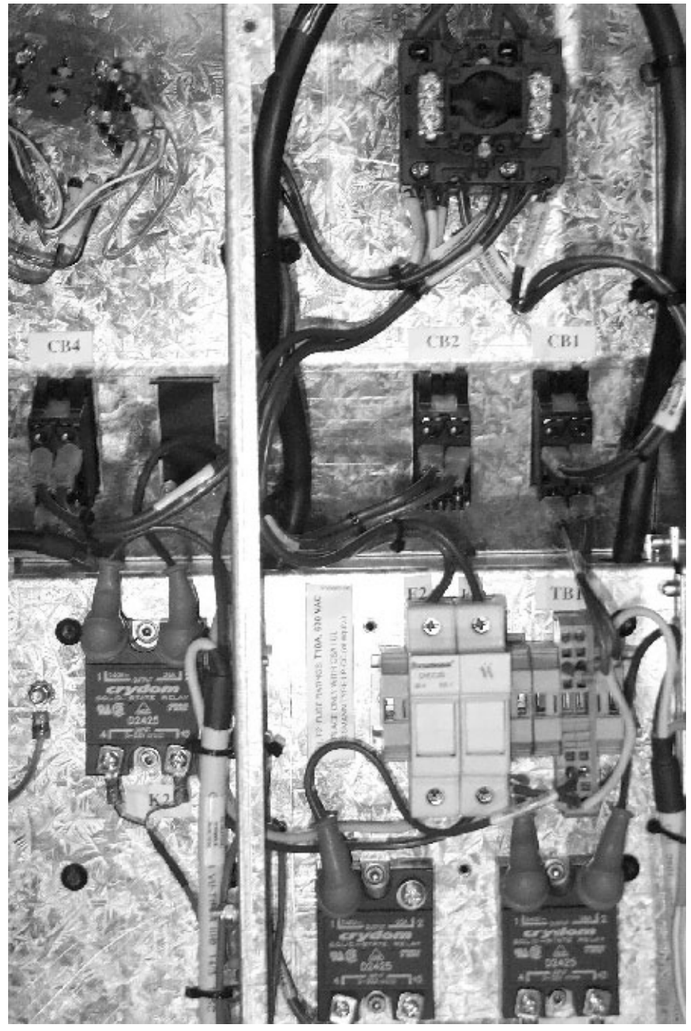


PICTORIAL

## UPGRADE INSTRUCTION

1. PULL OUT WIRE CONNECTION OF 10-5219A FROM CB3
2. CUT THE PUSH_ON TERMINALS FROM 10-5219A, AND STRIP OFF THE WIRE JACKET FOR 10mm AT THE WIRE ENDS. RE-LABEL THIS WIRES TO BE 220-00833A WITH STICKER (74-3003). CONNECT BROWN WIRE OF THE NEW 220-00833A TO F1 (UPPER TERMINAL); AND CONNECT THE BLUE WIRE TO F2.
3. PUSH THE FUSE HOLDER (182-00015) ON THE DIN RAIL, HOLD THE FUSE HOLDER IN POSITION WITH 2 PIECES OF END CLAMPS (16-3992).
4. INSTALL 220-00834A (BROWN WIRE) FROM F1 (LOWER TERMINAL) TO K2 PIN 1.
5. CUT THE PUSH_ON TERMNAL FROM THE WHITE WIRE OF 10-9086A, AND THEN ROUTE THE WHITE WIRE TO F2, AND SCREW TIGHTLY TO THE F2 TERMINAL. RE-LABEL THIS CABLE AS 10-9086B
6. PUT LABEL 382-00685A BESIDE THE FUSE HOLDER
7. LABEL THE FUSE HOLDER AS F1, F2
8. REMOVE CB3 SWITCH FROM THE PANEL. INSTALL 58-0286A TO COVER THE HOLE

PART NUMBER 11-1064A

creo

© COPYRIGHT CREO

DOC,UPGRADE,CA04733,
PED DRBRIS FUSE,MTA

| DESIGNED BY | DRAWN BY | | |
|---|---|---|---|
| PART NO | K.CHENG | | |
| MILLIMETERS UNLESS SPECIFIED | DATE 2004.JUN.27 | SIZE B | SCALE NTS |

| REV | DOC | SHEET | OF |
|---|---|---|---|
| 719 - 00342A - A | AD | 1 | 1 |