
CONFIDENTIAL: PROPERTY OF CREO INC..

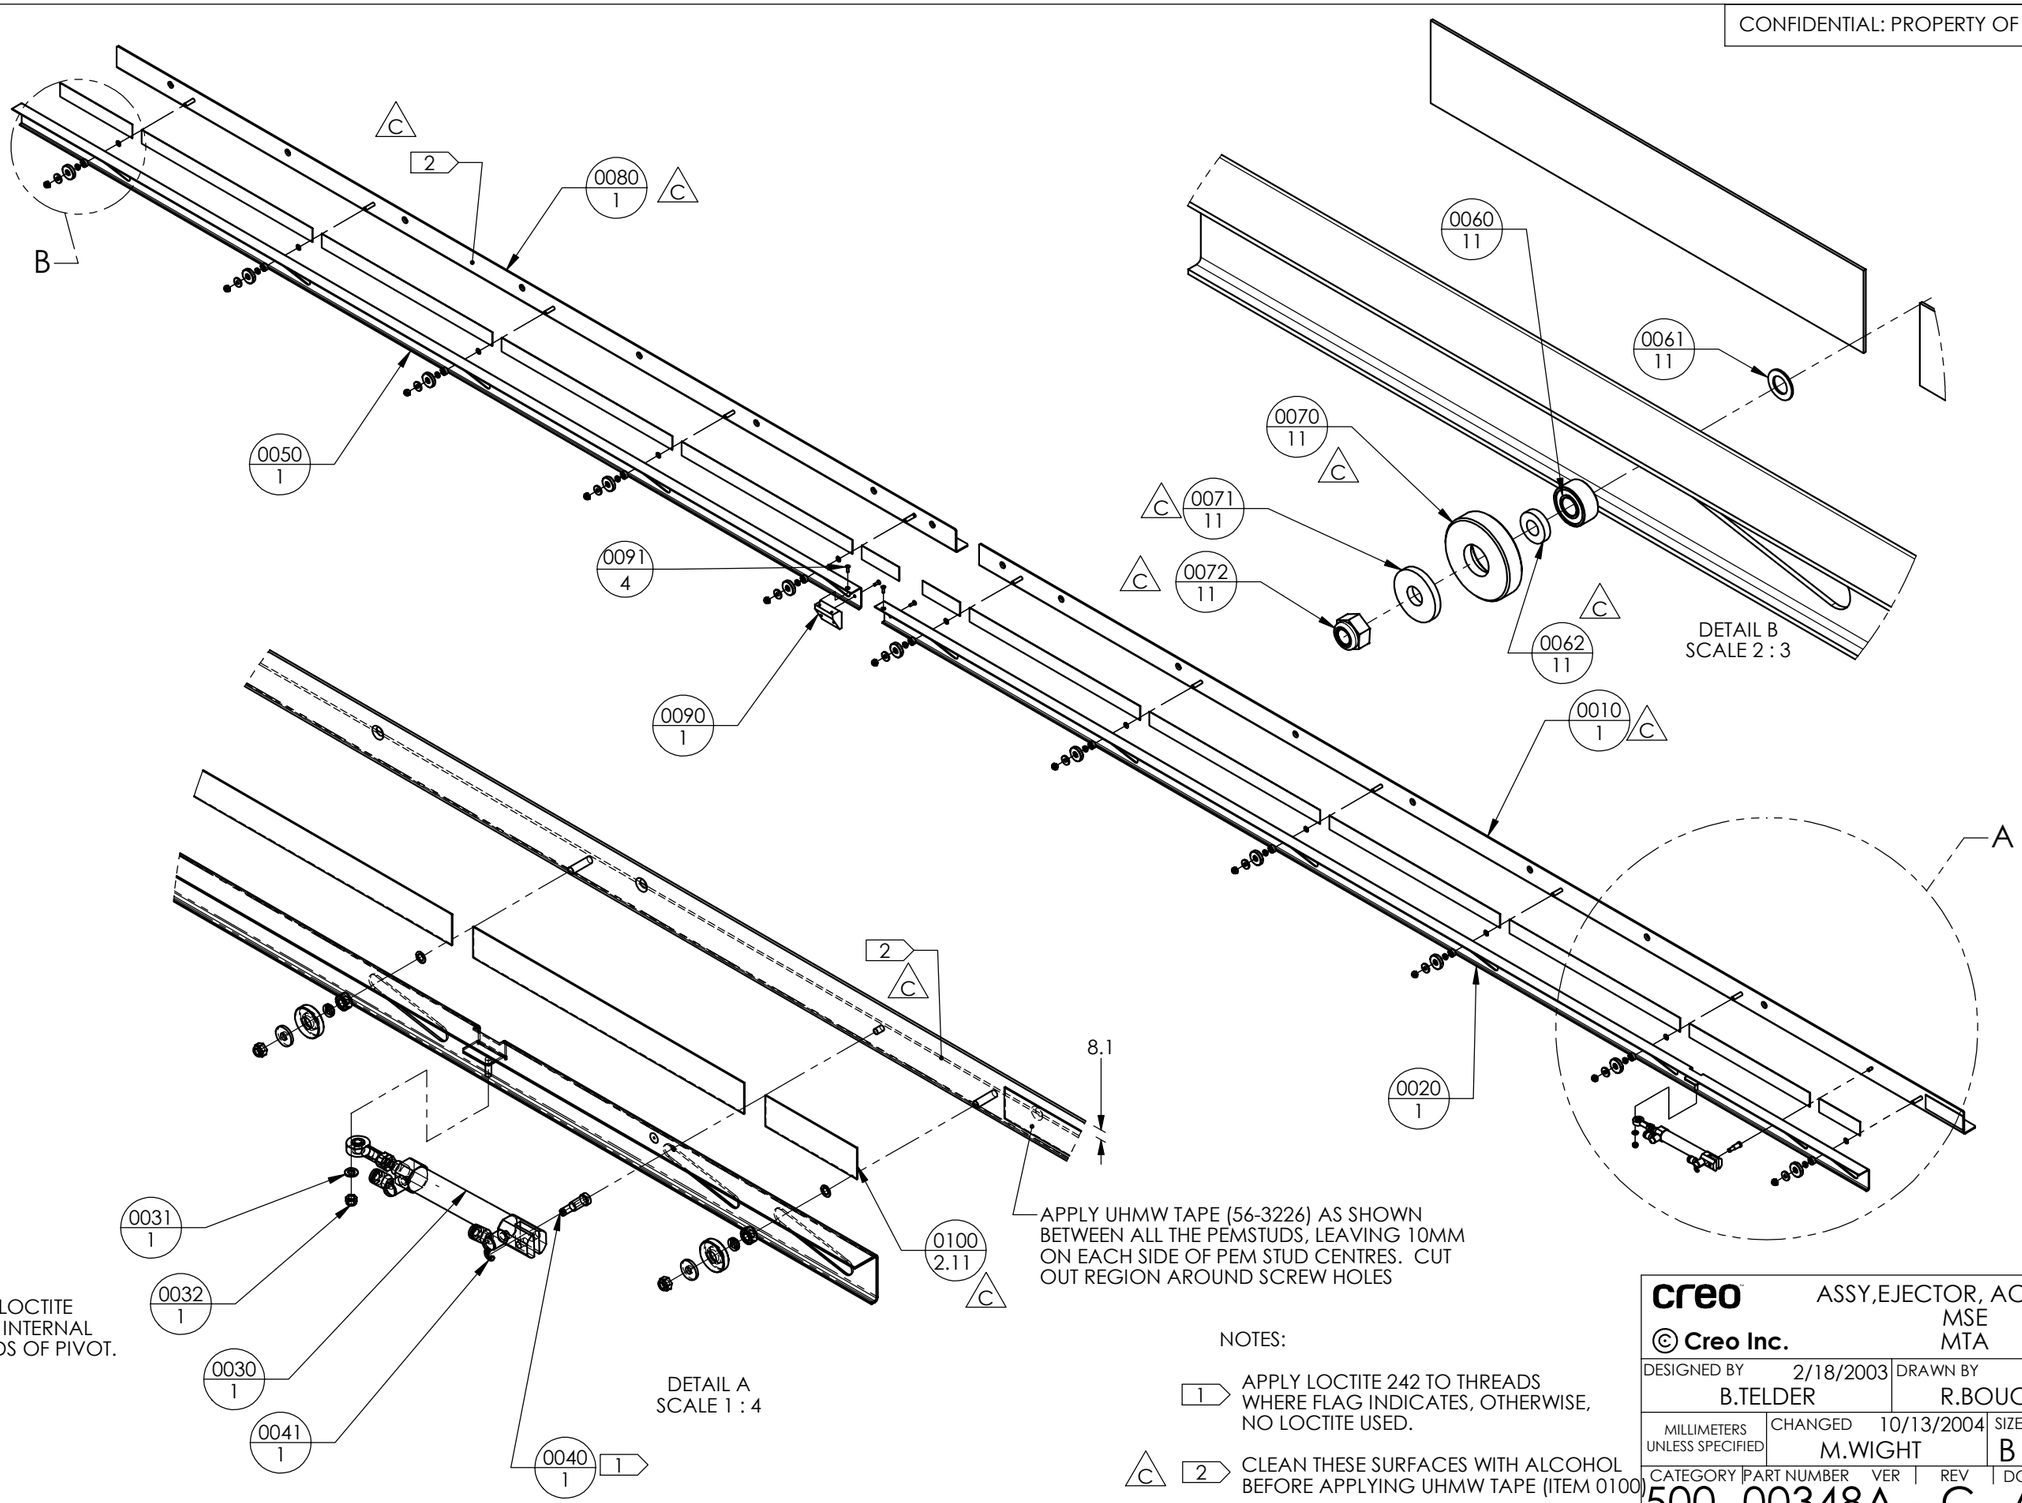

DETAIL B
SCALE 2 : 3

DETAIL A
SCALE 1 : 4

APPLY LOCTITE
242 TO INTERNAL
THREADS OF PIVOT.

APPLY UHMW TAPE (56-3226) AS SHOWN BETWEEN ALL THE PEMSTUDS, LEAVING 10MM ON EACH SIDE OF PEM STUD CENTRES. CUT OUT REGION AROUND SCREW HOLES

NOTES:

1. APPLY LOCTITE 242 TO THREADS WHERE FLAG INDICATES, OTHERWISE, NO LOCTITE USED.
2. CLEAN THESE SURFACES WITH ALCOHOL BEFORE APPLYING UHMW TAPE (ITEM 0100)

creo
© Creo Inc.

ASSY,EJECTOR, ACTUATOR
MSE
MTA

DESIGNED BY		DRAWN BY				
B.TELDER	2/18/2003	R.BOUCHAL	3/24/2003			
MILLIMETERS UNLESS SPECIFIED	CHANGED M.WIGHT	10/13/2004	SIZE B	SCALE 1:9	SHEET 1	
CATEGORY	PART NUMBER	VER	REV	DOC TYPE	OF	
500	-00348A	-	C	AD	1	