


CONFIDENTIAL: PROPERTY OF CREO INC..

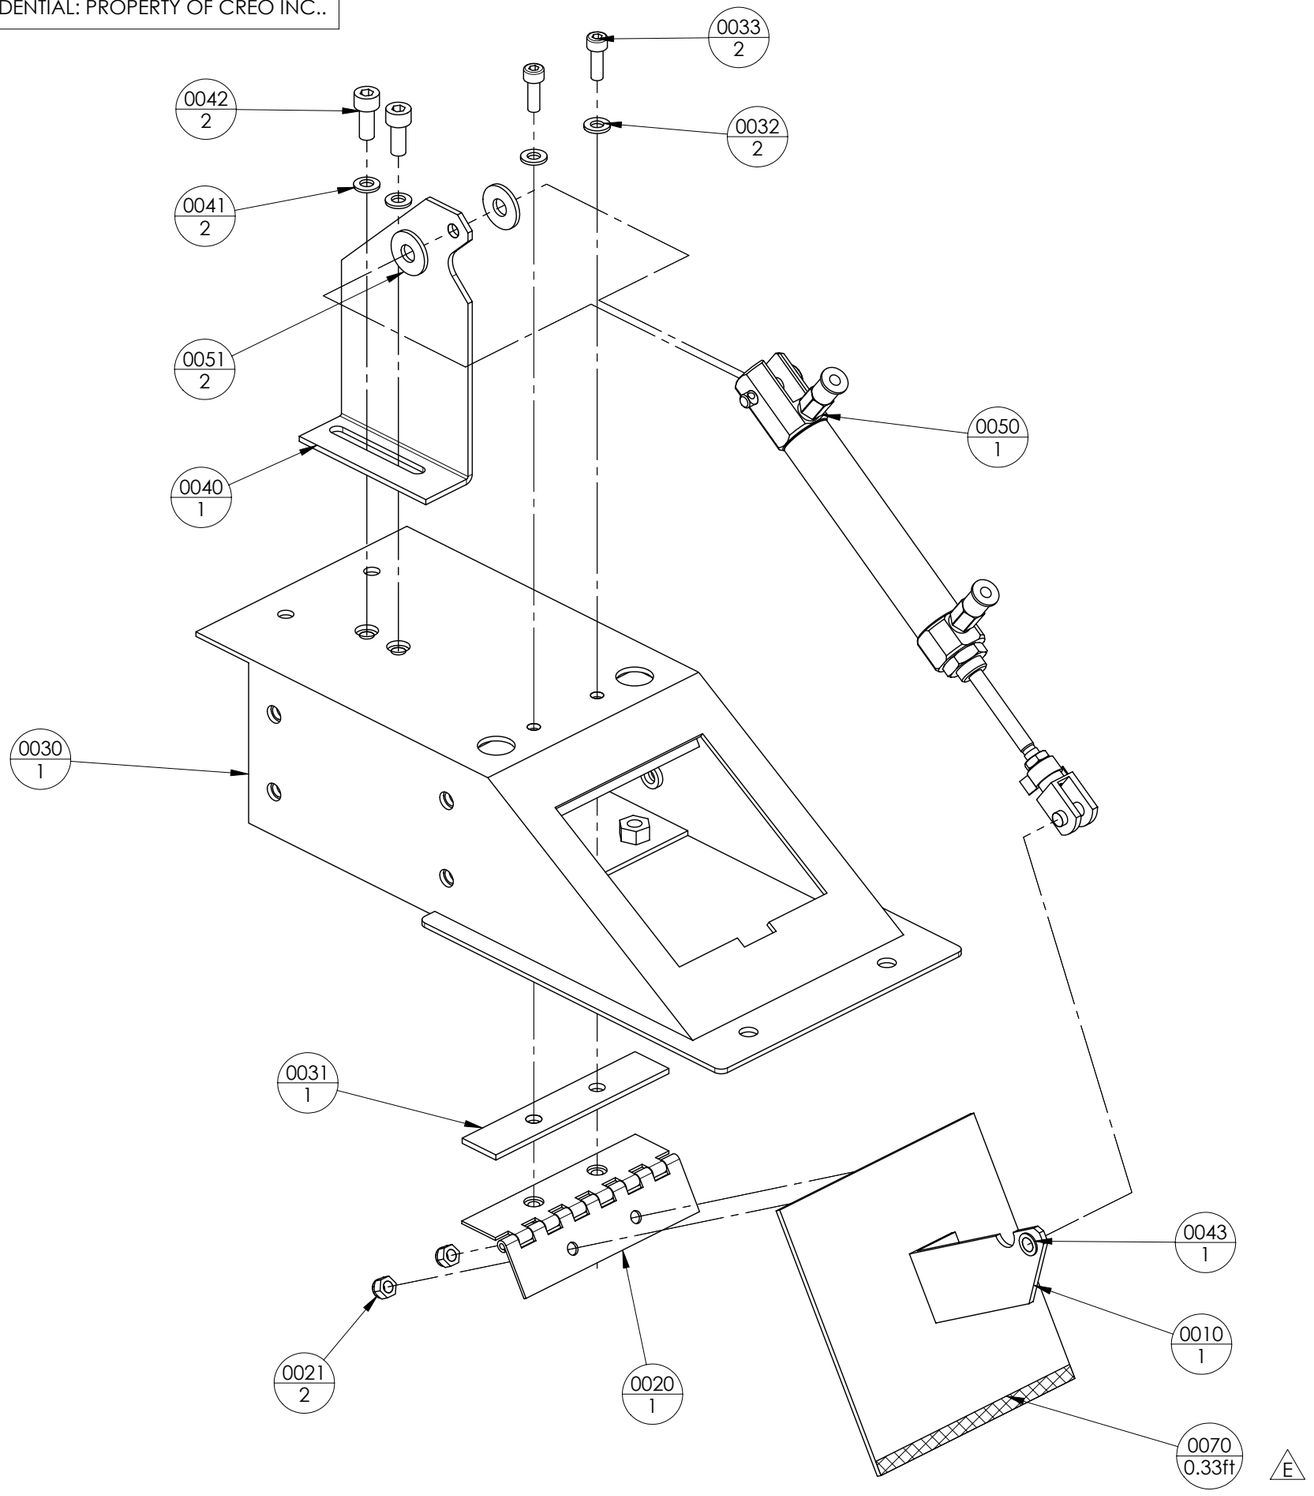

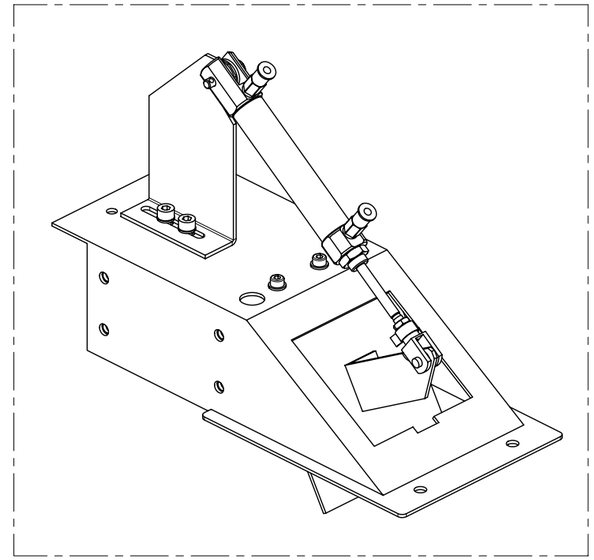

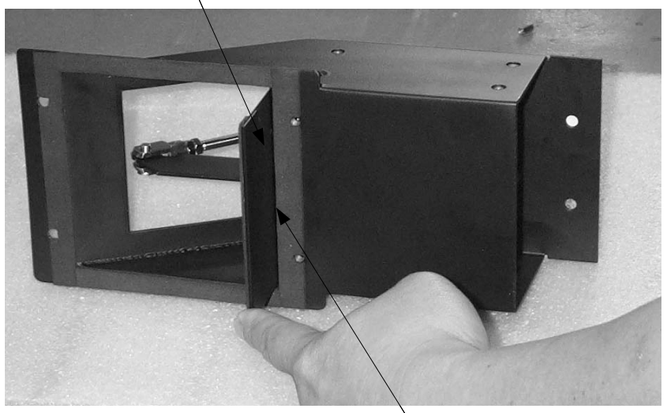

PIC.1

NOTES:
1). ADJUST THE POSITION OF THE BRACKET (ITEM #0040) SUCH THAT THE PLENUM FLAP (DOOR) (ITEM #0010) WILL TOUCH THE EDGE OF THE WINDOW BEFORE THE CYLINDER IS FULLY EXTENDED (PIC.1)
2). MOVE THE PLENUM FLAP IN AND OUT SEVERAL TIMES TO ENSURE THAT IT MOVES WITHOUT ANY INTERFERENCES.

creo

© Creo Inc.

FAN ADAPTOR,OUTER, PLENUM,MCU,MTA

DESIGNED BY	DRAWN BY				
J.GORMAN 2003-May-28	I.PRESS 2003-Jun-18				
MILLIMETERS UNLESS SPECIFIED	CHANGED I.PRESS 2005-May-26	SIZE B	SCALE 1:2	SHEET 1	
CATEGORY	PART NUMBER VER	REV	DOC TYPE	OF	
500	-00845A -	E	AD	1	