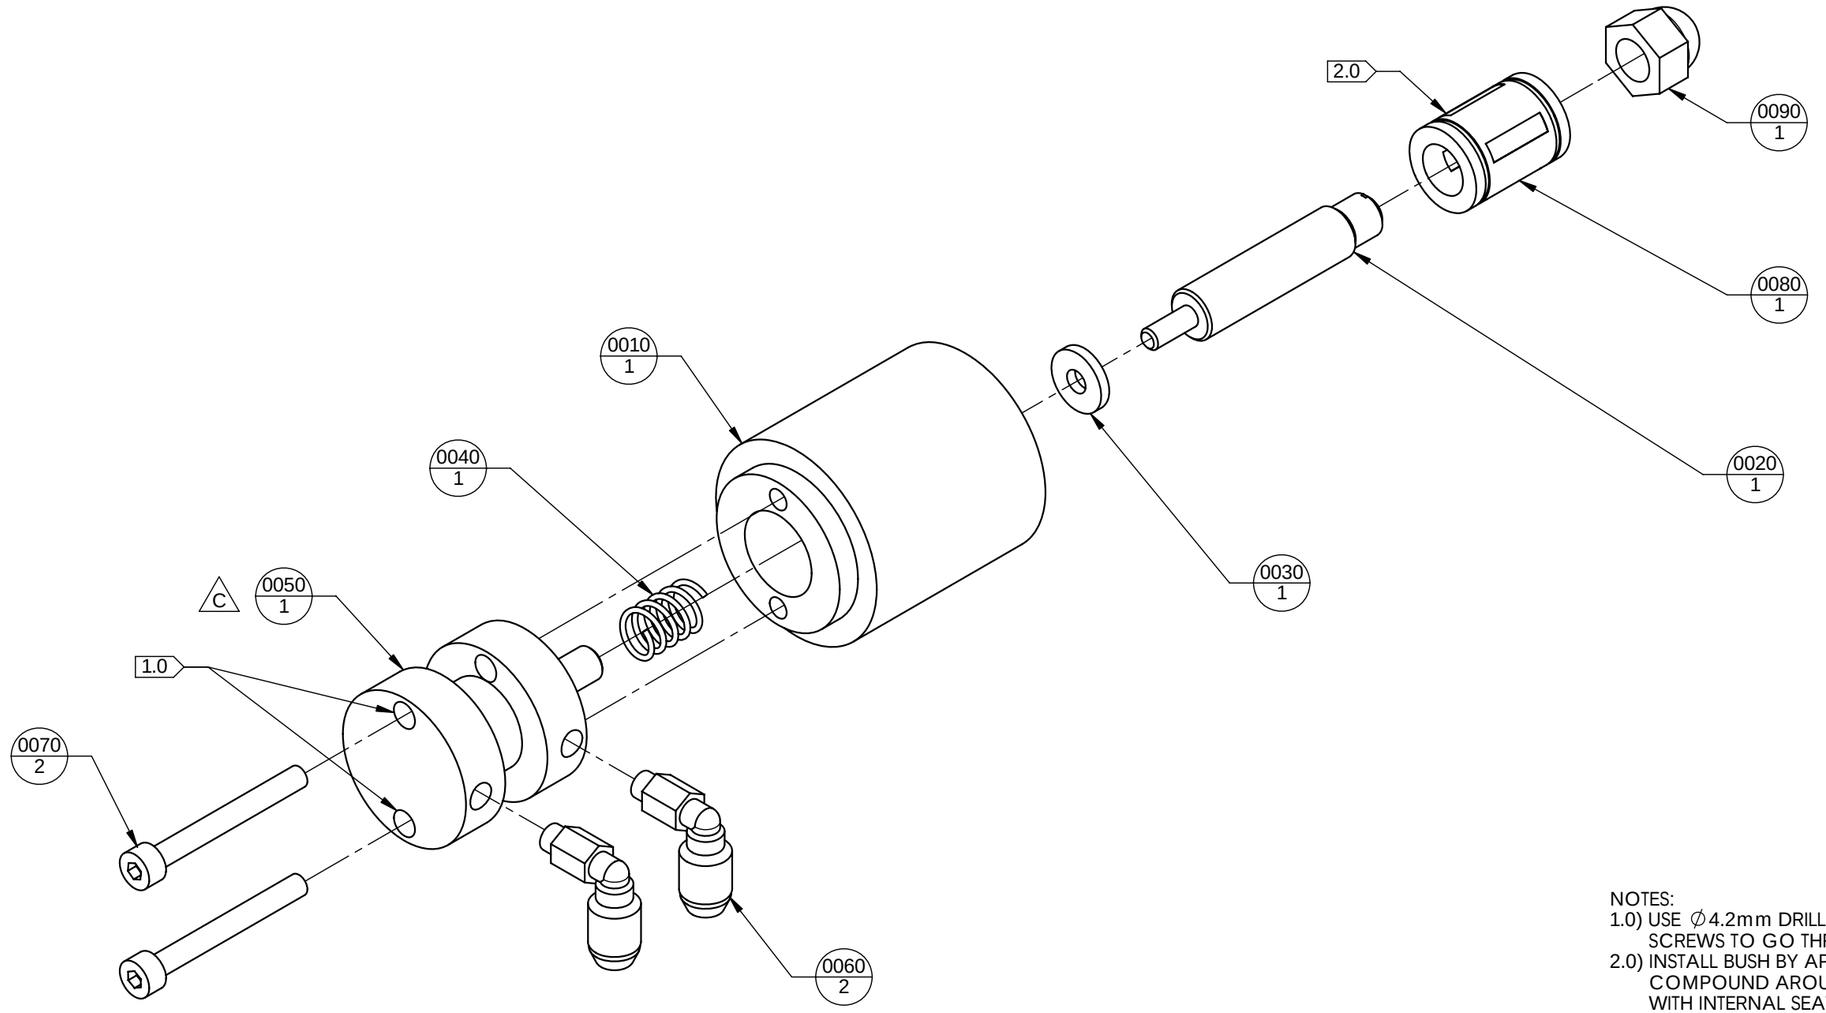


NOTES:
1.0) USE ∅4.2mm DRILL BIT TO DRILL THE HOLES FOR SCREWS TO GO THROUGH.
2.0) INSTALL BUSH BY APPLYING LOCTITE 609 RETAINING COMPOUND AROUND OUTER SURFACE. BUSH TO BE FLUSH WITH INTERNAL SEAT OF LINEAR BAR BLOCK.

C CYL'S P/N CHANGED DUE TO DUPLICATION, NO ACTUAL CHANGE ON ASSY

ASSY, DETENT, PISTON
FLASH COVER
FX1

© 2005 Kodak. All rights reserved.

DESIGNED BY	DRAWN BY					
1998-Oct-14 W. YUEN	1998-Oct-14 I. PRESS					
MILLIMETERS UNLESS SPECIFIED	CHANGED 2005-Nov-15 A. FU	SIZE B	SCALE 1:1	SHEET 1		
CATEGORY	PART NUMBER	VER	REV	DOC TYPE	OF	
50 -	1627A -		C	AD	1	