Attaching Headstock Spindle Labels

Product

ThermoFlex Wide II

Background

Headstock spindle camlocks need to be labeled.

Parts required


Part Number	Part Name	Quantity
382-01348	Label, Camlock Chuck (strip)	1

Tools required


- Utility Knife
- Isopropyl Alcohol

Procedure

1. With an exacto-knife or utility knife, cut the individual numbers from the label strip and carefully cut around the inner circle.

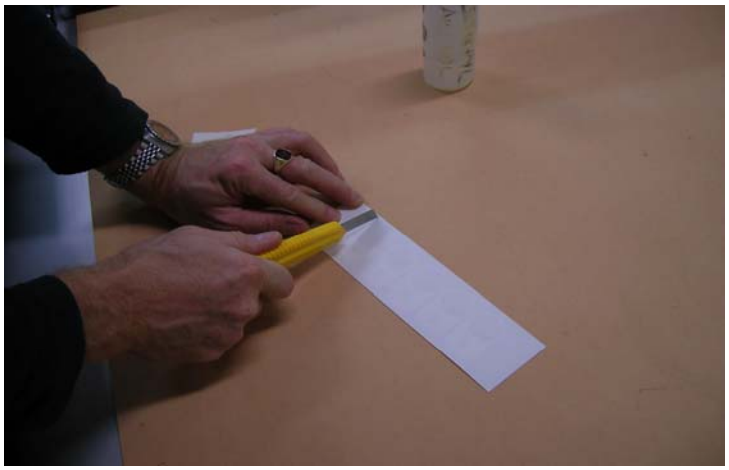


2. Clean the spindle surface with alcohol to remove any grease or oils.

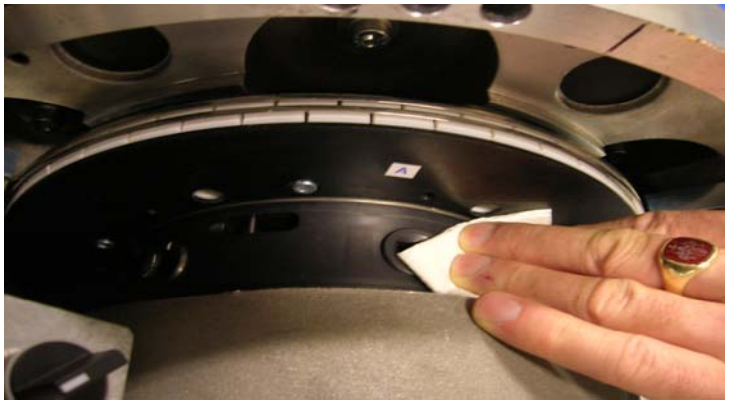


3. Peel off the backing material from label “1” and centre the label around the #1 camlock socket—the first socket below the location pin latch.




4. Press down firmly on the label to ensure that it sticks well to the spindle.

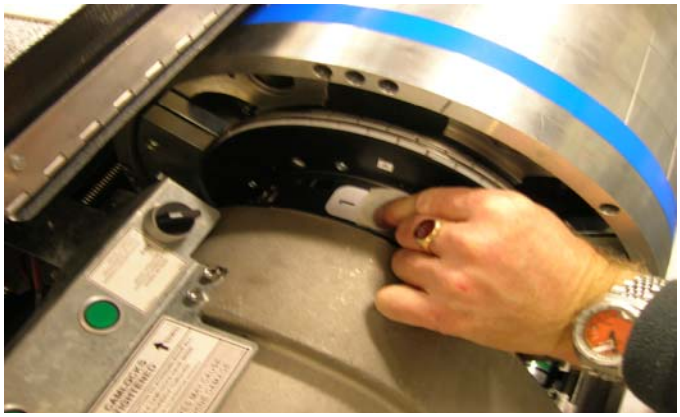

5. Carefully peel off the label’s cover material. Firmly press the label onto the spindle surface again to maintain good adhesion to the spindle.

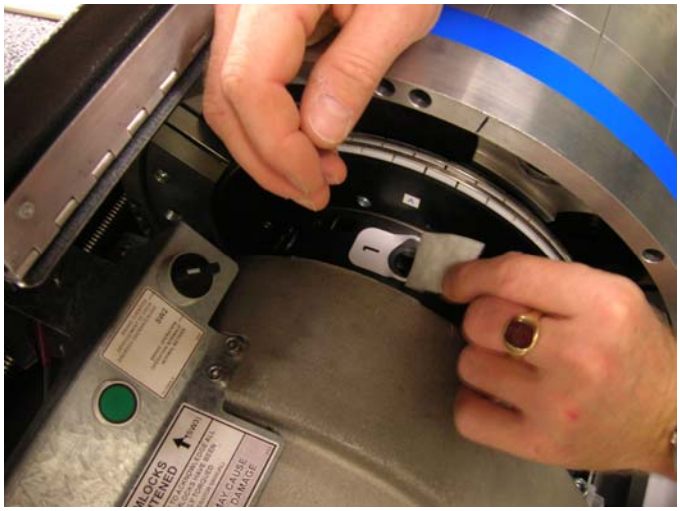

6. Using the same method of applying label #1, apply all remaining label numbers at the locations shown below.

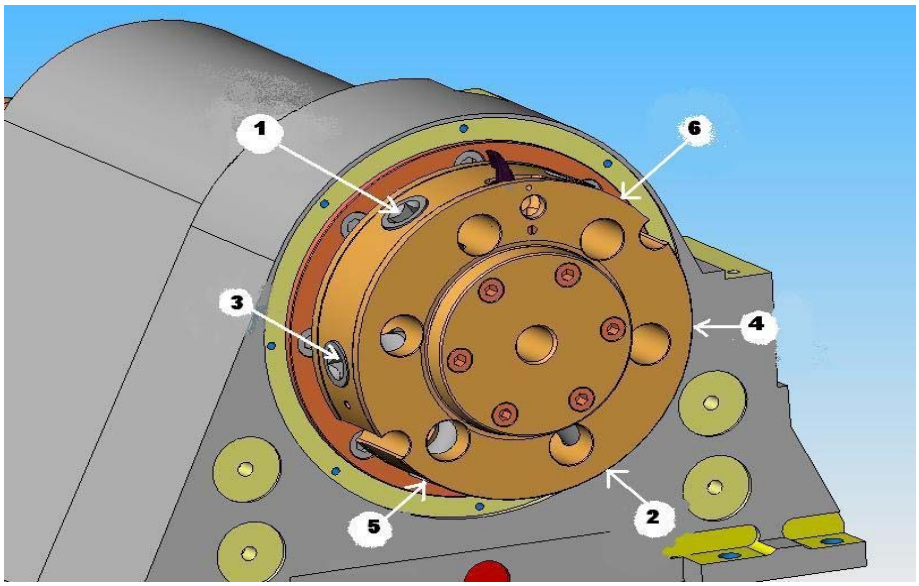

Technical contact	Mike Kegel
Date submitted	01 Nov 2005
Last updated	02 Nov 2005