Trendsetter NEWS (MCE)

Rear Foot Floor Anchor Kit Installation

Document Number
719-00635A-B-PR01

01 Mar 2006

Copyright 2006 Kodak. All rights reserved.

Revision History

Revision	Date	Author	Comments
A	06 Feb 2006	Henry Ho	First draft
B	24 Feb 2006	Henry Ho	Per ECO CA09315

Trendsetter NEWS (MCE)
Rear Foot Floor Anchor Kit Installation

CONTENTS

Revision History i

1. Background 1

2. Parts Required 1

3. Installation Procedure 1

1. BACKGROUND

When a *Trendsetter* NEWS platesetter is used with a third-party plate preloader, it is important that the platesetter does not move from its original installation position. If the platesetter is pushed out of position—for example, when the user engages or disengages the preloader—this can result in the preloader dropping the plates in the wrong location on the platesetter's plate ledge, causing plate flyoff problems.

Kit #518-01539A, containing two rear foot floor anchor brackets and mounting hardware, addresses this issue by securing the *Trendsetter* NEWS platesetter in its original installation position when a third-party plate preloader is used.

2. PARTS REQUIRED

- 518-01539A: *Trendsetter* NEWS rear foot floor anchor bracket kit

  This kit contains:

  - 2 × 252-08904A: Rear foot floor anchor bracket
  - 4 × 300-00540: 0.5-in. × 2.25-in. bolt and hex sleeve anchor, steel plated

3. INSTALLATION PROCEDURE

Note: The rear foot anchor kit is to be installed at a customer site only after the preloader and the *Trendsetter* NEWS platesetter have been completely installed and situated in their proper locations.

1. Slide the anchor brackets, part number 252-08904A, onto the platesetter's rear feet, pushing the brackets' slots all the way against the rear feet's threaded mounting shafts. See Figure 1.

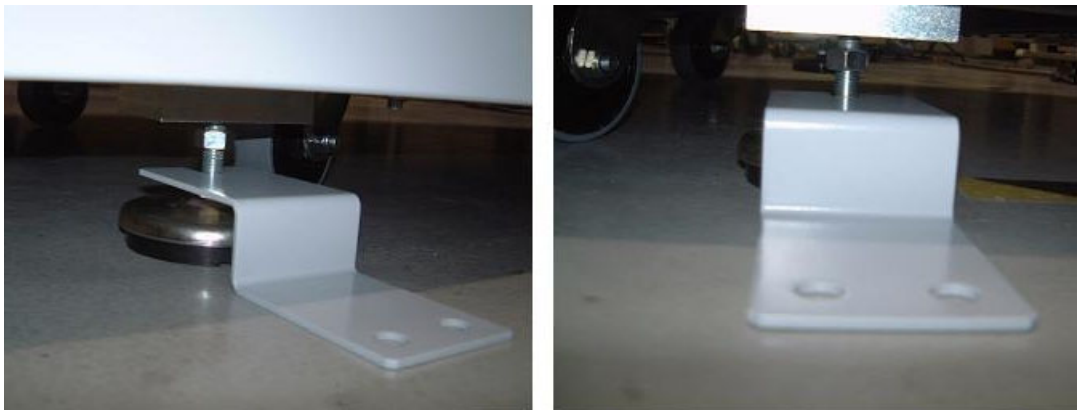


Figure 1: Anchor brackets with slots pushed all the way against threaded shafts of feet

2. Position the floor anchor brackets so their sides are at right angles to the back panels of the platesetter. See **Error! Reference source not found.**.

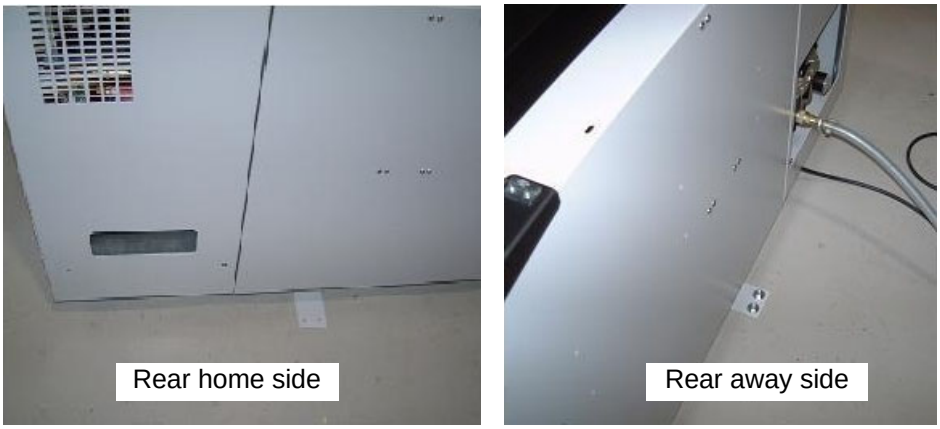


Figure 2: Anchor brackets at right angles to rear of platesetter

3. With the two anchor brackets positioned properly, mark the centers of the mounting holes on the floor. See Figure 3 for dimensions if needed.

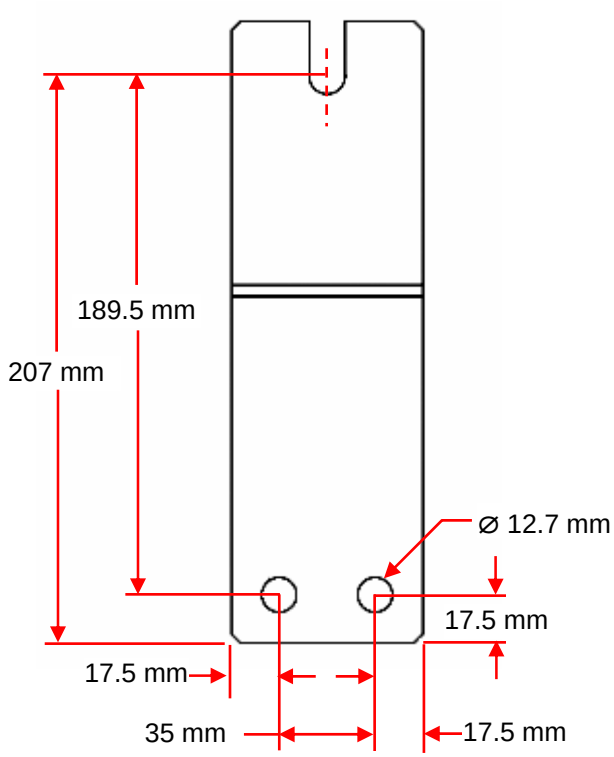


Figure 3: Rear foot floor anchor bracket (252-08904A) dimensions

4. Drill four 0.5-in. diameter holes, 60 to 70 mm deep, at the marked locations on the floor.

5. Insert the four 0.5-in. × 2.25-in. anchor bolts, part number 300-00540, into the drilled holes. The threaded ends of the anchor bolts should point upwards and protrude slightly above floor level.

6. Lock the rear foot anchor brackets onto the floor using the anchor bolts and the supplied washers and nuts.