
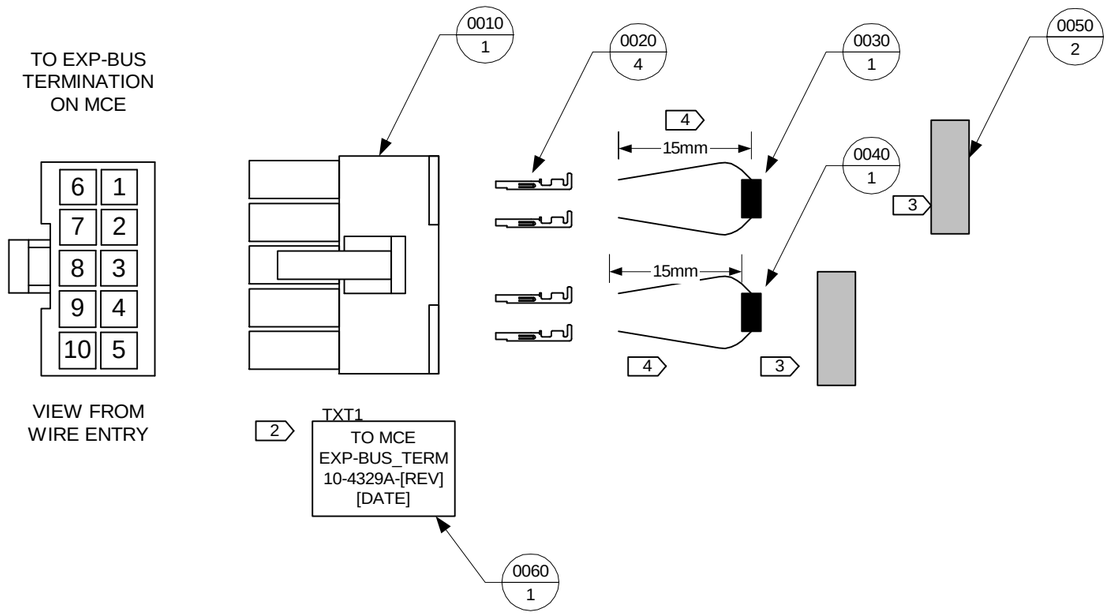


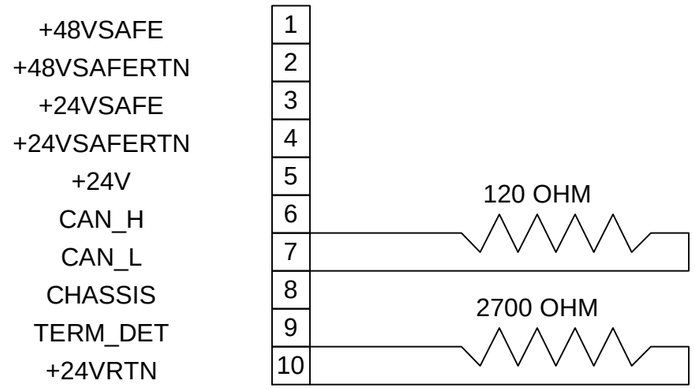

NOTES:

1. 0010 / 1 — ITEM # / QUANTITY #
2. PLACE LABEL ON CONNECTOR
3. AFTER RESISTOR HAS BEEN CRIMPED TO PINS BUT BEFORE INSERTING INTO CONNECTOR, PUT HEAT-SHRINK TUBE ON RESISTOR BODY AND LEADS
4. TRIM RESISTOR LEADS TO 15mm.

REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY
R2	E2	D2	B2	A2
E	D466	MAR.31, 2000	M. ZHANG	M. ZHANG

CREO

©COPYRIGHT CREO PRODUCTS INC.

EXP-BUS TERM(MCE)
Expansion Bus Terminator
Trendsetter 2630

DESIGNED BY	DRAWN BY			
A.Booth	A.Booth			
MILLIMETERS UNLESS SPECIFIED	DATE	SIZE	SCALE	
	Oct. 29, 1999	B	NTS	
PART NO.	REV	DOC	SHEET	OF
10-4329A – E , AD , 1 , 1				